Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NEWBULIG KZ-D6QT-BG

NEWBULIG 6.34QT Air Fryer Instruction Manual

Model: KZ-D6QT-BG

1. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

2. Product Overview

The NEWBULIG 6.34QT Air Fryer is designed for efficient and healthy cooking using rapid air circulation technology. It features a visual window to monitor cooking progress without opening the basket, a digital touchscreen control panel, and a non-stick, dishwasher-safe basket.

Components

- Main Unit with Heating Element and Fan
- Removable Air Frying Basket
- Crisper Plate
- Digital Touchscreen Control Panel
- Visual Cooking Window
- Power Cord



Image: The NEWBULIG 6.34QT Air Fryer, showcasing its beige exterior, black handle, and visual cooking window.



Image: Exploded view of the air fryer showing the main unit, removable basket, and crisper plate, along with product dimensions.

3. Setup

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the air fryer.
2. **Clean:** Wash the air frying basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 4 inches (10 cm) of clear space around the back and sides of the appliance to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) to eliminate any manufacturing odors. A slight odor may be present, which is normal.

4. Operating Instructions

Control Panel

The air fryer features a digital touchscreen control panel for easy operation. The panel includes preset cooking functions, temperature and time adjustments, and a start/cancel button.



Image: Detailed view of the digital touchscreen control panel, showing various preset icons and temperature/time display.

Basic Operation

1. **Prepare Food:** Place your food in the air frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket back into the air fryer until it clicks into place.
3. **Power On:** Press the Power button to turn on the appliance.
4. **Select Function:** Choose a preset cooking function (e.g., Fries, Chicken, Roast) by tapping the corresponding icon, or manually set the temperature and time using the '+' and '-' buttons. The temperature range is 99°F to 400°F.
5. **Start Cooking:** Press the Start/Pause button to begin cooking.
6. **Monitor Progress:** Utilize the visual cooking window to observe your food without interrupting the cooking cycle.
7. **Shake/Flip (Optional):** For some foods, you may need to shake or flip the contents of the basket halfway through cooking. The air fryer may beep to remind you. Carefully remove the basket, shake, and reinsert.
8. **Completion:** The air fryer will beep when the cooking cycle is complete and automatically shut off.
9. **Remove Food:** Carefully pull out the basket and transfer the cooked food to a serving plate. Use heat-resistant tongs.



Image: Illustration of the 360° rapid air circulation technology inside the air fryer, showing hot air flow around food.

Preset Functions

The air fryer includes multiple preset modes for common dishes, simplifying the cooking process. These include:

- Air Fry
- Roast
- Bake
- Reheat
- Dehydrate
- Chicken
- Fries
- Steam
- Custard Tart
- Wings
- Seafood
- Vegetables



Image: The control panel displaying various cooking functions and fan speed indicators.

5. Cooking Guide

The following table provides general guidelines for cooking various foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispness. Always use a food thermometer to ensure food is cooked to a safe internal temperature.

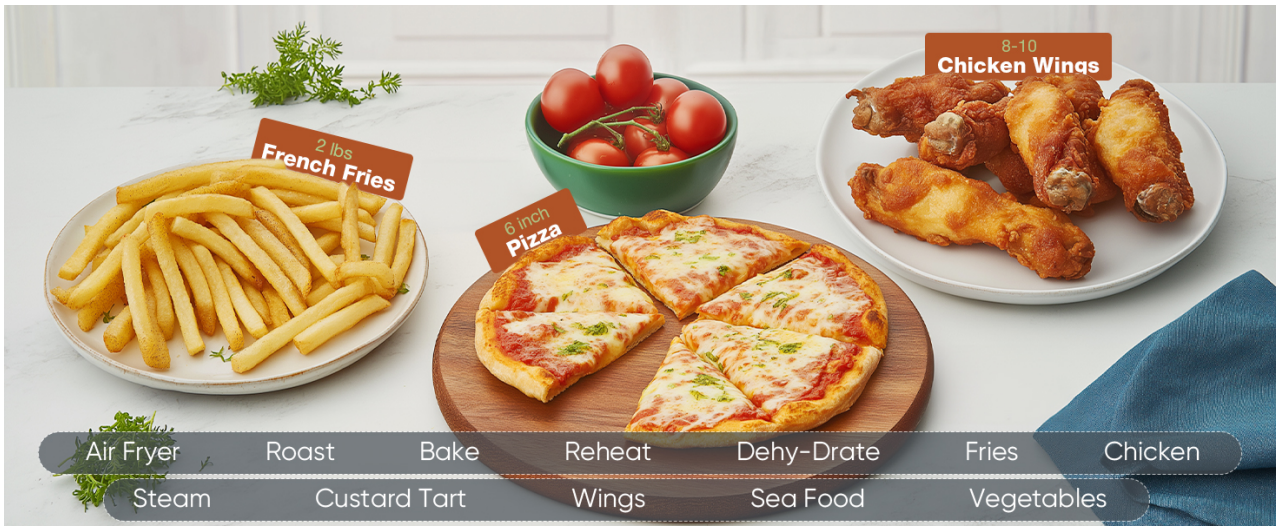


Image: Various cooked foods like french fries, pizza, and chicken wings, illustrating the air fryer's capacity.

Food Item	Temperature	Time	Notes
French Fries (frozen)	380°F (195°C)	15-20 min	Shake basket halfway.
Chicken Wings	375°F (190°C)	20-25 min	Flip halfway.
Steak	400°F (200°C)	10-15 min	Flip halfway for even cooking.
Fish Fillets	350°F (175°C)	12-18 min	Cooking time depends on thickness.
Vegetables (broccoli, carrots)	375°F (190°C)	10-15 min	Toss with a little oil.
Whole Chicken (3-5 lbs)	360°F (180°C)	45-60 min	Check internal temperature (165°F/74°C).

6. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** The non-stick air frying basket and crisper plate are fully dishwasher compatible. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. Avoid using metal utensils or abrasive cleaning materials.
3. **Interior:** Wipe the interior of the appliance with a damp cloth or non-abrasive sponge. For stubborn food residue, use a mild dish soap. Do not immerse the main unit in water.
4. **Exterior:** Clean the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

7. Troubleshooting

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet malfunction; basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully inserted and clicked into place.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, add a small amount of water to the bottom of the outer pan to prevent smoke.
Air fryer does not shut off automatically.	This model is designed to automatically shut off after the timer completes. If it continues to run, press the 'Cancel' button or unplug the unit.	Press the 'Cancel' button on the control panel. If the issue persists, unplug the appliance from the power outlet. Contact customer support if the problem continues.
Food is not crispy.	Too much moisture; basket overfilled; insufficient cooking time/temperature.	Pat food dry before air frying. Cook in smaller batches. Increase cooking time or temperature slightly.

8. Specifications

Technical details for the NEWBULIG 6.34QT Air Fryer.



Image: The air fryer displaying its product dimensions: 10.56"D x 13.6"W x 13"H.

Feature	Specification
Model Number	KZ-D6QT-BG
Capacity	6.34 Quarts
Product Dimensions (D x W x H)	10.56" x 13.6" x 13"
Weight	9.7 pounds
Output Wattage	1700 watts
Voltage	120 volts
Min Temperature Setting	99°F
Max Temperature Setting	400°F
Control Method	Touchscreen Control

Feature	Specification
Material	Polypropylene (PP)
Special Features	Programmable, Temperature Control, Timer, Visual Window

9. Warranty Information

This NEWBULIG Air Fryer is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for warranty claims.

10. Customer Support

For any questions, technical assistance, or warranty inquiries not covered in this manual, please contact NEWBULIG customer support. Refer to the contact information provided in your product packaging or visit the official NEWBULIG website for support options.

Note: No official product videos with 'creator_type: Seller' were found in the provided data to embed.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G6JKB9LW

More documents and user manuals: **https://manuals.plus/**