Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR SS-203QG

VEVOR 4-Gun Safe Instruction Manual

Model: SS-203QG

1. Introduction

This manual provides essential instructions for the safe and proper assembly, operation, and maintenance of your VEVOR 4-Gun Safe, Model SS-203QG. Please read this manual thoroughly before installation and use, and retain it for future reference.
The VEVOR 4-Gun Safe is designed to securely store up to four rifles, pistols, and ammunition. It features a digital touchscreen password lock, emergency key access, an alarm system, and adjustable storage options.



Image: Overview of the VEVOR 4-Gun Safe interior, illustrating storage capacity for rifles, handguns, and ammunition. Note the two handgun pouches and three ammo slots.

2. Important Safety Information

WARNING: Failure to follow these safety instructions may result in serious injury or death.

- Always store firearms unloaded and locked away from children and unauthorized users.
- Keep all keys and access codes in a secure location, inaccessible to children and unauthorized individuals.
- Never store flammable materials or hazardous chemicals inside the safe.

- Ensure the safe is securely mounted to prevent tipping, especially in households with children.
- Do not attempt to force open the safe if the lock malfunctions. Refer to the troubleshooting section.



Image: Illustration of childproof security, showing the importance of keeping firearms secured away from children.

3. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact VEVOR customer support.

- 1 x Back Door Panel
- 1 x Front Door Panel
- 1 x Left Door Panel
- 1 x Right Door Panel
- 1 x Top Panel
- Emergency Keys (2)
- Mounting Hardware (Screws, Anchors)
- Screwdriver
- Gloves (Pair)
- User Manual (This document)

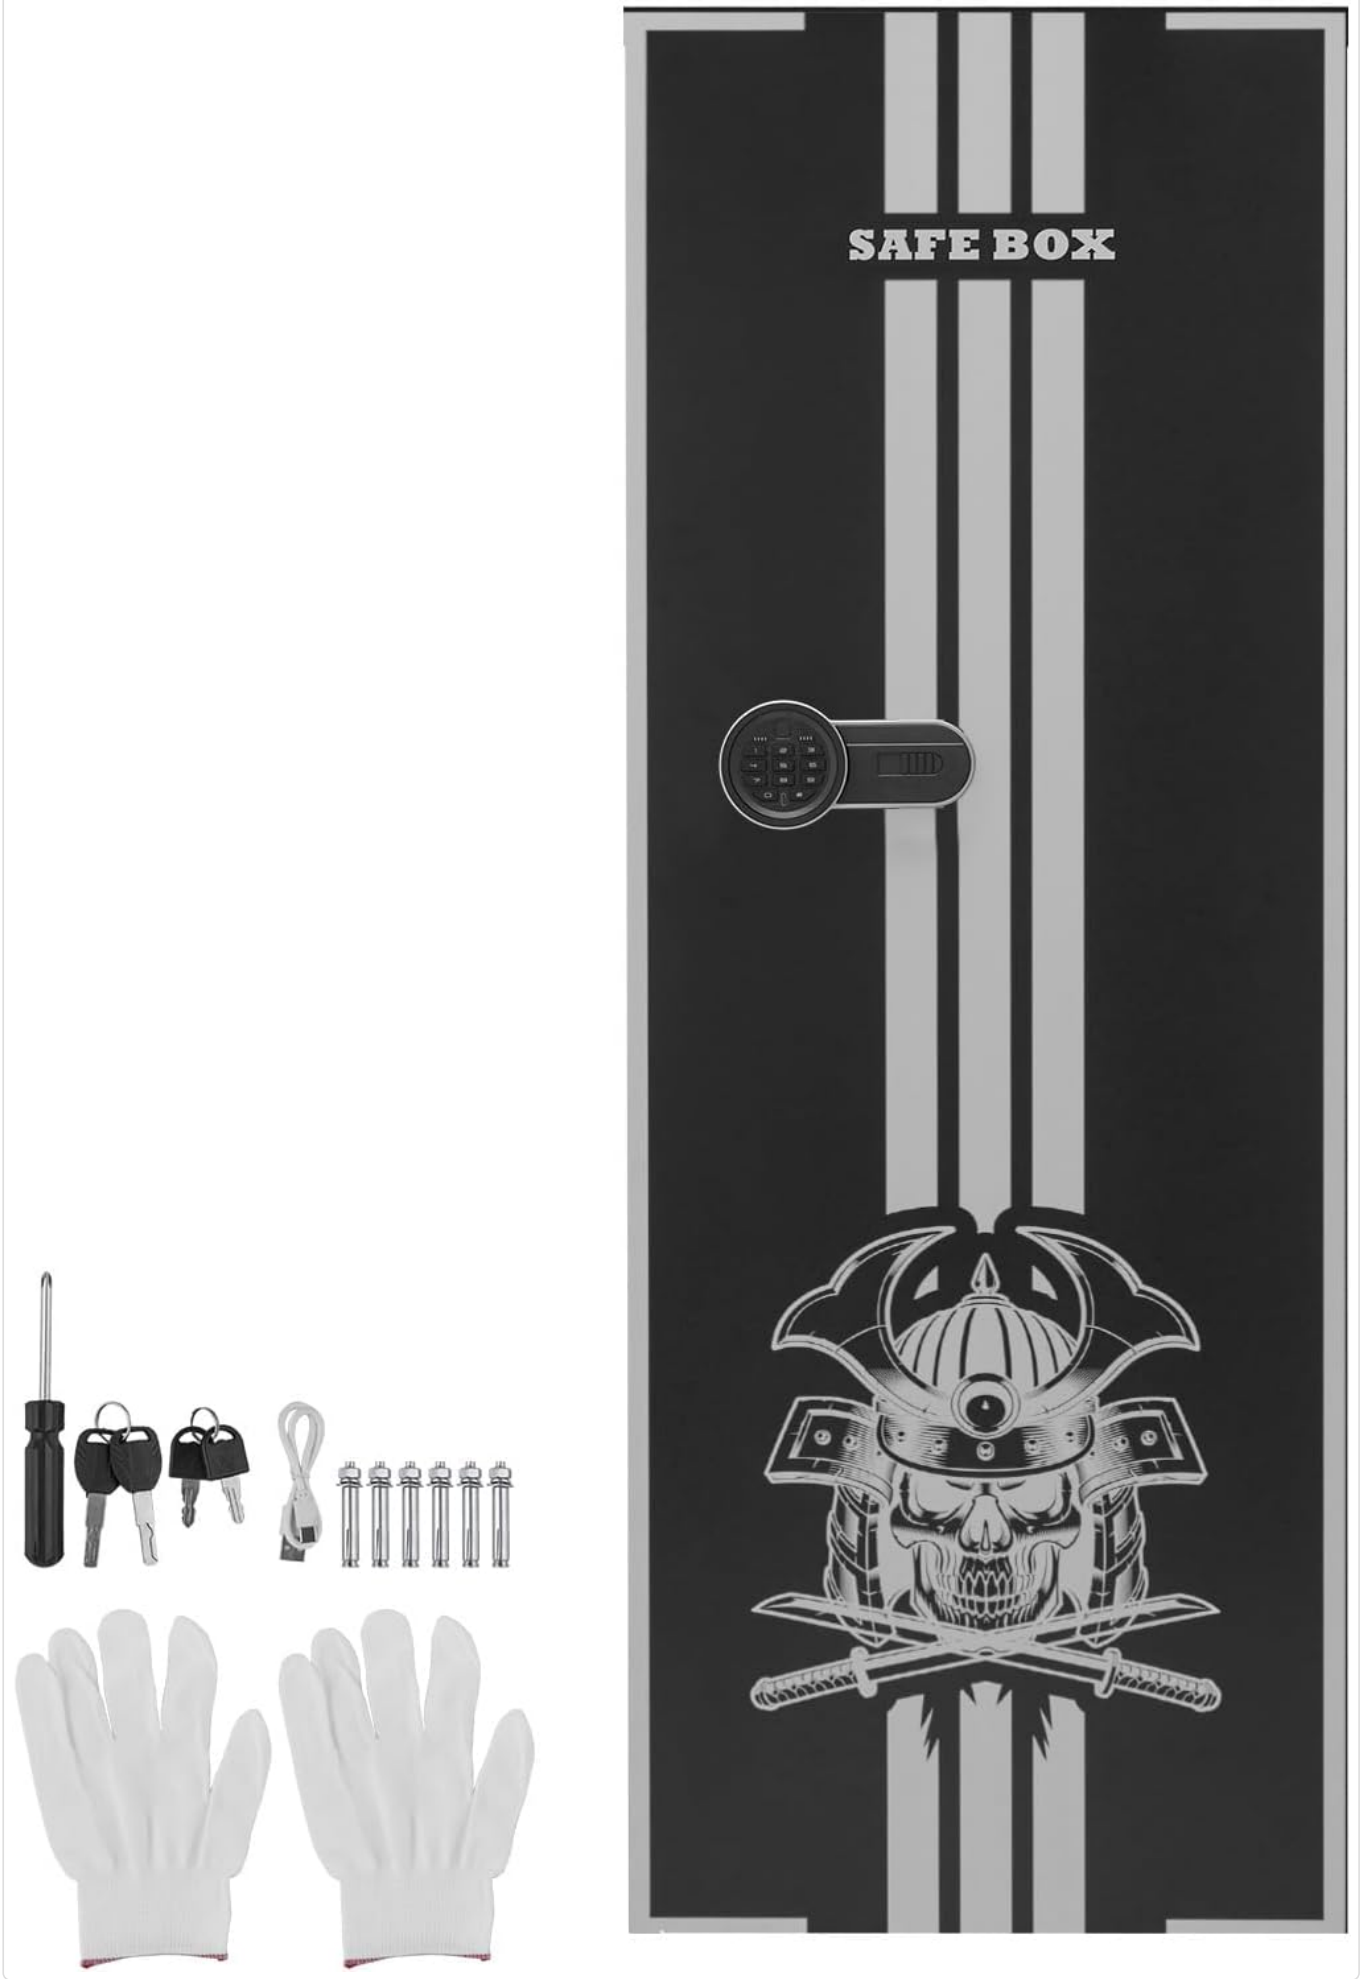


Image: All components included in the package, such as the safe panels, keys, mounting hardware, screwdriver, and gloves.

4. Assembly and Setup

The VEVOR 4-Gun Safe requires self-assembly. Follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Assemble Panels:** Connect the back, front, left, right, and top panels according to the diagrams provided. Ensure all screws are tightened securely.
3. **Install Interior Racks:** Place the adjustable gun racks and ammo slots as desired.
4. **Mounting (Recommended):** For maximum security and to prevent tipping, the safe should be wall-mounted.
    - Identify a suitable location on a solid wall.
    - Mark the positions for the pre-drilled mounting holes on the back of the safe onto the wall.
    - Drill pilot holes and insert wall anchors if necessary.
    - Secure the safe to the wall using the provided mounting hardware.
5. **Install Batteries:** Open the battery compartment on the digital lock and insert 4 AA batteries (not included).



Image: Assembly and installation guide, showing panel assembly and secure wall mounting steps.

5. Operating Instructions

5.1 Digital Lock Operation

The safe is equipped with a 9-digit touchscreen password lock. The password can be 3-8 digits long.

1. **Setting Your Password:**
    - With the door open, press the internal reset button (usually a small red button on the inside of the door).
    - Enter your desired 3-8 digit password on the touchscreen.
    - Press the '#' key to confirm. The safe will beep to confirm the new password.
    - Test the new password with the door open before closing it.
2. **Opening the Safe with Password:**
    - Enter your 3-8 digit password on the touchscreen.
    - Press the '#' key. The safe will unlock, and you can turn the handle to open the door.
3. **Auto-Lock Function:** The safe will automatically lock after the door is closed.



Image: Details of the multiple locking system, including the digital password keypad and emergency key access.

5.2 Emergency Key Access

In case of battery depletion or forgotten password, use the emergency keys.

1. Locate the emergency keyhole (usually hidden behind a cover near the digital keypad).
2. Insert the emergency key and turn it to unlock the safe.
3. **Note:** A spare charging box is included for temporary power if batteries are dead and keys are unavailable. Connect it to the external power port on the keypad.

5.3 Alarm System and Silent Mode

The safe features an alarm system for enhanced security.

- **Alarm Trigger:** The system will automatically trigger an audible alarm if:
  - The wrong password is entered 3 consecutive times.
  - The gun cabinet is subjected to impact or violent vibration.
- **Silent Mode:** To disable audible feedback (beeps, alarm) for discreet access:
  - Input "11#" on the touchscreen to activate Silent Mode.
  - Repeat "11#" to deactivate Silent Mode.



Image: Smart Anti-Theft Alarm System features, including wrong access and vibration alarms, and silent mode.

5.4 Quick Access Features

- **150° Wide-Angle Door Opening:** The door opens fully to 150 degrees, providing clear visibility and easy retrieval of firearms.
- **Auto LED Lights:** The interior is equipped with automatic LED lights that illuminate when the door is opened, ensuring visibility in low-light conditions.
    - **Note:** LED lights do not activate when using key access.



Image: Features for quick and hassle-free access, including the 150° door opening and auto LED interior lighting.

6. Maintenance

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace the 4 AA batteries in the digital lock annually, or when the low battery indicator appears. Always use fresh, high-quality batteries.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If it becomes stiff, contact customer support.
- **Door Hinges:** Periodically check door hinges for smooth operation.

7. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with password.	Incorrect password entered. Batteries are low or dead.	Re-enter password carefully. Replace batteries or use emergency key/charging box.
Keypad is unresponsive.	Batteries are completely dead.	Use emergency key or connect the spare charging box with fresh batteries.
Alarm sounds unexpectedly.	Incorrect password attempts. Safe was impacted.	Ensure correct password entry. Check for external impacts. The alarm will reset after correct access.
Door is stiff or difficult to open/close.	Obstruction in the door frame. Misalignment after assembly.	Check for any foreign objects. Re-check assembly steps and ensure all screws are tight.

8. Specifications

Brand	VEVOR
Model Number	SS-203QG
Product Dimensions (D x W x H)	21.1" x 15.2" x 56.3" (536 x 386 x 1430 mm)

Lock Type	Electronic Combination Lock (3-8 digits)
Capacity	4 Long Guns
Material	Q235 Steel + EVA
Item Weight	82.9 lbs (37.6 kg)
Mounting Type	Wall Mount (6 pre-drilled holes on back)
Locking Bolts	2 Solid Locking Bolts, 20 mm Diameter
Door Opening Angle	150°
Battery Type	4 x AA (not included)
Alarm	Audible (Wrong access, Impact)



Image: Dimensional specifications and internal layout of the VEVOR 4-Gun Safe.

9. Warranty and Support

For warranty information, technical support, or to order replacement parts, please contact VEVOR customer service.
Refer to the contact information provided with your purchase or visit the official VEVOR website.
Please have your model number (SS-203QG) and purchase date available when contacting support.

© 2026 VEVOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GGLQ4955

More documents and user manuals: **https://manuals.plus/**