Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Walfront WALFRONT5nyk8ougx3

Walfront Self-Powered Wireless Doorbell Instruction Manual

Model: WALFRONT5nyk8ougx3

1. Introduction

Thank you for choosing the Walfront Self-Powered Wireless Doorbell. This innovative doorbell system offers a convenient, battery-free solution for your home or office. Its self-powered design eliminates the need for batteries, ensuring reliable operation. With easy installation and a wide operating range, this doorbell is suitable for various entry points.

2. Package Contents

Please verify that all components are present in your package:

- 1 x Doorbell Button (Transmitter)
- 1 x Receiver
- 3 x Back Adhesive Pads
- 1 x English Manual

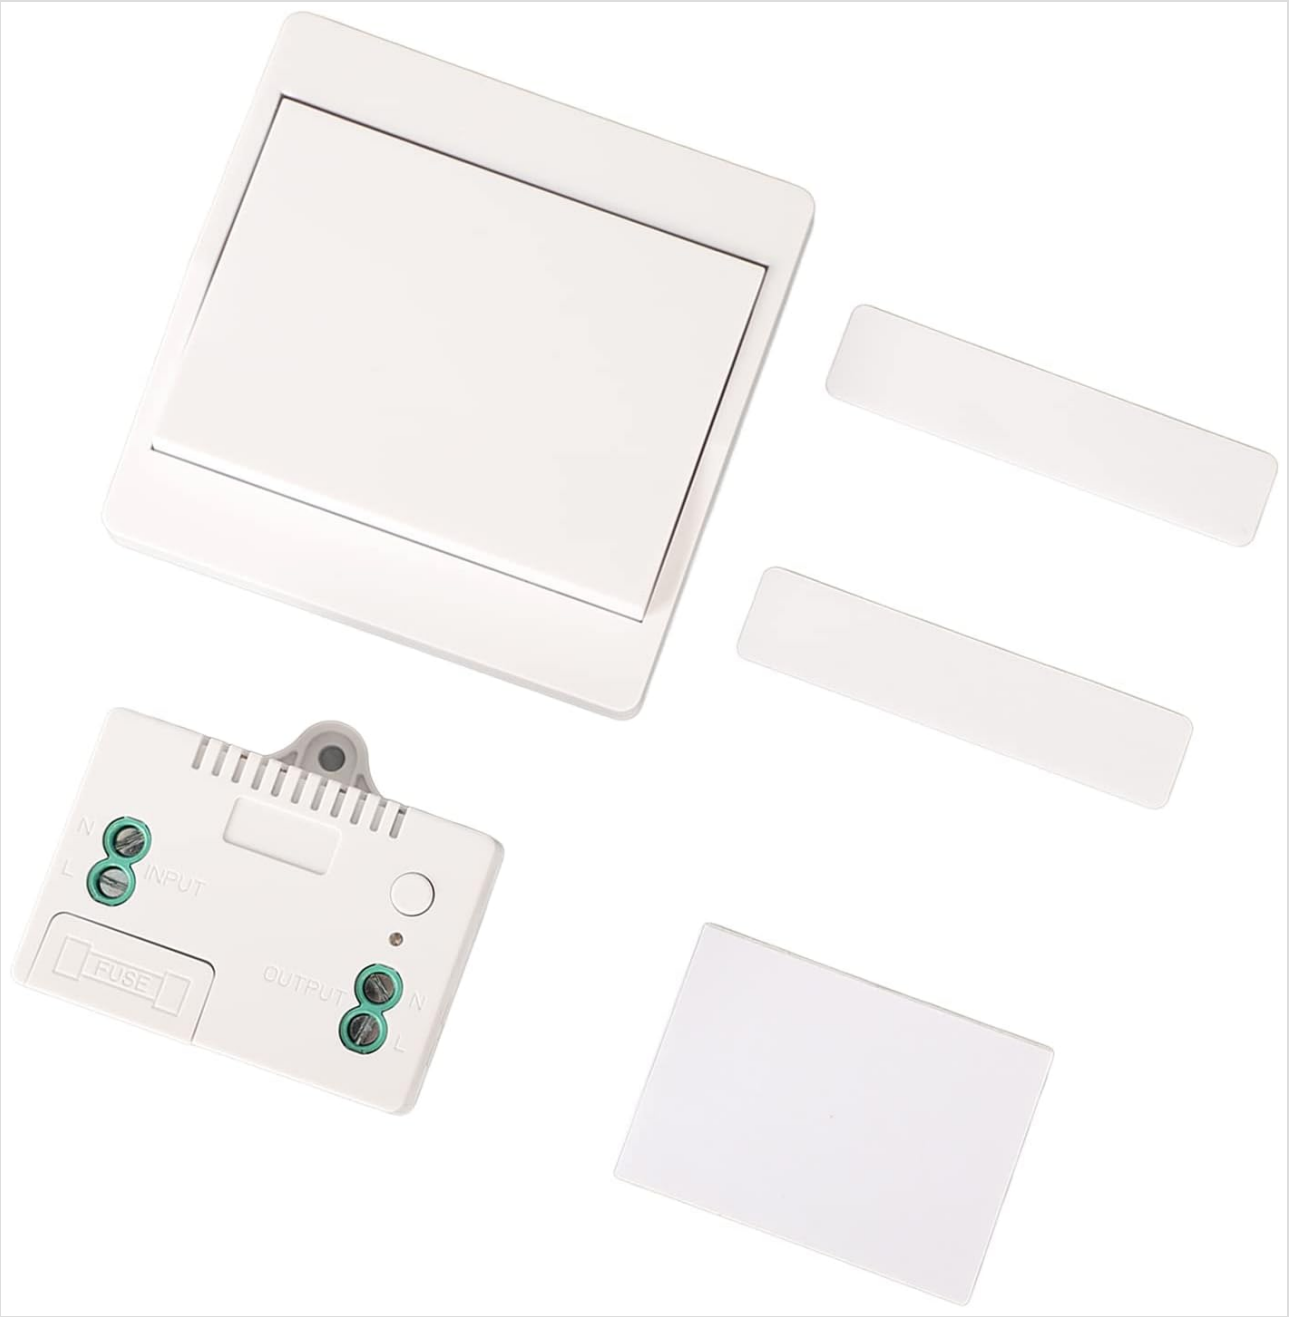

Image 2.1: Overview of the Walfront Self-Powered Wireless Doorbell components.

3. Setup and Installation

The Walfront Self-Powered Wireless Doorbell is designed for quick and easy installation without the need for wiring or drilling.

1. **Prepare the Mounting Surface:** Choose a clean, dry, and smooth surface for both the doorbell button and the receiver. Ensure the location for the doorbell button is easily accessible to visitors and the receiver is placed where it can be heard throughout your desired area.
2. **Install the Doorbell Button:** Peel the protective film from one of the back adhesive pads. Apply the adhesive pad firmly to the back of the doorbell button. Then, press the doorbell button firmly onto your chosen exterior surface (e.g., door frame, wall) for at least 30 seconds to ensure a secure bond.
3. **Install the Receiver:** The receiver can be placed indoors. It typically plugs into a standard wall outlet. Ensure it is within the operational range of the doorbell button (up to 2150 square feet).
4. **Test the System:** Once both components are installed, press the doorbell button to confirm that the receiver rings. Adjust the receiver's position if the signal is weak or inconsistent.



Image 3.1: Doorbell button and receiver components.

4. Operating Instructions

Operating the Walfront Self-Powered Wireless Doorbell is straightforward:

- **Press the Button:** When a visitor presses the doorbell button, the mechanical energy from the press is converted into electrical energy, sending a wireless signal to the receiver.
- **Receiver Alert:** The receiver will then sound an alert, notifying you of the visitor.
- **Self-Powered Design:** No batteries are required for the doorbell button, ensuring continuous operation without the need for recharging or replacement.



Image 4.1: Detail of the doorbell button.

5. Maintenance

The Walfront Self-Powered Wireless Doorbell requires minimal maintenance:

- **Cleaning:** Wipe the doorbell button and receiver with a soft, dry cloth to remove dust or dirt. Avoid using abrasive cleaners or solvents.
- **Adhesive Check:** Periodically check the adhesive bond of the doorbell button to ensure it remains securely attached to the surface. Reapply or replace adhesive if necessary.
- **No Battery Replacement:** Due to its self-powered design, the doorbell button does not require battery replacement.

6. Troubleshooting

If you encounter issues with your Walfront Self-Powered Wireless Doorbell, please refer to the following common solutions:

- **Doorbell Not Ringing:**
  - Ensure the receiver is properly plugged into a working power outlet.

- Verify that the doorbell button is pressed firmly.
- Check the distance between the doorbell button and the receiver. While the range is up to 2150 sq ft, environmental factors like thick walls or large metal objects can reduce effective range. Try moving the receiver closer to the doorbell button.
- Ensure there are no significant obstructions (e.g., large appliances, metal structures) directly between the transmitter and receiver.

- **Weak or Intermittent Signal:**
  - Relocate the receiver to a more central position or closer to the doorbell button.
  - Minimize potential sources of interference (e.g., other wireless devices, large electronic equipment).



Image 6.1: Receiver terminals and fuse compartment.

7. Specifications

Item Type	Self Powered Doorbell
Material	ABS
Color	White
Gross Weight	143g / 5.0oz
Item Weight	5 ounces
Product Dimensions	4.72 x 3.93 x 1.96 inches
Model Number	WALFRONT5nyk8ougx3
Manufacturer	WALFRONT
Batteries Required?	No
ASIN	B0GMHGTMLQ
Date First Available	February 9, 2026

8. Warranty and Support

Specific warranty details for the Walfront Self-Powered Wireless Doorbell are typically provided with your purchase documentation. Please refer to the packaging or included warranty card for information regarding coverage and duration.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact Walfront customer service through their official website or the retailer from whom you purchased the product. Keep your purchase receipt and model number (WALFRONT5nyk8ougx3) handy for faster service.

© 2026 Walfront. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GMHGTMLQ

More documents and user manuals: **https://manuals.plus/**