Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EazeHome B0GNFP5QLZ

EazeHome Extendable Dining Table User Manual

Model: B0GNFP5QLZ | Brand: EazeHome

1. Introduction

Thank you for choosing the EazeHome Extendable Dining Table. This manual provides essential information for the safe assembly, operation, and maintenance of your new dining table. Please read these instructions carefully before beginning assembly and retain them for future reference.

2. Safety Information

Always follow assembly instructions carefully. Do not exceed the weight capacity of 300 lbs to ensure stability and prevent accidents.

- Ensure all parts are present and undamaged before assembly.
- Assemble the table on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging the wood.
- Keep small parts away from children during assembly.
- Periodically check and retighten all fasteners to maintain stability.
- Do not stand or sit on the table.

3. Package Contents

Verify that all components listed below are included in your package:

- Tabletop sections
- U-shaped wooden legs
- Hidden extension panel
- Assembly Tools (Hex key, Screwdriver)
- Fasteners (Screws, Hex bolts)
- Assembly Guide (This manual)

4. Setup and Assembly

Assembly requires two people. Follow these steps carefully:

1. **Attach Legs:** Attach the U-shaped wooden legs to the tabletop sections using the provided screws and tools. Ensure they are securely fastened but do not overtighten.
2. **Insert Support Brackets:** Insert the tabletop support brackets into the pre-drilled holes on the underside of the tabletop.
3. **Secure Legs to Brackets:** Secure the legs to the support brackets using the included hex bolts.
4. **Flip Table:** Once all connections are secure, carefully flip the table upright.
5. **Extend and Secure:** Familiarize yourself with the hidden lift system and secure clamps for extending and retracting the tabletop leaves.

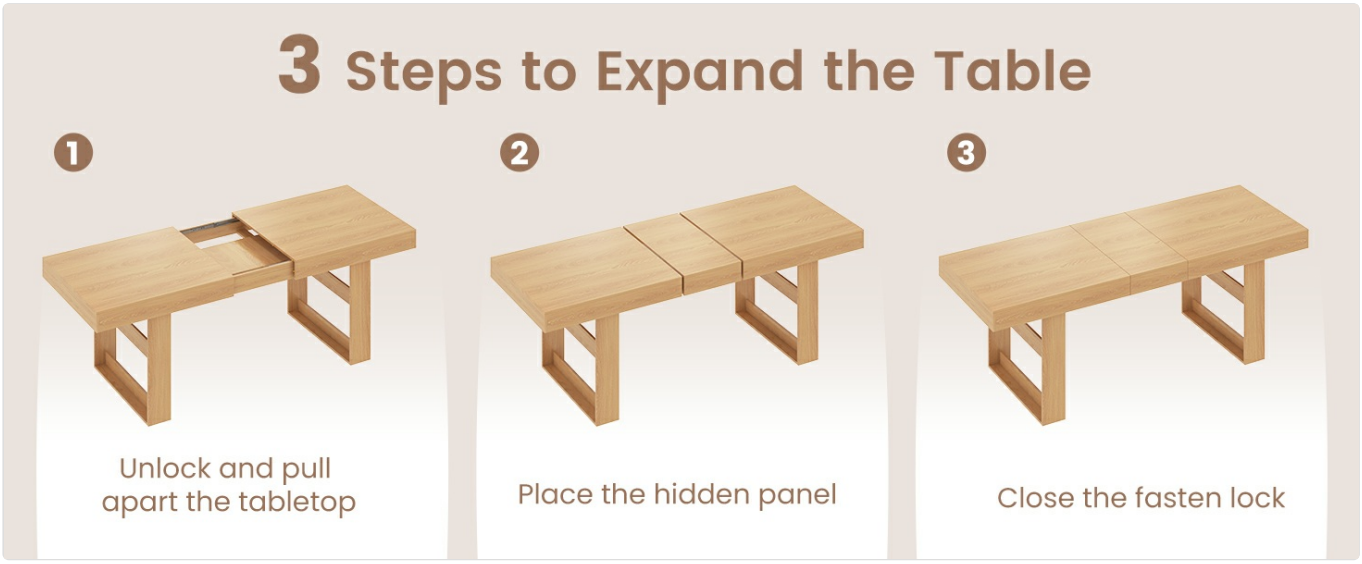


Figure 4.1: General assembly overview. All part boards and accessories are numbered for easy identification.

5. Operating Instructions

The EazeHome dining table features a smooth hidden lift system for easy extension. It can comfortably seat 8-10 people when extended.

5.1. Extending the Tabletop

1. **Unlock the Buckle:** Locate and unlock the secure clamps/buckles beneath the tabletop.
2. **Pull Apart:** Gently pull the two main tabletop sections apart towards the sides. The smooth slides will allow for effortless movement.
3. **Place Hidden Panel:** Retrieve the hidden extension panel from its storage location (if applicable) and place it in the gap created between the two main tabletop sections.
4. **Close and Lock:** Push the main tabletop sections back together until they meet the extension panel, creating a zero-gap board joint. Securely lock the clamps/buckles beneath the tabletop to prevent movement.

Figure 5.1: Step-by-step guide to extending the table.

Figure 5.2: Detail of the extension mechanism, highlighting the zero-gap board joint, smooth slides, and secure locking buckle for

stability.

5.2. Retracting the Tabletop

To retract the table, reverse the extension steps:

1. **Unlock Clamps:** Unlock the secure clamps/buckles beneath the tabletop.
2. **Separate Tabletop:** Gently pull the main tabletop sections apart.
3. **Remove Hidden Panel:** Remove the extension panel and store it appropriately.
4. **Close and Lock:** Push the main tabletop sections together until they meet. Securely lock the clamps/buckles.



Figure 5.3: Table configurations showing seating capacity when stored and extended.

6. Maintenance

Proper care will ensure the longevity of your EazeHome dining table.

- **Cleaning:** Wipe the table surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Spills:** Clean spills immediately to prevent staining, especially on the natural oak finish. The table features a waterproof surface for easier cleaning.
- **Protection:** Use placemats and coasters to protect the surface from heat, moisture, and scratches.
- **Inspection:** Periodically check all screws and bolts and tighten them if necessary to maintain structural integrity.



Figure 6.1: The table's waterproof surface simplifies cleaning and protects against spills.

7. Troubleshooting

If you encounter any issues, refer to the following common solutions:

- **Table Wobbles:** Ensure all leg connections and support brackets are securely tightened. Check that the table is on a level surface.
- **Extension Mechanism Sticks:** Ensure the slides are clean and free of debris. Apply a silicone-based lubricant if necessary. Do not force the mechanism.
- **Gap in Tabletop:** Ensure the extension panel is correctly seated and the secure clamps are fully engaged after extending the table.

For further assistance, please contact EazeHome customer support.

8. Specifications

Feature	Detail
Brand	EazeHome
Model Name	Extendable Dining Room Table
Product Dimensions (Unextended)	70.9"W x 31.5"D x 29.5"H

Product Dimensions (Extended)	86.6"W x 31.5"D x 29.5"H
Maximum Weight Recommendation	300 Pounds
Frame Material	Wood
Top Material Type	Engineered Wood
Color	Natural Oak
Seating Capacity (Unextended)	8
Seating Capacity (Extended)	10
Special Features	Silent Glides, Wooden U-shaped Legs, Zero-gap board joint



Figure 8.1: Visual representation of the table's dimensions.

9. Warranty and Support

EazeHome provides customer support for any questions or issues you may have regarding your dining table. Please refer to your purchase documentation for specific warranty details.
If you have any problems with assembly or product functionality, please feel free to contact us through the retailer where you purchased the product or visit the official EazeHome store for assistance.

Online Support: EazeHome Store on Amazon

© 2026 EazeHome. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GNFP5QLZ

More documents and user manuals: **https://manuals.plus/**