Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Claiks 35 inch

Claiks Small Glass Standing Desk User Manual

Model: 35-inch Super White Glass

1. Introduction

Thank you for choosing the Claiks Small Glass Standing Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new electric height-adjustable desk. Please read this manual thoroughly before use and retain it for future reference.



Figure 1.1: Claiks Small Glass Standing Desk in a typical home office setup.

This desk features electric height adjustment, integrated USB and Type-C charging ports, convenient storage drawers, and a durable tempered glass top.

Your browser does not support the video tag.

Video 1.1: Overview of the Claiks Standing Desk highlighting its sleek design and functionality.

2. Safety Information

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- **Do not use a clamping arm on top of the glass surface.**This can cause damage to the tempered glass.
- Ensure all cables are properly routed and secured to prevent tripping hazards or damage during height adjustment.
- Keep children and pets away from the desk during operation.
- Do not overload the desk. The maximum weight capacity is 132 pounds (60 kg).
- Only use the provided power adapter.
- Do not disassemble or modify the desk's motor or control system. Contact customer support for service.
- Avoid spilling liquids on the control panel or electrical components.

3. Package Contents

Please check the package contents against the list below. If any items are missing or damaged, contact customer support immediately.

- Tempered Glass Desktop with integrated control panel and drawers
- Desk Legs (2)
- Desk Feet (2)
- Power Adapter and Cable
- Assembly Hardware (screws, Allen wrench)
- User Manual (this document)

4. Assembly Instructions

Assembly of your Claiks Standing Desk is designed to be quick and straightforward. Follow these steps:

1. **Install Tabletop & Desk Frame:** Carefully place the desktop upside down on a soft, clean surface to prevent scratches. Attach the desk legs to the pre-drilled holes on the desktop using the provided screws and tools.
2. **Install Desk Feet:** Attach the desk feet to the bottom of each desk leg using the provided screws. Ensure they are securely fastened.
3. **Connect Power Cords:** Connect the power cable from the desk to the power adapter, and then plug the power adapter into a wall outlet.

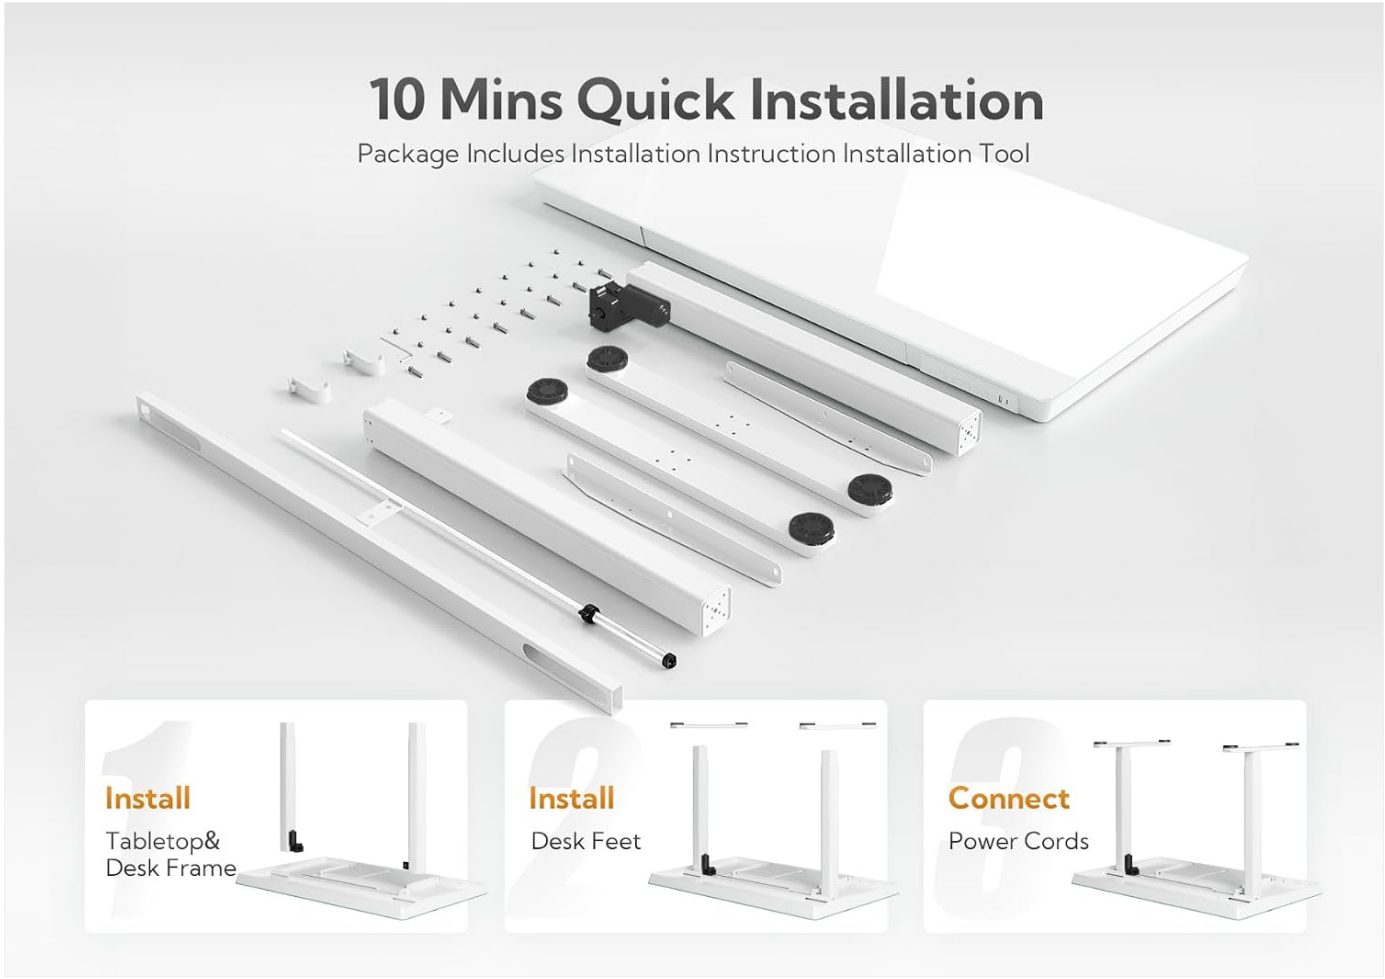

Figure 4.1: Visual guide for the 3-step quick installation process.

Once assembled, carefully flip the desk upright. Ensure it is stable before placing any items on it.

5. Operating Instructions

5.1. Electric Height Adjustment

Your desk features an electric motor for smooth height adjustments and programmable memory presets.



Figure 5.1: Multi-Function Intelligent Keypad.

- **Adjusting Height:** Use the ▲ (Up) and ▼ (Down) buttons to raise or lower the desk to your desired height. The current height is displayed on the LED screen.
- **Setting Memory Presets:** To save a preferred height, adjust the desk to the desired position. Then, press and hold one of the preset buttons (**1**, **2**, **3**, or **4**) until you hear a beep or see the display flash, indicating the height has been saved.
- **Using Memory Presets:** Press a saved preset button (**1**, **2**, **3**, or **4**) to automatically move the desk to the stored height.

5.2. USB Charging Ports

The desk is equipped with USB-A and Type-C charging ports for your convenience.



Figure 5.2: Smartphone charging via the integrated USB port.

Simply plug your device's charging cable into the appropriate port.**Note:** Charging on the USB ports may be temporarily suspended when adjusting the desktop height.

5.3. Storage Drawers

The built-in pull-out drawers provide discreet storage for your office supplies, keeping your desktop clutter-free. Gently pull the drawer handle to open and push to close. Avoid placing excessively heavy items in the drawers.

5.4. Writable Glass Surface

The tempered glass desktop can be used as a writable surface with dry-erase markers. Always use appropriate markers and clean with a soft cloth to avoid scratches or residue.

6. Maintenance

- **Cleaning the Glass Top:** Use a soft, damp cloth and a mild glass cleaner to wipe the tempered glass surface. Avoid abrasive cleaners or scouring pads that could scratch the glass.
- **Cleaning the Frame:** Wipe the desk frame with a soft, dry cloth.
- **Regular Checks:** Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- **Avoid Overloading:** Do not exceed the maximum weight capacity of 132 pounds (60 kg).

7. Troubleshooting

If you encounter any issues with your desk, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Desk does not move or respond to controls.	Power cable disconnected; power outage; motor overload.	Check power connections; ensure power outlet is working; unplug the desk for 10 minutes and plug back in to reset.
Desk moves unevenly or makes unusual noises.	Loose connections; obstruction; uneven weight distribution.	Check all screws and tighten if loose; remove any obstructions; redistribute weight evenly on the desktop.
Display shows "rES" or an error code.	Desk needs to be reset.	Perform a reset procedure as shown in the video below.

7.1. Resolving "rES" Mode

If your desk's control panel displays "rES", it indicates the desk needs to be reset. Follow these steps:

Your browser does not support the video tag.

Video 7.1: Step-by-step guide to resolving "rES" mode on the desk control panel.

1. Press and hold the ▼ (Down) button for 8 seconds.
2. Continue holding until the display shows 28.3.
3. Release the button. The desk should now operate normally.

If the problem persists after trying these solutions, please contact Claiks customer support.

8. Specifications



Figure 8.1: Claiks Small Glass Standing Desk dimensions.

Feature	Detail
Model	35-inch Super White Glass
Product Dimensions (D x W x H)	19.7"D x 35"W x 28.3"H (minimum height)
Height Adjustment Range	28.3 inches to 46.5 inches (including 2.36-inch desktop thickness)
Maximum Weight Capacity	132 pounds (60 kg)
Top Material	Tempered Glass
Base Material	Glass (legs are metal with glass finish)
Special Features	Electric Height Adjustment, 4 Memory Presets, USB-A & Type-C Ports, Pull-out Drawers, Writable Glass Top
Noise Level	Approximately 45dB during operation

9. Warranty and Support

Claiks products are manufactured with quality and durability in mind. For warranty information, please refer to the documentation included with your purchase or visit the official Claiks website. If you have any questions, require technical assistance, or need to report a missing/damaged part, please contact Claiks customer support through the retailer where you purchased the product or via the official brand contact channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GTQDFHNW

More documents and user manuals: **https://manuals.plus/**