Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

She's Birdie BD_COR_S_1.0

She's Birdie Personal Safety Alarm Disc Instruction Manual

Model: BD_COR_S_1.0

Introduction

The She's Birdie Personal Safety Alarm Disc is a compact, rechargeable device designed to enhance personal safety with a loud siren and LED light. It is suitable for various activities such as walking, jogging, hiking, and general daily use. This manual provides essential information for the proper setup, operation, and maintenance of your Birdie Disc.

What's Included

Each She's Birdie Personal Safety Alarm Disc package contains the following components:

- **Birdie Disc Device:** The main personal safety alarm unit.
- **Secure Silicone Strap:** For easy attachment to bags, strollers, bikes, or clothing.
- **USB Charging Cord:** For recharging the device's internal battery.
- **User Manual:** This instruction guide.



Figure 1: Included components of the She's Birdie Personal Safety Alarm Disc.

Product Features

The Birdie Disc is equipped with several features to provide effective personal safety:

- **Loud Siren:** Emits a high-decibel alarm to attract attention and deter potential threats.
- **Multiple Light Modes:** Features a bright LED light with three modes: solid white, flashing white, and flashing red for visibility and signaling.
- **Hands-Free Design:** Allows for easy activation and use while on the go.
- **Water-Resistant:** Designed to withstand splashes and light rain.
- **On/Off Switch:** A physical switch to power the device on or off.
- **Rechargeable Battery:** An internal lithium-ion battery that can be recharged via USB.
- **Charge Indicator Light:** Provides visual feedback on battery status.
- **Lightweight and Compact:** Easy to carry and attach to various items.

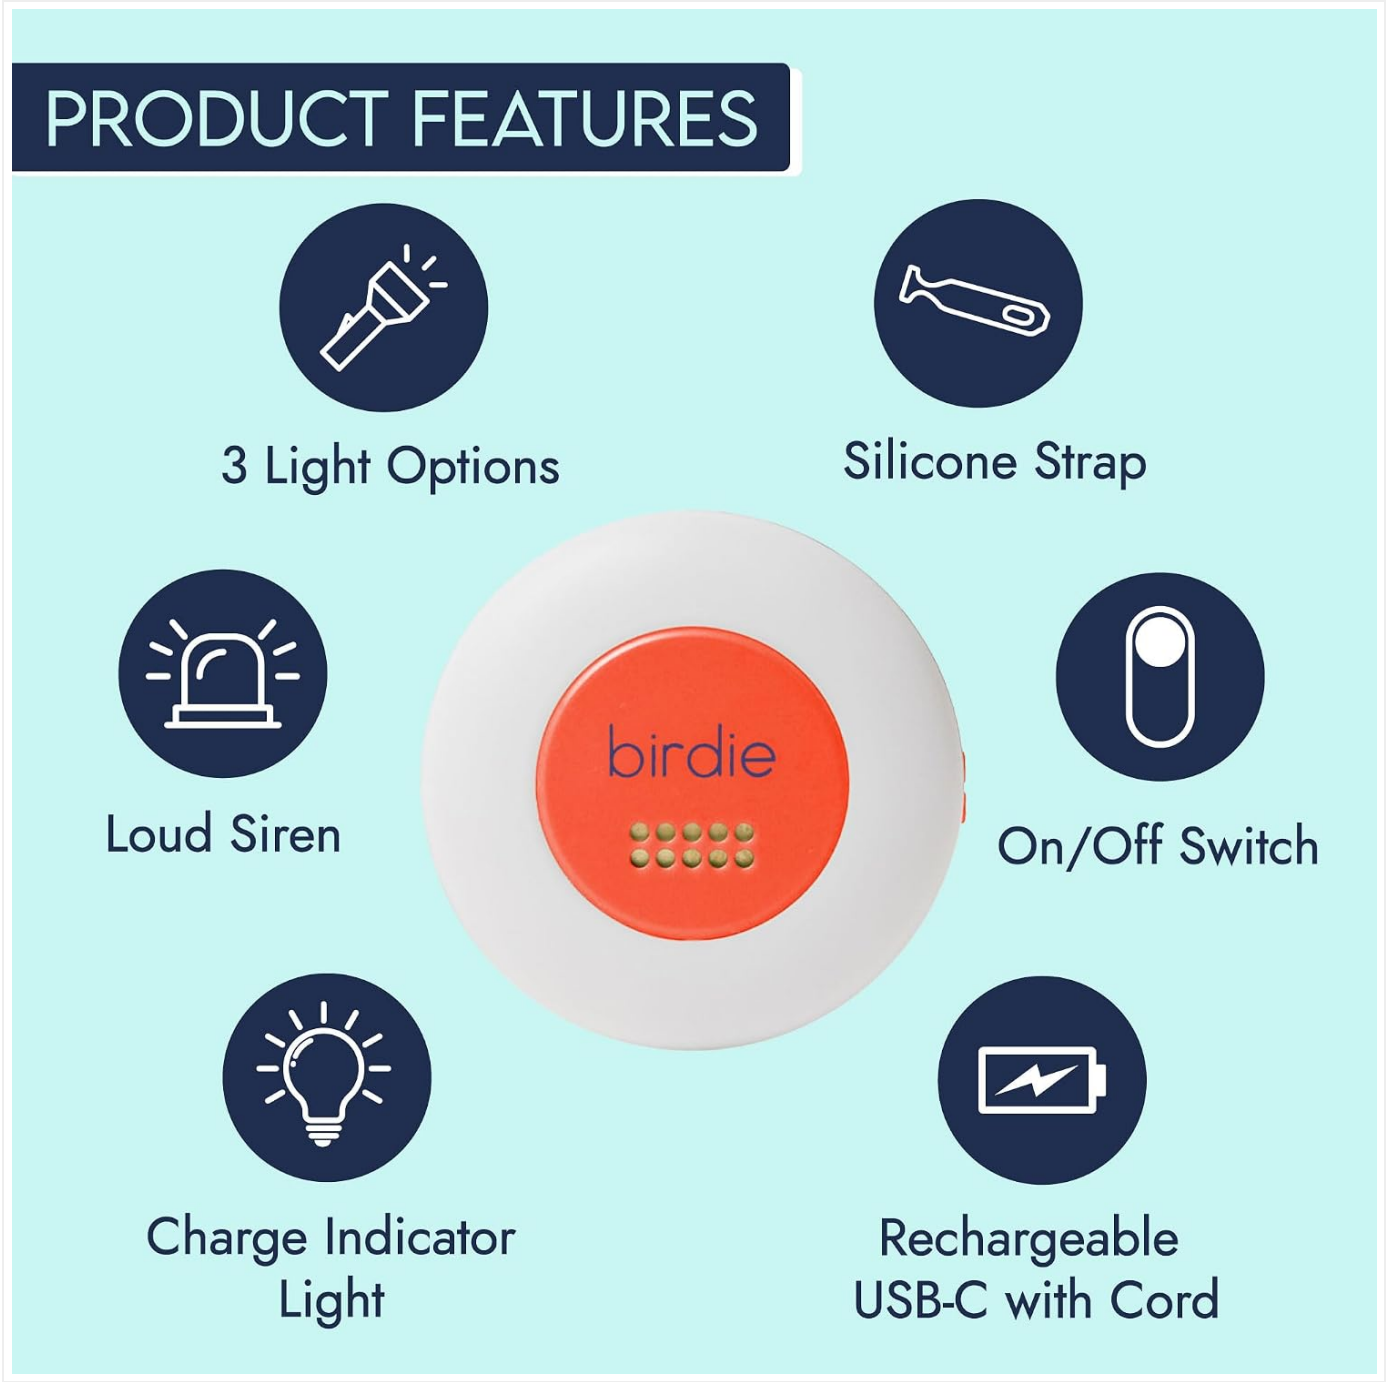

Figure 2: Overview of Birdie Disc product features.

Setup

Before first use, ensure your Birdie Disc is fully charged.

1. **Initial Charge:** Connect the provided USB charging cord to the Birdie Disc and a compatible USB power source (e.g., computer, wall adapter). The charge indicator light will show charging status. Charge until the indicator shows a full charge.
2. **Power On:** Locate the On/Off switch on the side of the Birdie Disc and slide it to the 'On' position.
3. **Attachment:** Use the secure silicone strap to attach the Birdie Disc to your desired location, such as a backpack strap, belt loop, stroller handle, or bike. Ensure it is securely fastened but easily accessible for quick activation.

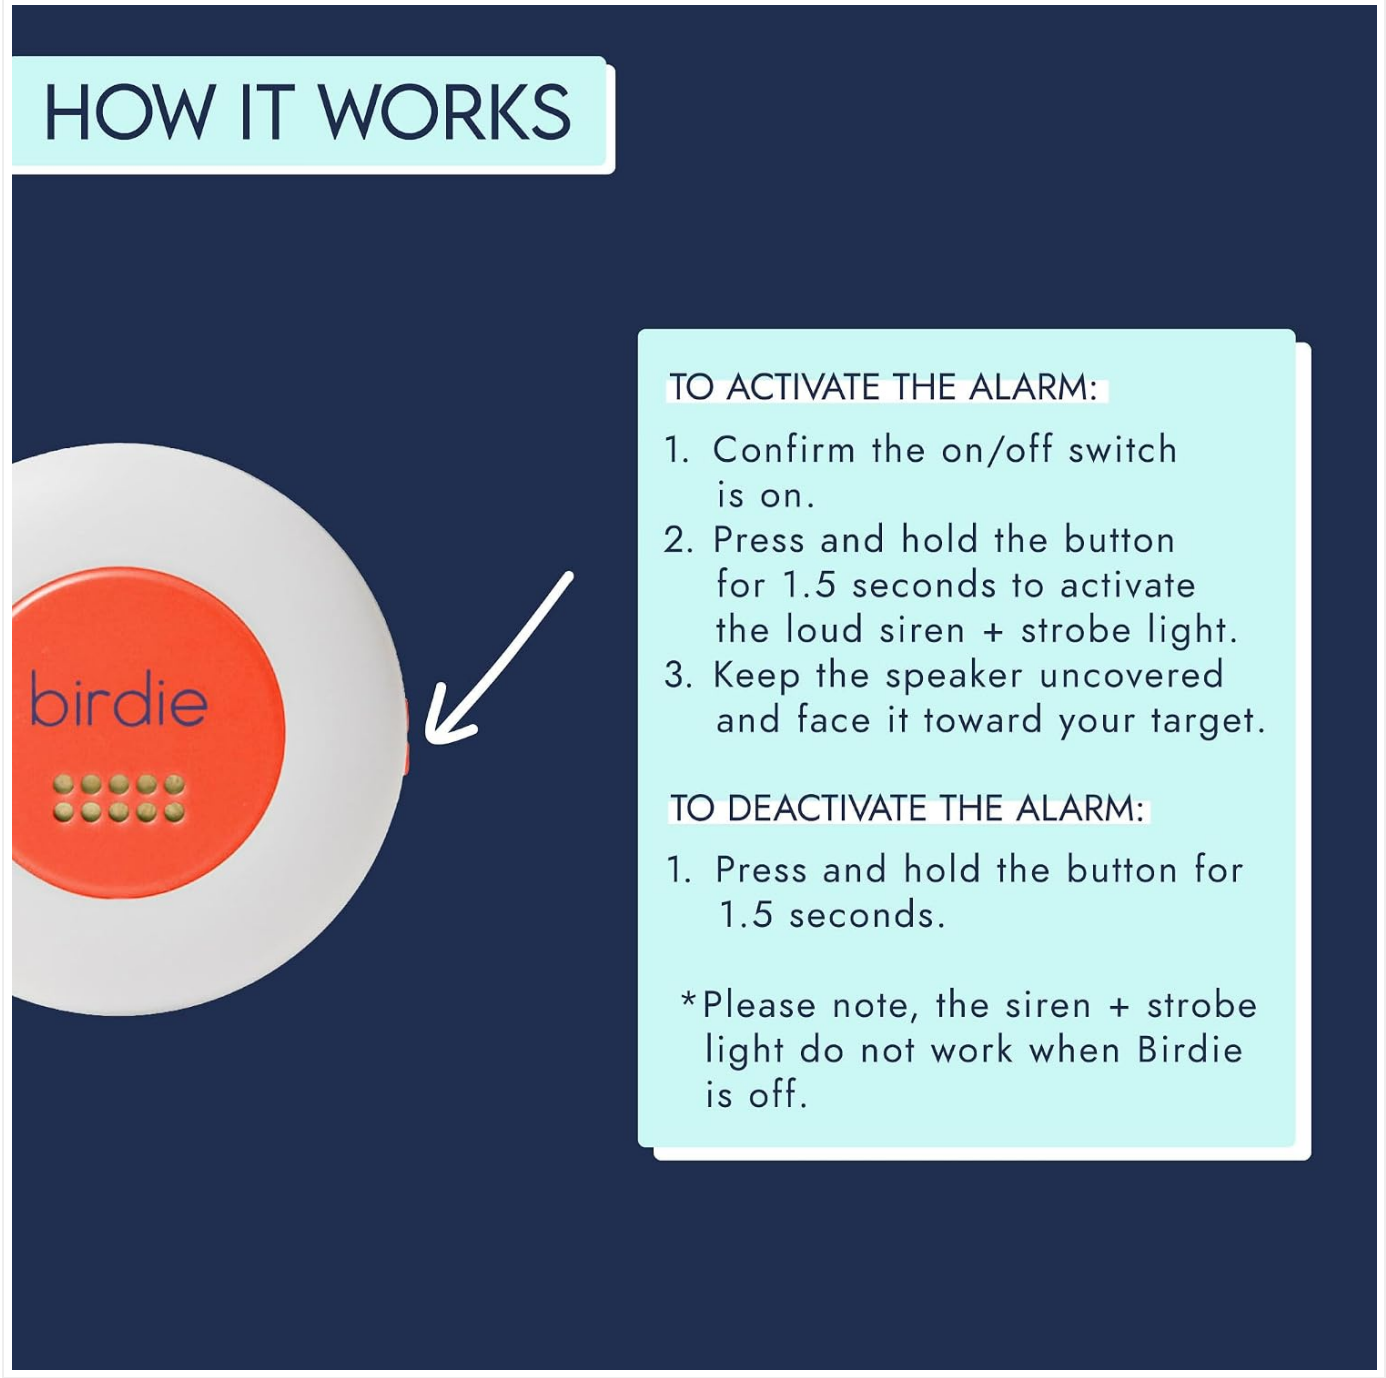

Figure 3: Examples of Birdie Disc attachment and usage scenarios.

Operating Instructions

Familiarize yourself with the operation of your Birdie Disc before an emergency situation. Practice in a safe environment to build confidence.

Activating the Alarm and Strobe Light

1. Ensure the On/Off switch is in the 'On' position.
2. Press and hold the central button on the Birdie Disc for approximately 1.5 seconds.
3. The device will emit a loud siren and activate a bright strobe light simultaneously.
4. For maximum effectiveness, keep the speaker uncovered and direct the device towards the intended target.

Deactivating the Alarm and Strobe Light

- To stop the siren and strobe light, press and hold the central button again for approximately 1.5 seconds.

Using the LED Light Modes

The Birdie Disc features multiple light modes for visibility:

- **Solid White Light:** Press the central button once briefly.
- **Flashing White Light:** Press the central button twice briefly.
- **Flashing Red Light:** Press the central button three times briefly.

To turn off the light, press the central button a fourth time briefly, or hold the button for 1.5 seconds to activate the alarm (if not already active).

Important Note: The siren and strobe light functions are only active when the On/Off switch is in the 'On' position. The light modes may function independently of the alarm activation.



Figure 4: Visual guide for activating and deactivating the Birdie Disc alarm.

Maintenance

Charging the Battery

The Birdie Disc is equipped with a rechargeable lithium-ion battery. A red indicator light will blink when the battery level is low, signaling that it needs to be recharged.

1. Connect the provided USB charging cord to the charging port on the Birdie Disc.
2. Plug the other end of the USB cord into a standard USB power source (e.g., computer USB port, USB wall adapter, power bank).
3. The charge indicator light will illuminate to show that the device is charging.
4. Once fully charged, the indicator light will change or turn off (refer to specific product behavior if different). Disconnect the charging cable.

Regular charging ensures your Birdie Disc is always ready for use.

Cleaning

Wipe the device with a soft, damp cloth as needed. Do not use harsh chemicals or abrasive cleaners. Ensure the charging port cover is securely closed to maintain water resistance.

Troubleshooting

If you encounter issues with your Birdie Disc, refer to the following common solutions:

Problem	Possible Cause	Solution
Alarm/Strobe Light does not activate.	Device is off. Battery is low or depleted. Button not held long enough.	Ensure On/Off switch is 'On'. Charge the device. Press and hold the button for 1.5 seconds.
LED Light modes do not work.	Battery is low or depleted.	Charge the device.
Device is not charging.	Loose USB connection. Faulty cable or power source.	Ensure USB cable is securely connected. Try a different USB cable or power adapter.
Alarm activates accidentally.	Button pressed unintentionally.	Ensure the device is attached in a way that prevents accidental button presses. Consider sliding the On/Off switch to 'Off' when not actively needed.

Specifications

- **Model Number:** BD_COR_S_1.0
- **Brand:** She's Birdie
- **Color:** Coral
- **Power Source:** Battery Powered (1 Lithium-Ion Nonstandard Battery, included)
- **Product Dimensions (L x W x H):**3" x 1" x 3"
- **Control Method:** Push Button
- **Water Resistance:** Yes
- **Light Modes:** Solid White, Flashing White, Flashing Red
- **Siren:** Loud

- **UPC:** 850066459522

Warranty and Support

For warranty information, product support, or any inquiries not covered in this manual, please contact She's Birdie customer service directly. Refer to the official She's Birdie website or your purchase documentation for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0GZ8YC7T6

More documents and user manuals: **https://manuals.plus/**