Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VASAGLE LSD308WZ03

VASAGLE Electric Height Adjustable Desk LSD308WZ03 User Manual

Brand: VASAGLE | Model: LSD308WZ03

Introduction

Thank you for choosing the VASAGLE Electric Height Adjustable Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read these instructions carefully before use and retain them for future reference.

Important Safety Information

- Ensure the desk is completely stable before use.
- Do not exceed the recommended maximum load capacity of 70 kg.
- Utilize the lock function to prevent accidental height adjustments, especially when children are present.
- Keep hands and objects clear of moving parts during height adjustment.
- Do not sit or stand on the desk.
- Only use the desk indoors in a dry environment.

Package Contents

Please check that all components are present and in good condition before beginning assembly:

- 1 x Electric Height Adjustable Desk
- 1 x Instruction Manual
- 1 x Assembly Tool Bag

Setup and Assembly

The VASAGLE Electric Height Adjustable Desk is designed for effortless assembly. Thanks to clearly labeled parts and step-by-step instructions, assembly is simple even for beginners, saving time and effort. You can quickly enjoy your new height-adjustable desk.

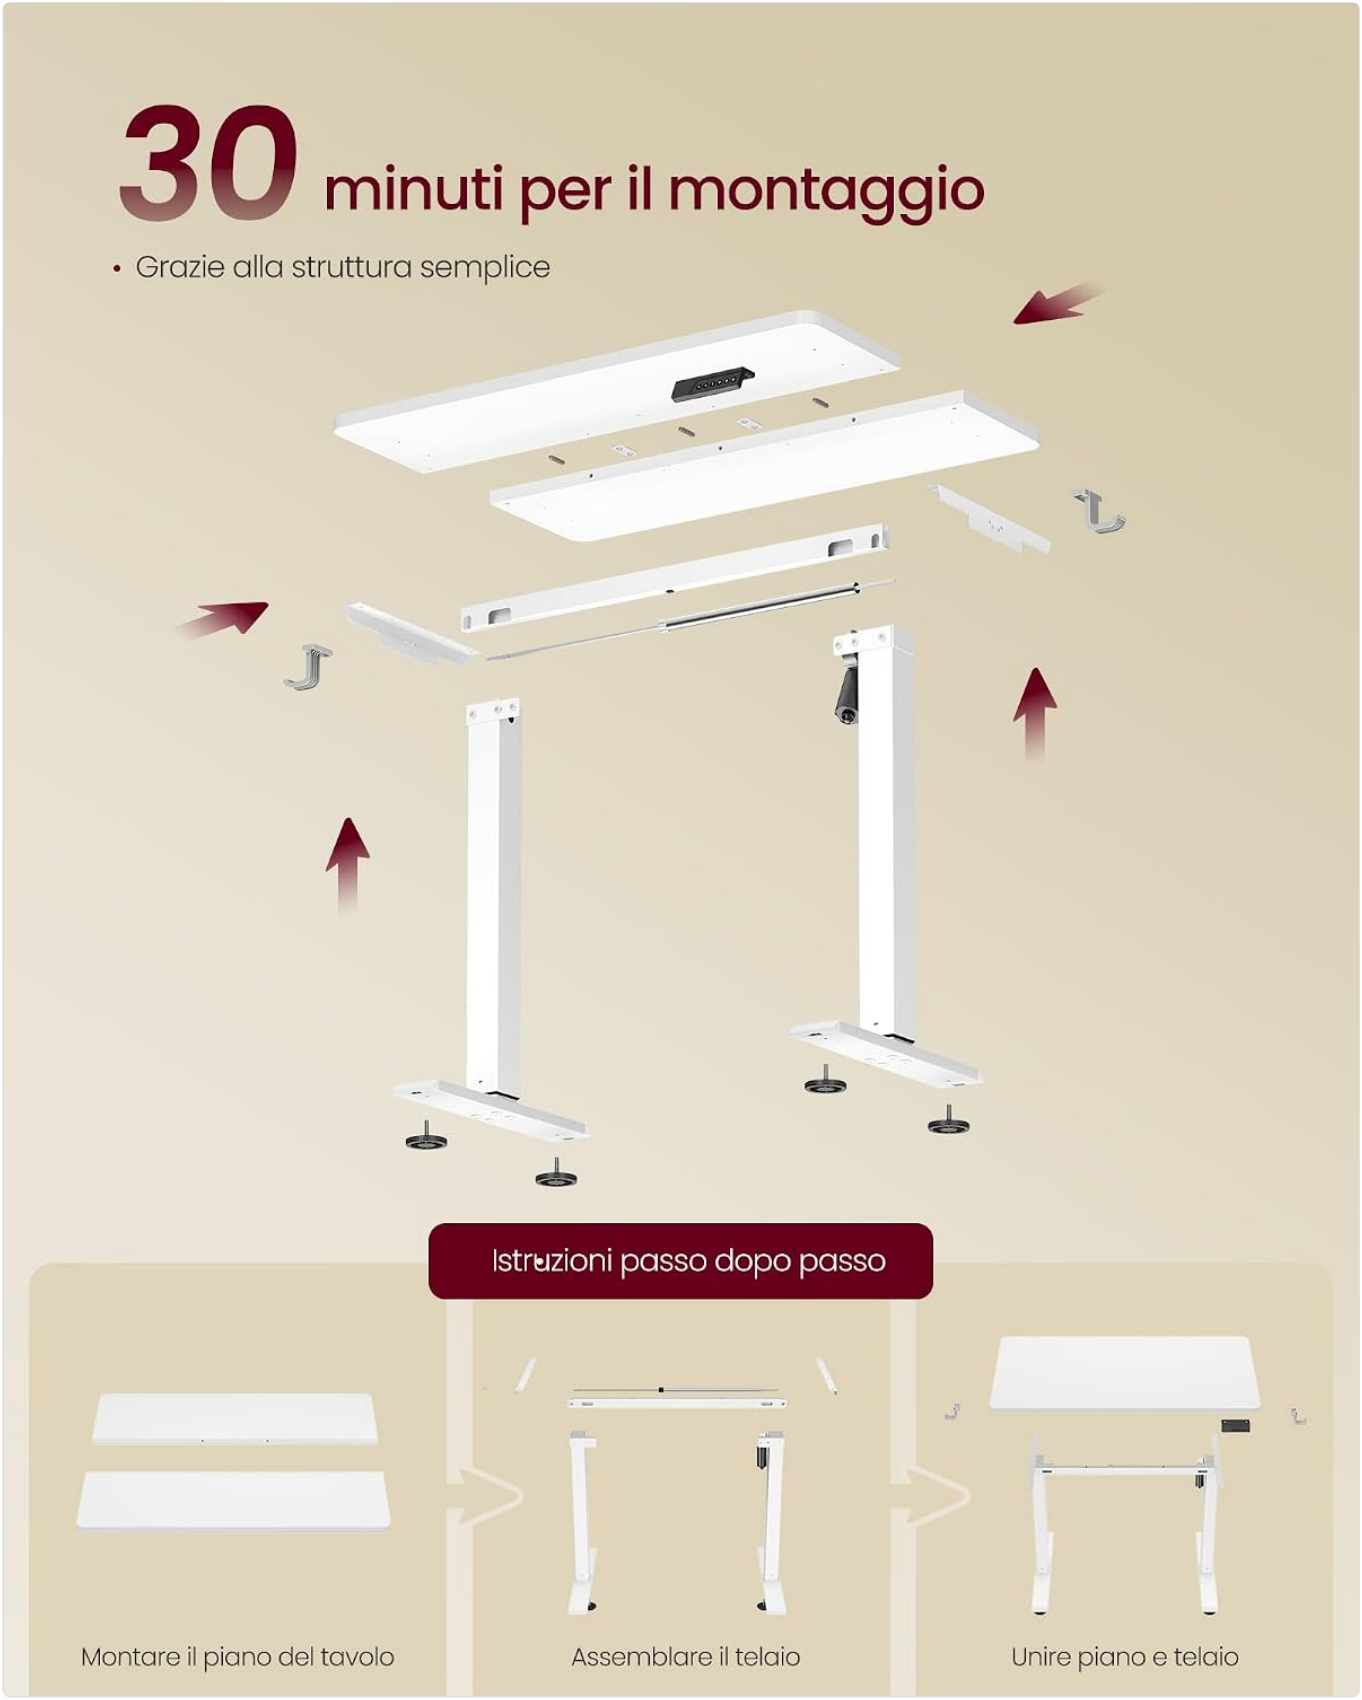


Figure 1: Assembly Steps. An exploded view of the desk components and a three-step visual guide for assembly: mounting the tabletop, assembling the frame, and joining the tabletop and frame.

Follow the detailed instructions provided in the included manual for a smooth assembly process. Ensure all screws are tightened securely before use.

Operating Instructions

Height Adjustment

The desk offers flexible height adjustment from 72 cm (minimum) to 120 cm (maximum), allowing you to easily alternate between sitting and standing positions for healthier work habits.



Figure 2: Height Range and Memory Presets. Two individuals using the desk: one seated at minimum height (72 cm) and one standing at maximum height (120 cm). The control panel with 4 memory presets is highlighted.

Memory Presets

The control panel features 4 storable height settings. Press the corresponding numbered button (1, 2, 3, or 4) for quick adjustment to your preferred sitting or standing height. The fourth button combines memory and sedentary reminder

functions.

Sedentary Reminder

To promote healthier work habits, the desk includes a sedentary reminder function. This feature can be configured to prompt you to change positions after long periods of sitting, helping to reduce fatigue.

Lock Function

For enhanced safety, especially in households with children, the desk is equipped with a lock function. This prevents accidental height adjustments.



Figure 3: Smart Lock Function. A visual guide explaining how to activate the smart lock function by pressing the up and down buttons simultaneously for 3 seconds, and how to unlock it using the same method.

To activate the lock: Press and hold the 'Up' and 'Down' buttons simultaneously for 3 seconds. The display will indicate 'LOC'.

To deactivate the lock: Press and hold the 'Up' and 'Down' buttons simultaneously for 3 seconds again. The display will return to the current height.

Quiet and Stable Operation

The desk operates quietly (less than 48 dB) with a smooth adjustment speed of 20 mm/s, ensuring minimal disturbance and maximum concentration during use. Its robust steel frame provides excellent stability, supporting up to 70 kg.



Figure 4: Control Panel Features. A close-up of the desk's control panel, illustrating features such as the lock function, sedentary reminder, and quiet operation (less than 48 dB, 20 mm/s adjustment speed).



Figure 5: Stability and Motor Performance. Visual representation of the desk's stability, showing it can support up to 70 kg and features a motor tested for 20,000 lift cycles for smooth, reliable adjustment.

Thoughtful Design

The desk features rounded corners on the tabletop to prevent accidental bumps and create a safer working environment.



Figure 6: Rounded Tabletop Corners. An image highlighting the rounded corners of the desk tabletop, designed to prevent bumps and enhance user safety.

Maintenance

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Cable Management:** Ensure cables are neatly organized and do not interfere with the desk's movement.

Troubleshooting

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected, lock function active, overload.	Check power connection. Deactivate lock function (refer to Operating Instructions). Reduce weight on desk.
Uneven movement or noise.	Loose connections, obstruction.	Check and tighten all assembly screws. Ensure no objects obstruct the lifting mechanism.
Memory function not working.	Incorrect programming.	Refer to the 'Memory Presets' section in Operating Instructions for correct programming steps.

If you encounter any issues not listed here or if the problem persists after attempting the solutions, please contact customer support.

Specifications



Figure 7: Product Dimensions. An illustration showing the desk dimensions (80 cm width, 50 cm depth, 72-120 cm height) and its maximum static load capacity of 70 kg.

Brand: VASAGLE

Model Number: LSD308WZ03

Shape: Rectangular

Desk Design: Standing Desk

Product Dimensions (D x W x H): 80 x 50 x 72-120 cm

Color: Cloud White

Base Material: Steel Alloy

Special Feature: Quick Adjustment, Memory Function, Sedentary Reminder, Lock Function

Recommended Product Uses: Work, Office

Item Weight: 12.9 Kilograms

Minimum Height: 72 Centimeters

Maximum Height: 120 Centimeters

Material Type: Particleboard, Steel, PA Plastic

Maximum Recommended Weight: 70 Kilograms

Warranty and Support

For warranty information, technical support, or any questions regarding your VASAGLE Electric Height Adjustable Desk, please refer to the purchase documentation or contact the seller/manufacturer directly. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question