Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DUMOS Alei-DM-YL38IN-GY

DUMOS Faux Fur Saucer Chair Instruction Manual

Model: Alei-DM-YL38IN-GY

1. Introduction

Thank you for choosing the DUMOS Faux Fur Saucer Chair. This manual provides essential information for the safe and proper setup, operation, and maintenance of your new chair. Please read these instructions carefully before use and retain them for future reference.
The DUMOS Faux Fur Saucer Chair is designed to provide a comfortable and versatile seating option for adults. Its folding design allows for easy storage and portability, making it suitable for various indoor spaces such as living rooms, bedrooms, and dorms.

2. Safety Information

- **Maximum Weight Capacity:** Do not exceed the maximum weight recommendation of**250 pounds (113 kg)**. Exceeding this limit may cause damage to the chair and potential injury.
- **Adult Use Only:** This chair is designed for adult use. Supervise children to prevent misuse or accidents.
- **Stable Surface:** Always place the chair on a flat, stable, and level surface to prevent tipping.
- **Avoid Sharp Objects:** Keep sharp objects away from the faux fur fabric to prevent tears or damage.
- **Folding Mechanism:** Exercise caution when folding and unfolding the chair to avoid pinching fingers or hands. Ensure the chair is fully locked in the open position before sitting.
- **Indoor Use:** This chair is intended for indoor use only. Prolonged exposure to outdoor elements may damage the materials.

3. Package Contents

Your DUMOS Faux Fur Saucer Chair package should contain the following:

- 1 x DUMOS Faux Fur Saucer Chair (fully assembled, in folded position)

4. Setup Instructions

The DUMOS Faux Fur Saucer Chair comes pre-assembled and requires minimal setup.

1. **Unpack the Chair:** Carefully remove the chair from its packaging.
2. **Unfold the Chair:** Hold the top of the chair and gently pull the legs outwards until the frame is fully extended and locked into place. Ensure all four legs are firmly on the ground and the chair feels stable before use.

Visual Guide: Unfolding the Chair

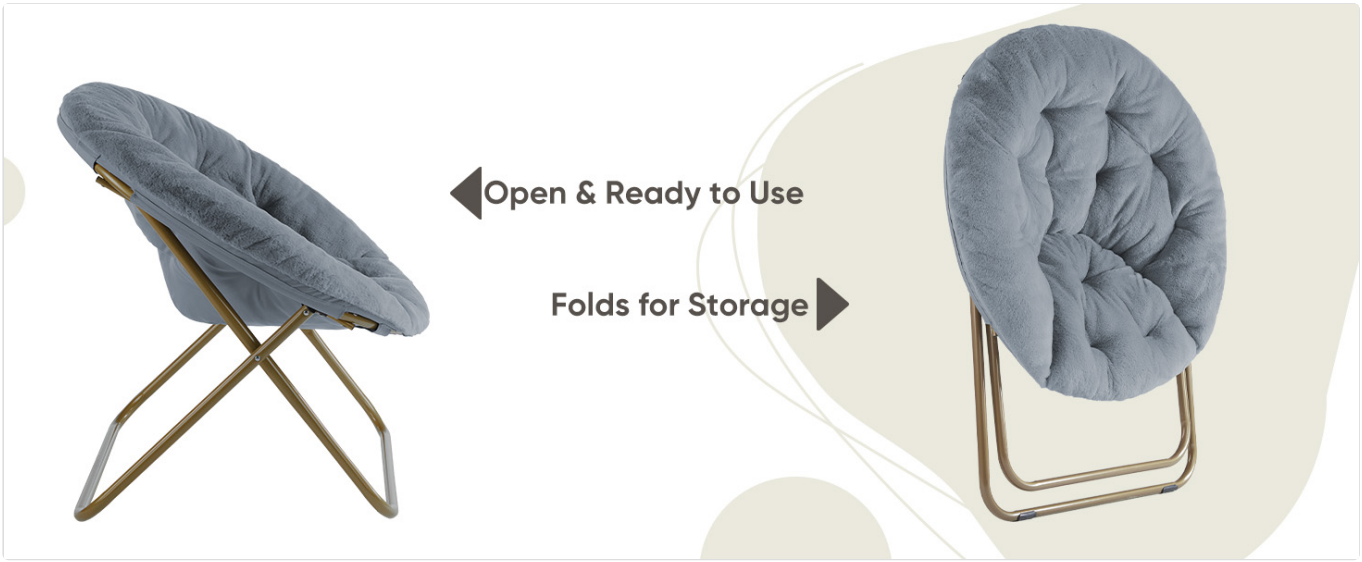

This image illustrates the chair's transition from a folded state to an open, ready-to-use position, highlighting its quick-fold feature for storage.

5. Operating Instructions

Using your DUMOS Faux Fur Saucer Chair is straightforward:

- **Sitting:** Once the chair is fully unfolded and stable, sit gently into the center of the faux fur cushion. The oversized design provides ample space for comfortable lounging.
- **Folding for Storage:** To fold the chair, stand in front of it and gently push the sides of the seat inwards while lifting slightly. The frame will collapse, allowing the chair to fold flat for compact storage.

Visual Guide: Chair in Use



This image shows an individual enjoying the chair, demonstrating its comfort for activities like reading.



This composite image highlights the chair's versatility for various activities, including working, napping, and general relaxation.

Video: DUMOS Moon Chair Overview

Your browser does not support the video tag.

This video provides a general overview of the DUMOS Moon Chair, showcasing its features and design.

6. Maintenance

To ensure the longevity and appearance of your DUMOS Faux Fur Saucer Chair, follow these maintenance guidelines:

- **Cleaning the Faux Fur:** The faux fur fabric is designed for easy cleaning. For minor spills, gently blot with a clean, damp cloth. For deeper cleaning, use a mild detergent diluted in water and lightly dab the affected area. Avoid harsh chemicals or abrasive cleaners, as these can damage the fabric. Allow to air dry completely.

- **Frame Care:** Wipe the metal frame with a soft, dry cloth to remove dust. Avoid using abrasive materials that could scratch the finish.
- **Regular Inspection:** Periodically check all joints and connections to ensure they are secure. Tighten any loose screws if necessary.
- **Storage:** When not in use, fold the chair flat and store it in a dry, cool place away from direct sunlight to prevent fading or material degradation.

Visual Guide: Premium Faux Fur Fabric



This image provides a detailed view of the premium faux fur fabric, highlighting its texture and quality.

7. Troubleshooting

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Not fully unfolded; uneven surface; loose connections.	Ensure the chair is fully extended and locked. Place on a flat surface. Check and tighten any visible screws on the frame.
Difficulty folding/unfolding.	Mechanism stiff; obstruction.	Apply gentle, even pressure. Check for any obstructions in the folding mechanism. Do not force the chair.
Faux fur appears matted or flattened.	Prolonged pressure; lack of fluffing.	Gently brush or fluff the faux fur with your hand or a soft brush to restore its texture.

8. Specifications

Feature	Detail
Brand	DUMOS
Model Number	Alei-DM-YL38IN-GY
Color	Grey
Material	Metal frame, Faux Fur upholstery, Foam fill
Product Dimensions (D x W x H)	25.59" x 35.83" x 32.28" (65cm x 91cm x 82cm)
Seat Depth	25.59 inches (65cm)
Item Weight	12.8 pounds (5.8 kg)
Maximum Weight Recommendation	250 pounds (113 kg)
Form Factor	Foldable
Indoor/Outdoor Usage	Indoor

Visual Guide: Product Dimensions

This diagram provides a clear visual representation of the chair's dimensions and its maximum weight capacity.

9. Warranty and Support

For warranty information or customer support regarding your DUMOS Faux Fur Saucer Chair, please refer to the purchase documentation or contact DUMOS customer service directly through their official website or the retailer where the product was purchased.
You can visit the DUMOS Store for more information:DUMOS Official Store

© 2023 DUMOS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H4RFVBFW

More documents and user manuals: **https://manuals.plus/**