Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OUKITEL C17PLUS

OUKITEL C17 PLUS Smartphone User Manual

Model: C17PLUS

1. Introduction

This manual provides essential information for the safe and efficient use of your OUKITEL C17 PLUS smartphone. Please read this manual carefully before using the device and keep it for future reference.

2. Package Contents

Verify that all items are present in the package:

- 1 x OUKITEL C17 PLUS Smartphone
- 1 x Type-C Cable
- 1 x 18W Charging Adapter
- 1 x SIM Eject Tool
- 1 x Phone Case
- 1 x Screen Protector Film
- 1 x User Manual



Image: Contents of the OUKITEL C17 PLUS retail package.

3. Device Layout

Familiarize yourself with the physical components of your OUKITEL C17 PLUS smartphone.



Image: Front and rear view of the OUKITEL C17 PLUS smartphone, highlighting its display and camera module.

3.1 Physical Dimensions

- **Thickness:** 8.8mm
- **Weight:** 205g



Image: The OUKITEL C17 PLUS demonstrating its thin profile and light weight for comfortable handling.

4. Setup

4.1 Inserting SIM and TF Card

The OUKITEL C17 PLUS supports dual SIM cards or one SIM card and one TF (microSD) card for expandable storage up to 1TB.

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM eject tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or TF card into the designated slots on the tray. Ensure the gold contacts are facing down.
4. Carefully push the tray back into the device until it clicks into place.

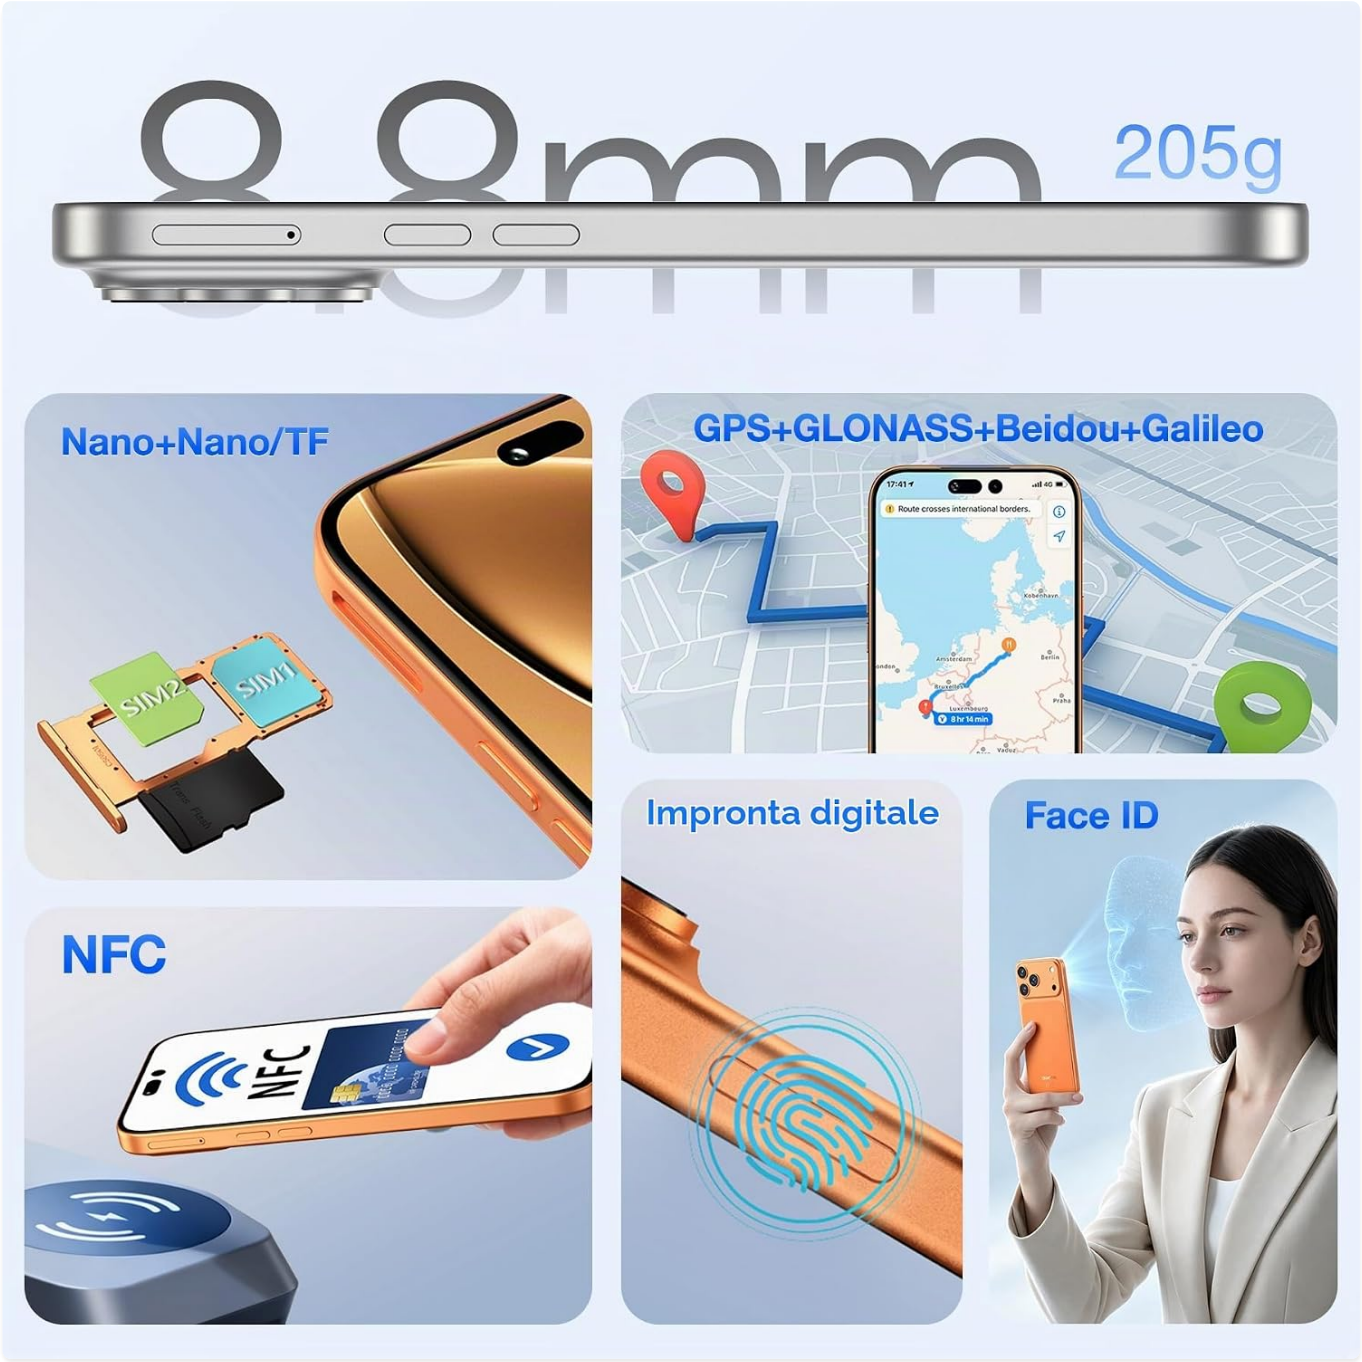


Image: Detailed view of the SIM and TF card tray, showing proper insertion of cards.

4.2 Initial Power On and Setup

1. Press and hold the Power button until the OUKITEL logo appears.
2. Follow the on-screen instructions to select your language, connect to Wi-Fi, and set up your Google account.
3. Configure security features such as Face ID and Fingerprint recognition for quick and secure unlocking.

5. Operating Your Smartphone

5.1 Display Features

The OUKITEL C17 PLUS features a large 6.9-inch display with a 120Hz refresh rate for smooth visuals.

- **Screen Size:** 6.9 inches
- **Refresh Rate:** 120Hz
- **Display Type:** LCD

- **Colors:** 16.7 Million
- **Aspect Ratio:** 19.5:9



Image: The 6.9-inch 120Hz display showcasing its visual clarity and fluid motion.

5.2 Camera Operation

Capture high-quality photos and videos with the dual camera system.

- **Rear Camera:** 64MP AI Camera
- **Front Camera:** 8MP
- **Features:** HDR, Panorama, Portrait modes.

1. Open the Camera application.
2. Select your desired mode (Photo, Video, Portrait, etc.).
3. Tap the shutter button to capture an image or start/stop recording.



Image: The 64MP AI rear camera and sample images demonstrating its capabilities.



Image: The 8MP front camera and sample selfies.

5.3 Battery and Charging

The device is equipped with a 5000mAh battery and supports 18W fast charging.

- **Battery Capacity:** 5000mAh
- **Charging:** 18W Fast Charging via USB-C
- **Standby Time:** Up to 830 hours
- **Talk Time:** Up to 35 hours

1. Connect the Type-C cable to the phone's charging port.
2. Connect the other end of the cable to the 18W charging adapter.
3. Plug the adapter into a power outlet.
4. The charging indicator will appear on the screen.



Image: Visual representation of the 5000mAh battery and 18W fast charging.

5.4 Software and Features

The OUKITEL C17 PLUS runs on Android 16, offering an intuitive and secure user experience.

- **Operating System:** Android 16
- **Processor:** Mediatek Dimensity 9000
- **RAM:** 24GB (6GB physical + 18GB virtual)
- **Internal Storage:** 256GB (expandable up to 1TB with TF card)



Image: The Android 16 operating system and Gemini AI integration on the OUKITEL C17 PLUS.



Image: Visual representation of the 24GB RAM and 256GB ROM storage.

5.5 Connectivity and Security

- **Network:** 4G LTE, Dual SIM support
- **Wireless:** Wi-Fi, Bluetooth
- **Navigation:** GPS, GLONASS, Galileo, BEIDOU
- **NFC:** For contactless payments and data transfer
- **Biometric Security:** Face ID, Side-mounted Fingerprint Sensor



Image: Overview of connectivity and security features like Dual SIM, NFC, GPS, Fingerprint ID, and Face ID.

6. Maintenance

To ensure the longevity and optimal performance of your OUKITEL C17 PLUS, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Protection:** Use the provided phone case and screen protector to guard against scratches and minor impacts.
- **Temperature:** Avoid exposing the device to extreme temperatures (hot or cold) or direct sunlight for extended periods.
- **Water Exposure:** The device is not waterproof. Keep it away from liquids.
- **Software Updates:** Regularly check for and install system updates to ensure security and performance improvements.

7. Troubleshooting

If you encounter issues with your device, refer to the following common solutions:

Problem	Solution
Device does not turn on	Ensure the battery is charged. Connect to the charger for at least 10 minutes, then try powering on again. If unresponsive, perform a forced restart by holding the Power button for 10-15 seconds.
Apps are crashing or freezing	Close background applications. Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage > Clear Cache). Restart the device.
Poor battery life	Reduce screen brightness, disable unused features like Bluetooth/GPS, close background apps, and check for apps consuming excessive power in battery settings.
Cannot connect to Wi-Fi/Bluetooth	Toggle Wi-Fi/Bluetooth off and on. Restart the device and the router/Bluetooth accessory. Forget the network/device and reconnect.
SIM card not detected	Ensure the SIM card is correctly inserted into the tray. Restart the phone. Check if the SIM card is active with your carrier.

If the issue persists, please contact customer support.

8. Specifications

Detailed technical specifications for the OUKITEL C17 PLUS smartphone.

Feature	Detail
Brand	OUKITEL
Model Name	C17PLUS
Operating System	Android 16
RAM	24 GB (6GB physical + 18GB virtual)
CPU Model	Mediatek Dimensity 9000
Internal Storage	256 GB
Expandable Storage	Up to 1 TB (TF card)
Screen Size	6.9 Inches
Refresh Rate	120 Hz
Display Type	LCD
Wireless Carrier	All carriers (unlocked)
Cellular Technology	4G
SIM Card Slots	Dual SIM
SIM Card Format	Nano
Connectivity Technology	Bluetooth, Wi-Fi
Rear Camera Resolution	64 MP
Front Camera Resolution	8 MP
Battery Capacity	5000 mAh
Charging Port	USB-C
Biometric Features	Face Recognition, Fingerprint Sensor
GPS Features	GPS, GLONASS, Galileo, BEIDOU
NFC	Yes
Form Factor	Bar
Product Weight	205g
Product Thickness	8.8mm
Model Year	2026

Feature	Detail
Country of Origin	China

9. Warranty Information

Your OUKITEL C17 PLUS smartphone comes with a manufacturer's warranty.

- **Warranty Period:** 2 years manufacturer warranty.

Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

10. Support

For further assistance, technical support, or warranty inquiries, please contact OUKITEL customer service through their official website or the contact information provided with your purchase.
Online Resources: Visit the official OUKITEL website for FAQs, software updates, and additional support.

© 2026 OUKITEL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HBVQV15J

More documents and user manuals: **https://manuals.plus/**