Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OUKITEL C66

OUKITEL C66 Android Smartphone User Manual

Model: C66

1. Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your OUKITEL C66 Android Smartphone. Please read it carefully to ensure proper use and to maximize your device's performance and longevity.

The OUKITEL C66 is a high-performance Android smartphone equipped with 24GB RAM (8GB physical + 16GB virtual expansion) and 256GB ROM. App launches and switching are incredibly smooth, ensuring comfortable operation in all scenarios, from business efficiency to entertainment. It supports TF card expansion up to 1TB, allowing ample storage for photos, videos, and games, completely eliminating worries about insufficient storage. The latest Android 16.0 offers an intuitive interface and enhanced privacy protection and security features. Combined with the Unisoc T615 octa-core processor, it achieves both speed and smoothness, making it an ideal smartphone for daily use.

2. What's in the Box

Upon opening your OUKITEL C66 package, please verify that all the following items are included:

- OUKITEL C66 Smartphone
- Quick Start Guide
- Power Adapter
- Phone Case
- SIM Tray Ejector
- USB Cable
- Maintenance Card



Image: The OUKITEL C66 retail box contents, showing the smartphone, quick start guide, power adapter, phone case, SIM tray ejector, USB cable, and maintenance card.

3. Setup

3.1. SIM Card and Storage Installation

The OUKITEL C66 supports a dual SIM configuration (Nano+Nano) or a Nano SIM with a TF card for expanded storage. Use the provided SIM tray ejector tool to open the SIM card slot.

1. Locate the SIM tray slot on the side of your device.
2. Insert the SIM tray ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano SIM card(s) and/or TF card into the designated slots on the tray, ensuring correct orientation.
4. Carefully push the tray back into the device until it is flush with the side.



Image: Illustration of SIM card and TF card insertion into the tray, highlighting the dual SIM capability.

3.2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the right side) until the OUKITEL logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options menu appears, then select 'Restart'.

3.3. Initial Configuration

The first time you power on your device, you will be guided through a setup wizard. Follow the on-screen instructions to:

- Select your language and region.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password, fingerprint, or face unlock).
- Review and accept terms and conditions.

4. Operating Your Device

4.1. Display and Navigation

The OUKITEL C66 features a large 6.73-inch HD+ (720x1560) display with a 120Hz high refresh rate for smooth visuals and touch response. The minimum brightness of 450 nits ensures good visibility even under strong outdoor sunlight.



Image: The OUKITEL C66 display, highlighting its 6.73-inch HD+ screen, 720x1560 resolution, 120Hz refresh rate, and 450 nit brightness.

4.2. Camera Usage

The device is equipped with a 64MP high-definition main camera on the back and an 8MP front camera. The 0.08MP depth sensor assists in portrait photography.

- **Rear Camera:** 64MP main sensor for detailed photos and videos. Supports various modes including Photo, Video, Panorama, Portrait, and Night Scene.
- **Front Camera:** 8MP for high-quality selfies and video calls.
- **Flash:** LED Flash for low-light conditions.



Image: Visual examples demonstrating the capabilities of the 64MP main camera, including panorama, front camera, and macro photography.

4.3. Battery Management

The OUKITEL C66 features a built-in 5000mAh large-capacity battery, providing extended usage times. It supports 18W fast charging for quick power recovery.

- **Charging:** Use the provided USB Type-C cable and power adapter for optimal charging.
- **OTG Reverse Charging:** The device can supply emergency power to other small devices like wireless earphones or smart bands via an OTG cable.

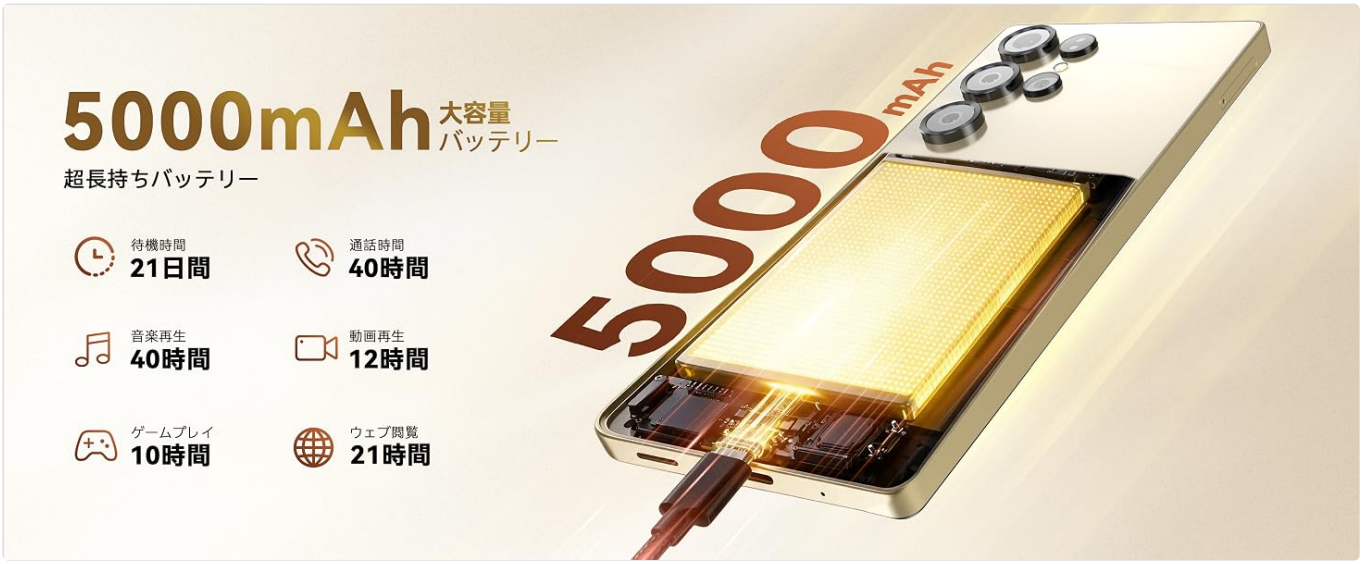

Image: An illustration of the 5000mAh battery and its 18W fast charging capability, along with estimated usage times for standby, calls, music, video, and gaming.

4.4. Connectivity

- **4G LTE:** Supports 4G networks for reliable call and data communication.
- **Wi-Fi:** Connect to wireless networks for internet access.
- **Bluetooth 5.0:** For stable and high-speed wireless connections with accessories like headphones or speakers.
- **NFC:** Enables convenient mobile payments and quick device pairing.
- **GPS:** Integrated GPS, GLONASS, Beidou, and Galileo multi-mode positioning systems provide accurate navigation.

4.5. Security Features

The OUKITEL C66 offers multiple security options to protect your privacy:

- **Side Fingerprint Recognition:** Unlock your device instantly with a touch.
- **Face Recognition:** Use your face to unlock the device quickly and securely.
- **PIN/Pattern/Password:** Standard Android security options.



Image: Demonstrations of the fingerprint and face recognition features for unlocking the OUKITEL C66.

5. Maintenance

5.1. Software Updates

Regular software updates are released to improve system stability, enhance features, and apply security patches. It is recommended to keep your device's software up to date.

- Go to **Settings > System > System update** to check for and install available updates.
- Ensure your device has sufficient battery life and is connected to a stable Wi-Fi network before performing an update.

5.2. Storage Management

Your OUKITEL C66 comes with 256GB of internal storage, expandable up to 1TB with a TF card. Regularly manage your storage to maintain optimal performance.

- Go to **Settings > Storage** to view storage usage and free up space.
- Delete unnecessary apps, photos, videos, and files.
- Move large files to your TF card or cloud storage.



Image: Visual representation of the 24GB RAM and 256GB ROM, emphasizing the expandability up to 1TB via TF card.

6. Troubleshooting

If you encounter issues with your OUKITEL C66, try the following common troubleshooting steps:

- **Device not turning on:** Ensure the battery is charged. Connect the device to the charger and wait a few minutes before attempting to power on again.
- **Apps crashing or freezing:** Close the problematic app and reopen it. If the issue persists, clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Restarting the phone can also resolve many software glitches.
- **Poor battery life:** Check for background apps consuming power. Adjust screen brightness, disable unnecessary connectivity features (Wi-Fi, Bluetooth, GPS) when not in use.
- **Network connectivity issues:** Ensure your SIM card is correctly inserted and activated. Check your mobile data settings. Try toggling Airplane Mode on and off.
- **Fingerprint/Face unlock not working:** Ensure your fingers/face are clean and dry. Re-register your fingerprint/face data in Settings > Security.
- **Device unresponsive:** Press and hold the Power button for about 10-15 seconds to force a restart.

If these steps do not resolve your issue, please refer to the Warranty and Support section for further assistance.

7. Specifications

Feature	Specification
Brand	OUKITEL
Model	C66
Operating System	Android 16
RAM	24 GB (8GB physical + 16GB virtual expansion)
Internal Storage	256 GB

Feature	Specification
Expandable Storage	Up to 1 TB (TF Card)
Processor	Unisoc T615 Octa-core
Display Size	6.73 inches
Display Resolution	720 x 1560 (HD+)
Refresh Rate	120 Hz
Display Brightness	450 nits (minimum)
Rear Camera	64 MP Main Camera + 0.08 MP Depth Sensor
Front Camera	8 MP
Battery Capacity	5000 mAh
Charging	18W Fast Charging, OTG Reverse Charging
SIM Card Type	Nano SIM
SIM Card Slots	Dual SIM (Nano+Nano or Nano+TF)
Network Technology	4G LTE
Connectivity	Wi-Fi, Bluetooth 5.0, NFC, USB Type-C
Positioning	GPS, GLONASS, Beidou, Galileo
Biometric Security	Fingerprint Recognition (Side-mounted), Face Recognition
Dimensions	164.5 x 78 x 8.7 mm
Weight	300 grams
Included Components	Quick Start Guide, Power Adapter, Phone Case, SIM Tray Ejector, USB Cable, Maintenance Card

8. Warranty and Support

8.1. Warranty Information

Your OUKITEL C66 smartphone comes with a**2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damages caused by:

- Accidents, misuse, or abuse.
- Unauthorized repairs or modifications.
- Normal wear and tear.
- Failure to follow instructions in this manual.

8.2. Customer Support

For technical support, warranty claims, or other inquiries, please contact OUKITEL customer service through their official website or the contact information provided in your product packaging.

Please have your device model (C66) and purchase details ready when contacting support.

© 2026 OUKITEL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HF7T82D2

More documents and user manuals: **https://manuals.plus/**