Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MXV H21405-90HT

MXV 90" Mid-Century Modern TV Stand with Sliding Doors and Power Outlet

Model: H21405-90HT

User Manual

1. Introduction

Thank you for purchasing the MXV 90" Mid-Century Modern TV Stand. This entertainment center is designed to provide a stylish and functional solution for your living space, featuring sliding doors, ample storage, and a built-in power outlet. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your product.



Image 1.1: Front view of the MXV 90-inch TV Stand in walnut finish, showcasing its overall design.

2. Safety Information

- Read all instructions carefully before assembly and use.
- Keep children and pets away during assembly. Small parts can be a choking hazard.
- Place the TV stand on a flat, stable, and level surface to prevent tipping.
- Do not exceed the maximum weight capacities: Top panel 132 lbs (60 kg), Shelves 32 lbs (14.5 kg) each.
- Do not stand or climb on the TV stand.
- Ensure all connections to the built-in power outlet are secure and within the specified electrical ratings. Do not overload the outlets.
- Periodically check all screws and fasteners to ensure they remain tight.

3. Package Contents

Before beginning assembly, verify that all parts and hardware are present. If any parts are missing or damaged, please contact customer support.

- All necessary wooden panels and components
- Hardware pack (screws, dowels, cam locks, etc.)
- Built-in power outlet unit (with 2 AC outlets, 1 USB port, 1 Type-C port)
- Assembly manual

4. Setup and Assembly

Assembly is designed to be straightforward. Follow the detailed instructions provided in the separate assembly manual included in your package. Each component is clearly numbered for easy identification.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Match each part to the corresponding number in the assembly manual.
3. **Assemble Frame:** Follow the step-by-step diagrams to connect the main frame components using the provided hardware.
4. **Install Shelves:** Insert adjustable shelves into desired positions.
5. **Install Sliding Doors:** Carefully attach the sliding door mechanisms and doors as per the instructions.
6. **Install Power Outlet:** Secure the built-in power outlet unit into its designated slot.
7. **Final Check:** Ensure all screws are tightened and the stand is stable before placing any items on it.



Image 4.1: Close-up view highlighting key structural details such as adjustable shelves, hidden storage, cable management holes, and additional support legs for stability.

5. Operating Instructions

5.1 Sliding Doors

The TV stand features smooth-gliding tambour doors. To open or close, gently slide the door along its track. Ensure no objects obstruct the door's path.

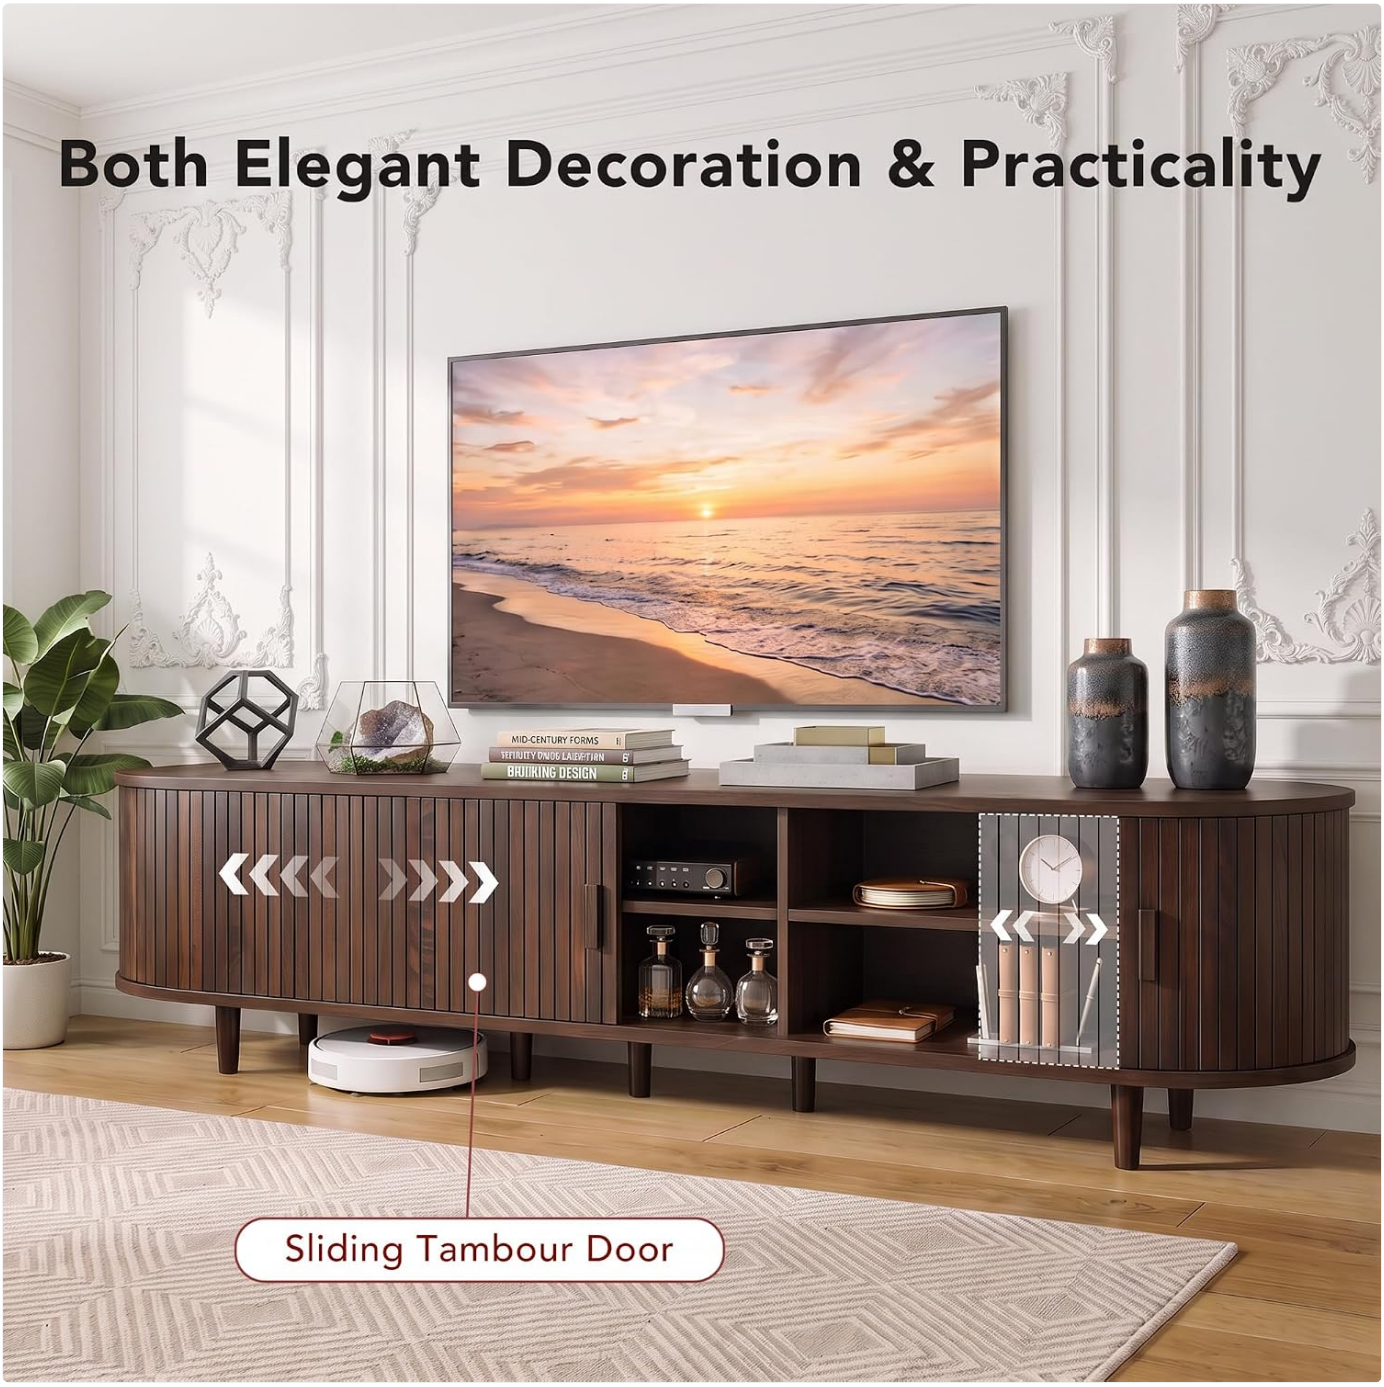


Image 5.1: The TV stand with its sliding tambour doors partially open, demonstrating access to internal storage and its practical design.

5.2 Built-in Power Outlet

The integrated power strip provides convenient access to power for your electronic devices.

- **AC Outlets:** Two standard AC outlets are available for TVs, sound systems, or other appliances.
- **USB Port:** One USB-A port for charging compatible devices.
- **Type-C Port:** One USB-C port for charging compatible devices.

Usage: Plug your devices directly into the appropriate ports. Ensure the total power draw does not exceed the outlet's maximum rating (typically 125V/12A). Use the power switch on the outlet unit to turn power on or off to all connected devices.



Image 5.2: Detailed view of the built-in charging station, illustrating the AC outlets, USB-A, and USB-C ports in use.

5.3 Cable Management

Utilize the pre-drilled cable holes located on the back panel of the stand to route and organize your device cables, keeping them tidy and out of sight.

6. Maintenance

- **Cleaning:** Wipe surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with mild soap, then dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Clean up spills immediately to prevent damage to the wood finish.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Humidity:** Maintain a stable room humidity to prevent wood from warping or cracking.
- **Hardware Check:** Periodically inspect all screws and fasteners and tighten if necessary.

7. Troubleshooting

7.1 Power Outlet Not Working

- Ensure the main power switch on the outlet unit is in the "ON" position.
- Check if the TV stand's power cord is securely plugged into a functional wall outlet.
- Verify that the wall outlet itself is receiving power (test with another device).
- Ensure you are not overloading the power strip. Unplug some devices and try again.

7.2 Sliding Doors Sticking

- Check the door tracks for any obstructions (dust, debris, small objects). Clean the tracks if necessary.
- Ensure the TV stand is on a level surface. Uneven surfaces can cause misalignment.
- Verify that the door hardware is properly installed and not loose.

7.3 Stand Wobbles

- Ensure all assembly screws are fully tightened.
- Verify the stand is placed on a flat and level floor. Use furniture pads or shims if necessary to level it.

8. Specifications

Model Number	H21405-90HT
Brand	MXV
Color	Walnut
Dimensions (L x W x H)	90" x 15.7" x 20" (228.6 cm x 39.9 cm x 50.8 cm)
Item Weight	93.2 lbs (42.3 kg)
Material	Wood (Particleboard)
Top Panel Weight Capacity	132 lbs (60 kg)
Shelf Weight Capacity	32 lbs (14.5 kg) per shelf
Power Outlet	2 AC Outlets, 1 USB-A Port, 1 USB-C Port

Product Dimension

Weight Limitation / 32 lb Shelf 132 lb Top

Product Size / W90" * D15.7" * H20.1"

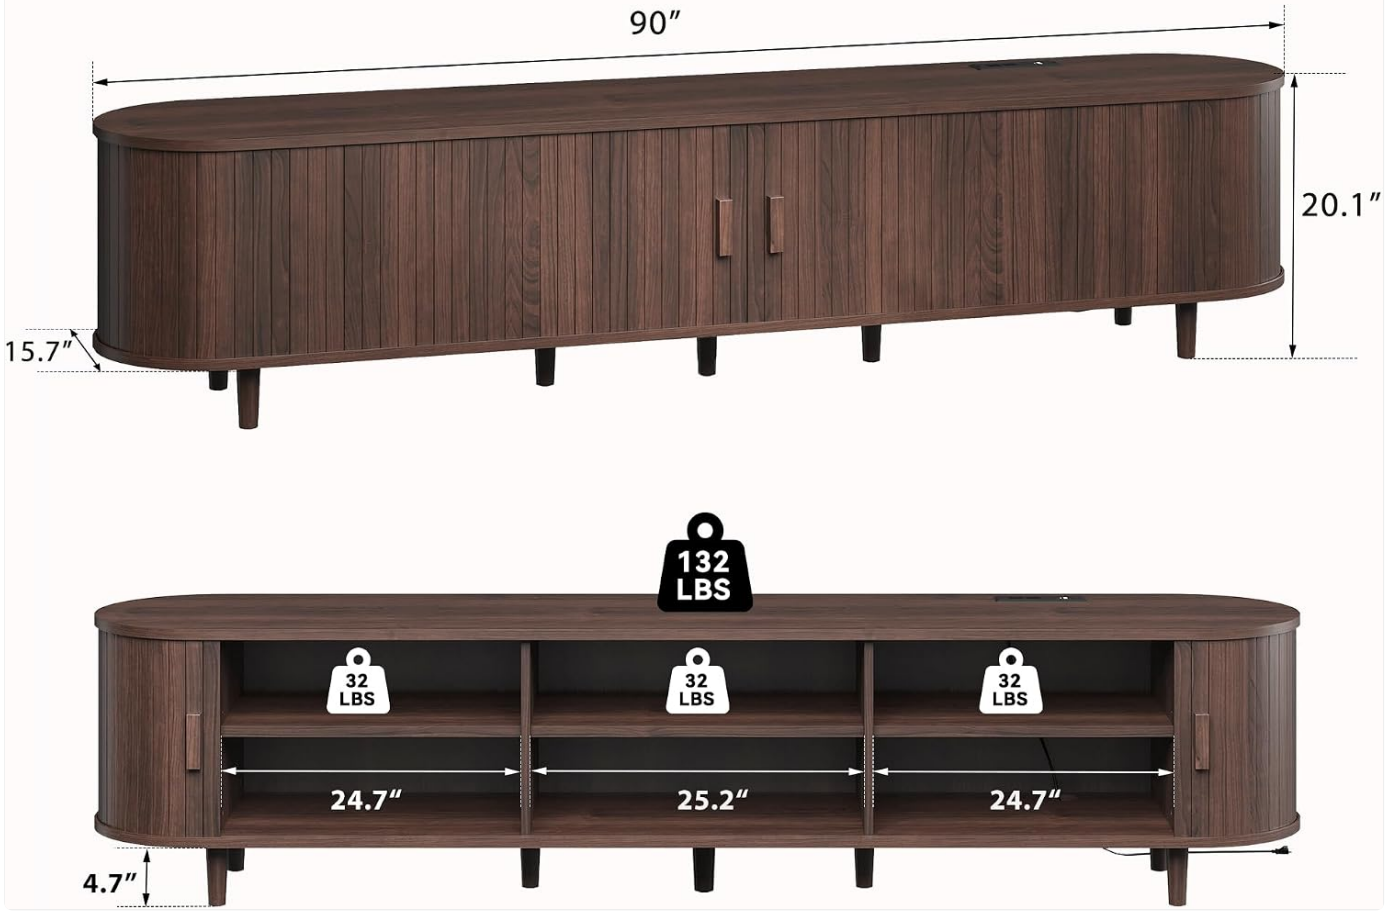


Image 8.1: Diagram illustrating the overall dimensions and weight capacities for the top panel and internal shelves.



Image 8.2: Visual representation of the TV stand's compatibility with different television sizes, up to 100 inches.

9. Warranty and Support

For warranty information, please refer to the documentation included with your purchase or contact the retailer. For technical support, missing parts, or any other inquiries, please contact MXV customer service through the retailer's platform or the official MXV website.

Please have your model number (H21405-90HT) and purchase date available when contacting support.

© 2023 MXV. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HHCWP81T

More documents and user manuals: **https://manuals.plus/**