Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Aurzen E1R

Aurzen Roku TV E1R Smart Portable Mini Projector and Carrying Case User Manual

Model: E1R

1. Introduction

This manual provides essential information for the safe and efficient operation of your Aurzen Roku TV E1R Smart Portable Mini Projector and its accompanying carrying case. Please read this manual thoroughly before using the product and retain it for future reference.

2. Safety Information

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

- Do not block any ventilation openings. Ensure adequate space around the projector for proper airflow.
- Do not look directly into the projector lens when the lamp is on. The bright light can cause eye damage.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the projector during lightning storms or when unused for long periods.
- Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- Keep the projector away from water, moisture, and heat sources.

3. Package Contents

Verify that all items are present in your package:

- Aurzen E1R Smart Projector ×1
- Aurzen Mini Projector Carrying Case ×1
- Power Adapter ×1
- Remote Control ×1
- User Manual (This document)



Image: The Aurzen E1R Smart Projector and its dedicated carrying case, as received in the package.

4. Product Overview

4.1 Aurzen E1R Smart Projector

The Aurzen E1R is a portable mini projector featuring built-in Roku TV for direct access to streaming services. It is designed for versatile entertainment with enhanced audio capabilities.

- **Integrated Roku TV:** Access popular streaming apps like Netflix, Prime Video, Hulu, YouTube, and more directly from the projector's home screen.
- **Enhanced Audio:** Features a larger sound chamber for fuller sound, clearer dialogue, and increased volume compared to standard mini projectors.
- **Portable Design:** Compact and lightweight, suitable for various viewing environments.
- **Adjustable Projection:** The projector stand allows for flexible projection angles, including wall and ceiling viewing.



Image: A comparison highlighting the larger sound chamber in the Aurzen E1R projector base, designed for improved audio quality.



Image: The Aurzen E1R projector positioned to project onto a ceiling, demonstrating its 180-degree adjustable stand for flexible viewing angles.

4.2 Aurzen Mini Projector Carrying Case

The included carrying case is custom-designed to protect and transport your Aurzen E1R projector and its accessories.

- **Custom Fit:** Shaped specifically for barrel-style mini projectors, providing a snug fit.
- **Protective Padding:** Features 8mm thickened foam padding for all-around cushioning.
- **Organized Storage:** Separate compartments for the projector, power adapter, remote, and other small accessories.
- **Flexible Carrying Options:** Equipped with an easy-open buckle handle for hand carrying or clipping onto a backpack/luggage.



Image: An exploded view of the carrying case, showing its upper compartment for accessories, main projector compartment, and elastic side pocket for the remote.

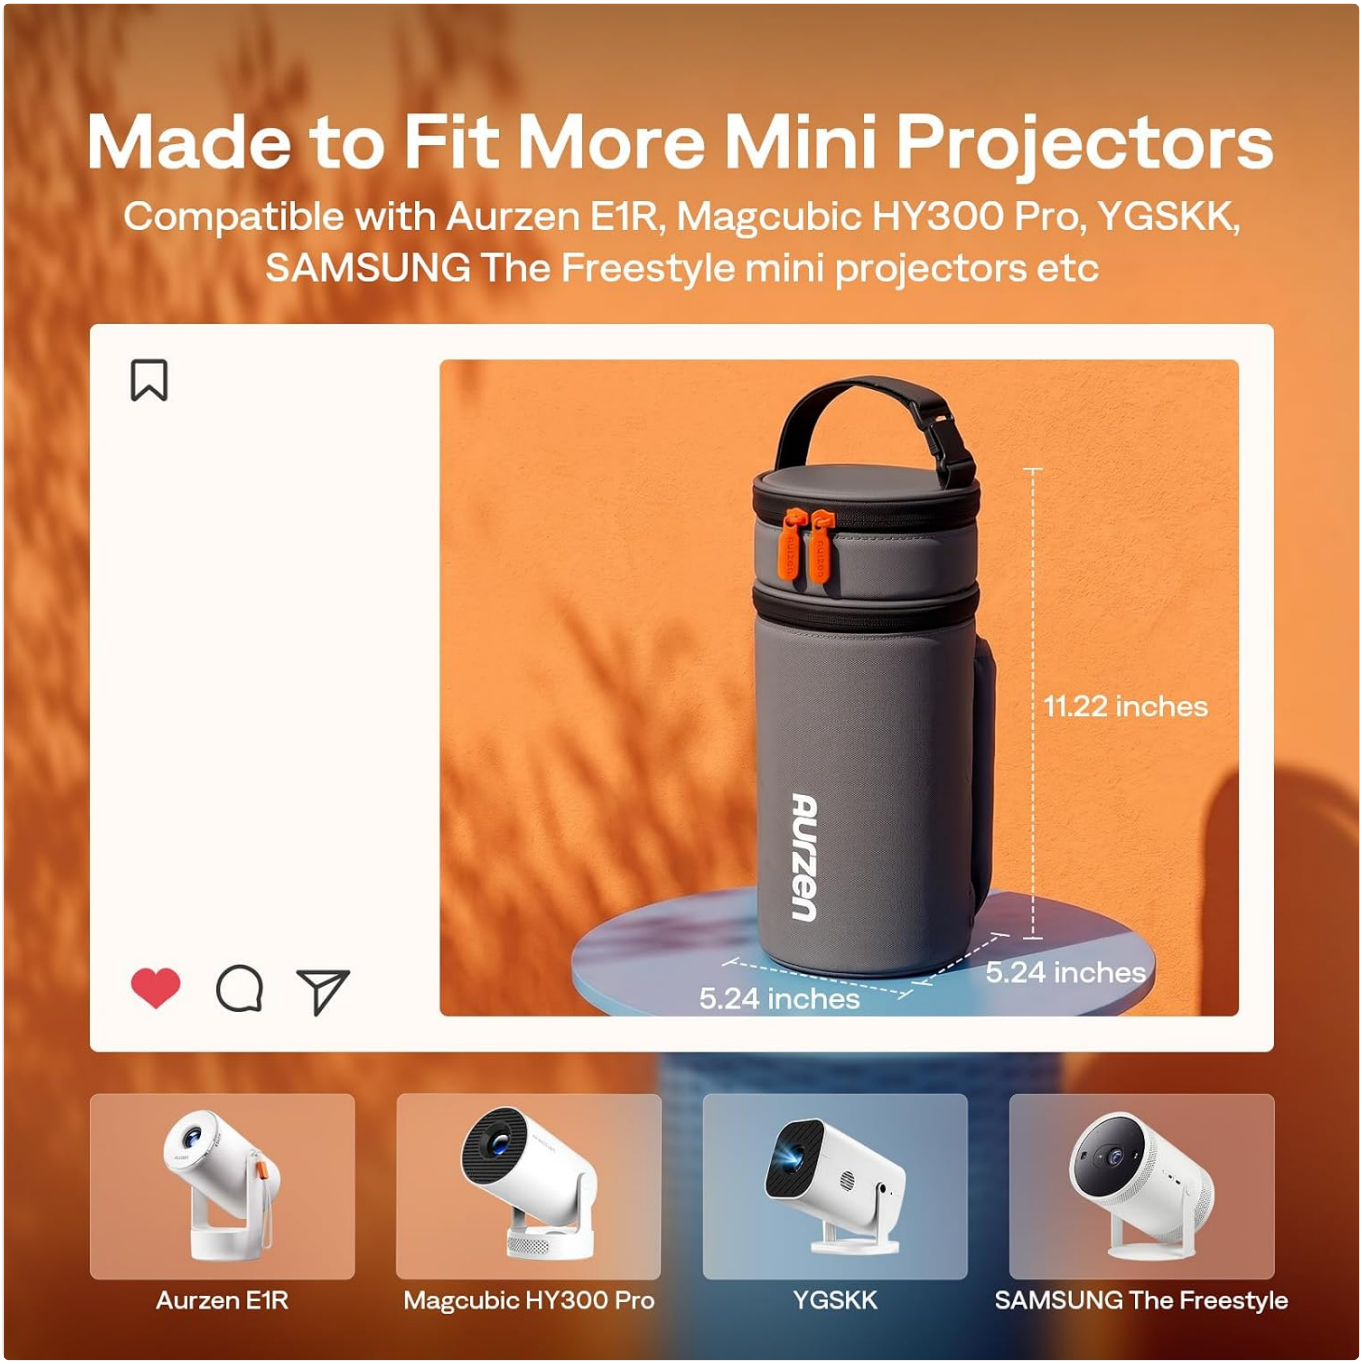


Image: A close-up view illustrating the 8mm thickened foam padding within the carrying case, designed for enhanced protection.



Image: The carrying case clipped onto a backpack, demonstrating its hands-free carrying option with an easy-open buckle.

5. Setup

5.1 Unboxing and Placement

1. Carefully remove the projector and all accessories from the packaging.
2. Place the projector on a stable, flat surface. Ensure there are no obstructions around the ventilation openings.
3. Position the projector at the desired distance from your projection surface (wall or screen). The image size will vary with distance.
4. Adjust the projector's angle using its integrated stand to achieve the desired projection height and direction. For ceiling projection, gently move the power cable to avoid obstruction before rotating the projector.

5.2 Power Connection

1. Connect the power adapter cable to the DC IN port on the projector.
2. Plug the other end of the power adapter into a working electrical outlet.

3. The projector will typically enter standby mode, indicated by a power indicator light.

5.3 Initial Roku TV Setup

Upon first power-on, you will be guided through the Roku TV setup process:

1. **Power On:** Press the power button on the projector or the remote control.
2. **Language Selection:** Choose your preferred language.
3. **Network Connection:** Select your Wi-Fi network from the list and enter the password. A stable internet connection is required for streaming.
4. **Roku Account:** You will be prompted to link the projector to an existing Roku account or create a new one. Follow the on-screen instructions. This step is crucial for accessing apps and content.
5. **Software Update:** The projector may check for and install software updates. Allow this process to complete without interruption.
6. **Home Screen:** Once setup is complete, the Roku TV home screen will appear, displaying your installed channels and available streaming options.

6. Operating

6.1 Power On/Off

- **To Power On:** Press the power button on the projector or the remote control.
- **To Power Off:** Press the power button on the projector or the remote control. The projector will enter standby mode. Unplug from the power outlet for complete power disconnection.

6.2 Navigating Roku TV

Use the provided remote control to navigate the Roku TV interface:

- **Directional Pad:** Use the arrow buttons to move between menu items and select options.
- **OK Button:** Confirms selections.
- **Home Button:** Returns to the Roku TV home screen.
- **Back Button:** Returns to the previous screen.
- **Volume Buttons:** Adjusts the projector's audio output.
- **Channel Shortcut Buttons:** Dedicated buttons for popular streaming services (if present on your remote).



Image: A visual representation of the Roku TV interface, showcasing various streaming applications and content available on the platform.

6.3 Streaming Applications

From the Roku TV home screen, you can:

- **Launch Apps:** Select an installed app (e.g., Netflix, Prime Video) to open it.
- **Add Channels:** Go to the "Streaming Channels" store to browse and add new apps (channels) to your home screen.
- **Search:** Use the search function to find movies, shows, actors, or specific channels.

6.4 Audio Settings

The projector's built-in speakers provide enhanced audio. You can adjust volume using the remote. For more advanced audio settings, navigate to the Roku TV settings menu.

7. Maintenance

7.1 Cleaning the Projector Lens

The projector lens is a critical component. Clean it carefully to maintain image quality.

- Use a soft, lint-free cloth specifically designed for optical lenses.
- Gently wipe the lens in a circular motion. Do not use abrasive cleaners, solvents, or excessive force.
- For stubborn smudges, a small amount of lens cleaning solution designed for optics can be applied to the cloth (not directly to the lens).

7.2 Cleaning the Projector Body

- Ensure the projector is powered off and unplugged.
- Wipe the exterior with a soft, dry cloth.
- Do not use liquid cleaners or sprays directly on the projector.

7.3 Carrying Case Care

- Wipe the exterior of the case with a damp cloth and mild soap if necessary. Air dry completely.
- Do not machine wash or tumble dry the case.

7.4 Software Updates

Roku TV regularly provides software updates to improve performance and add features. Ensure your projector is connected to the internet to receive these updates. Updates typically install automatically or prompt you for installation.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not working; projector in standby.	Check power connections; try a different outlet; press power button on projector/remote.
No image	Projector not powered on; lens cap on (if applicable); input source incorrect (if external device connected); focus issue.	Ensure projector is on; remove lens cap; check Roku TV home screen; adjust focus (if manual focus is available, otherwise it's auto).
No sound	Volume too low or muted; audio settings incorrect.	Increase volume; check mute status; verify audio output settings in Roku TV menu.
Wi-Fi connection issues	Incorrect password; router too far; network interference.	Re-enter Wi-Fi password; move projector closer to router; restart router; check for other devices causing interference.
Remote control not working	Batteries low/dead; line of sight blocked; remote not paired.	Replace batteries; ensure clear path to projector's IR receiver; re-pair remote if it's a Wi-Fi direct remote (check Roku documentation).

9. Specifications

Feature	Detail
Brand	Aurzen

Feature	Detail
Model	E1R
Connectivity Technology	Bluetooth, Wi-Fi
Special Features	Auto Keystone, Built-In Wi-Fi, Portable
Recommended Uses	Gaming, Home Cinema
Form Factor	Portable
Mounting Type	Tabletop Mount
Compatible Devices	Laptop, Smartphone, Tablet
Number of Items (Bundle)	2 (Projector, Carrying Case)
Carrying Case Dimensions	11.22" H × 5.24" Diameter (approx.)

10. Warranty and Support

Aurzen products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your product or visit the official Aurzen website. If you encounter any issues or have questions regarding your Aurzen E1R projector or carrying case, please contact Aurzen customer support through their official channels.
You can typically find support contact information on the manufacturer's website or within your product packaging.

© 2024 Aurzen. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HHDB41C3

More documents and user manuals: **https://manuals.plus/**