Danfoss 013G1232 Aveo Tamperproof Remote Sensor Installation Guide

ENGINEERING TOMORROW
Installation Guide
Danfoss Aveo® Tamper, RS / 015G4042
Danfoss Aveo® Tamperproof, remote sensor thermostatic sensors series

Contents

1 Installation
2 Remote sensor
3 Temperature Limitation
4 Theft protection
5 Scale cover
6 Documents / Resources
7 Related Posts

Installation

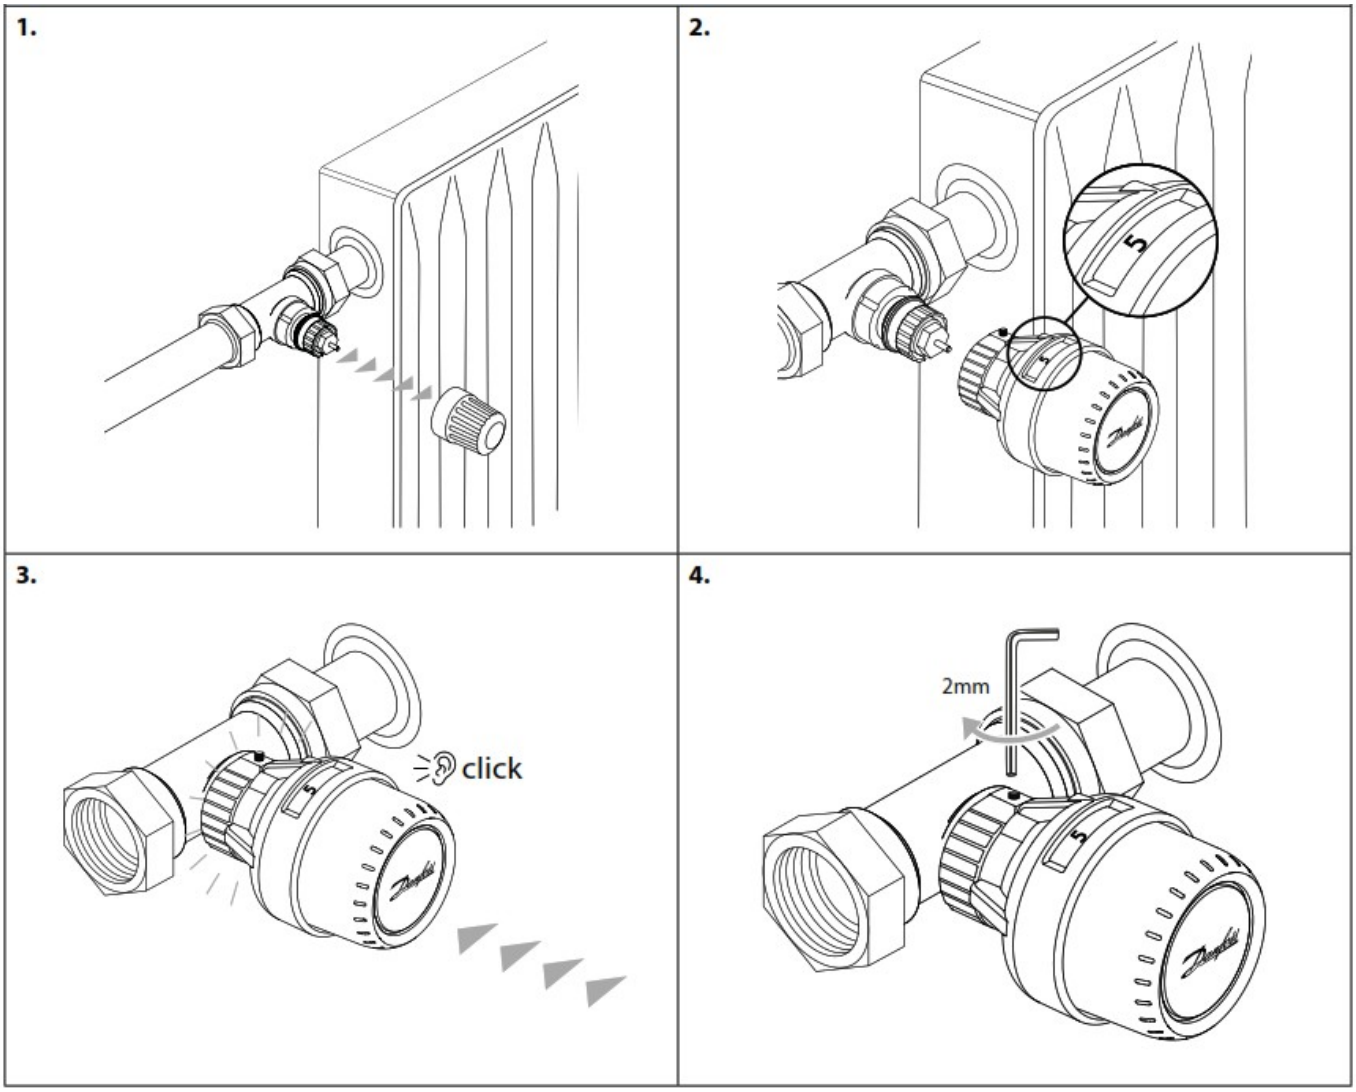

Remote sensor

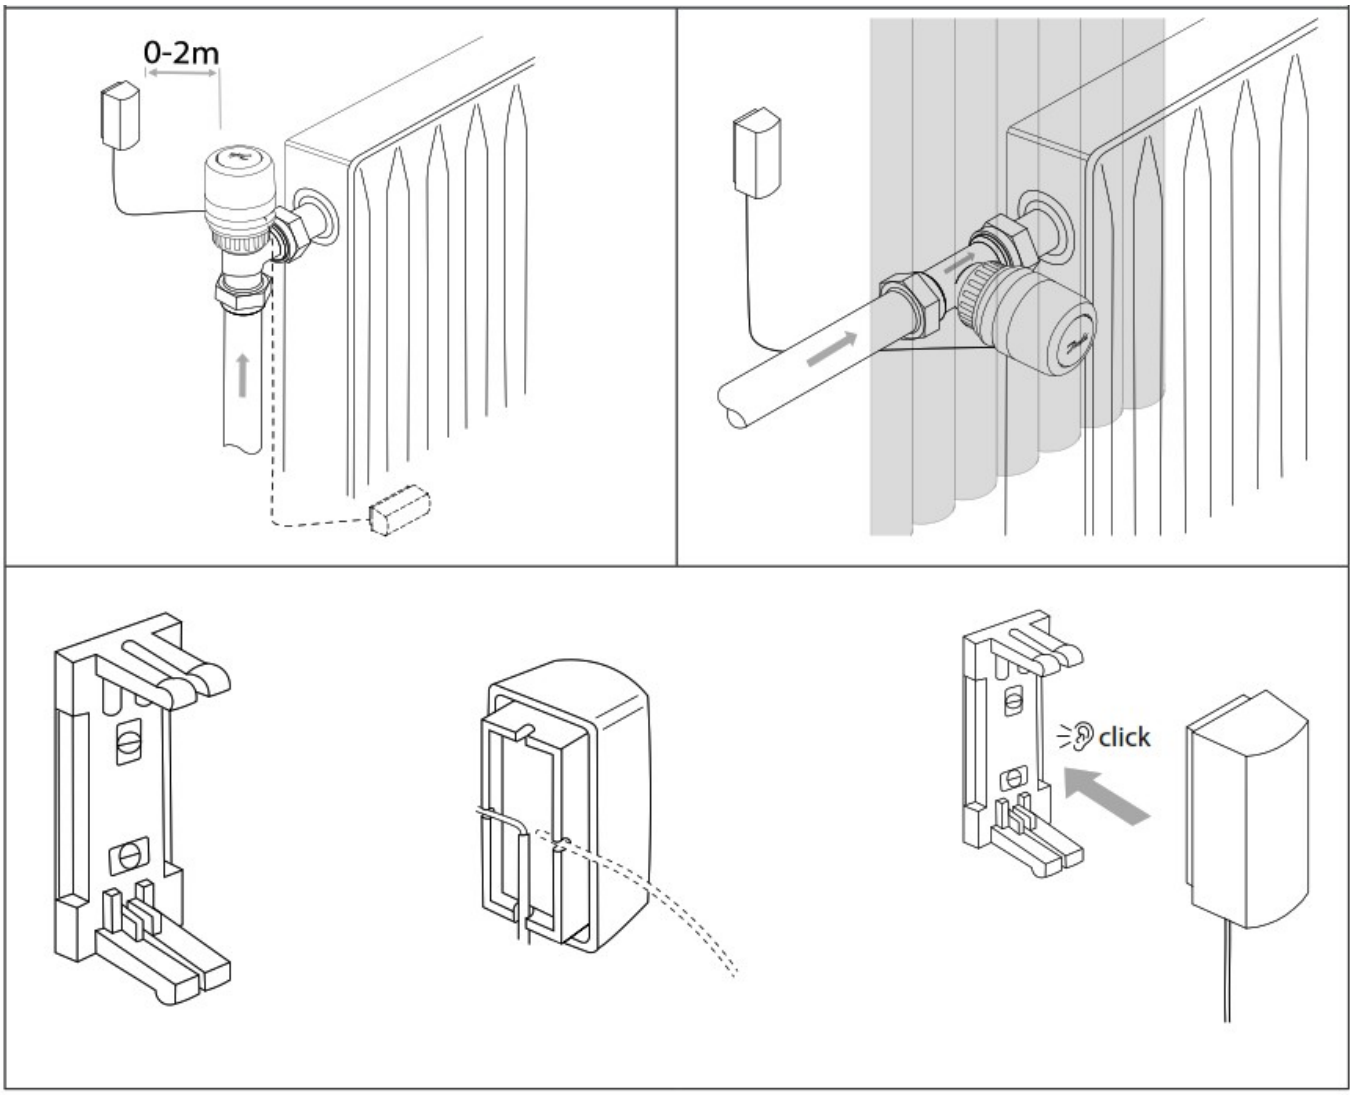

Temperature Limitation

(MAXIMUM)

1.

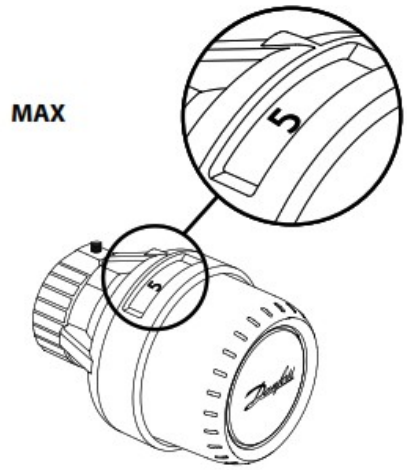

2.

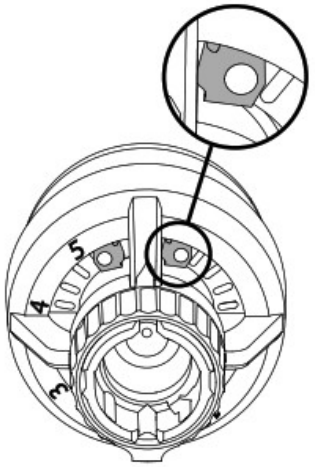

3.

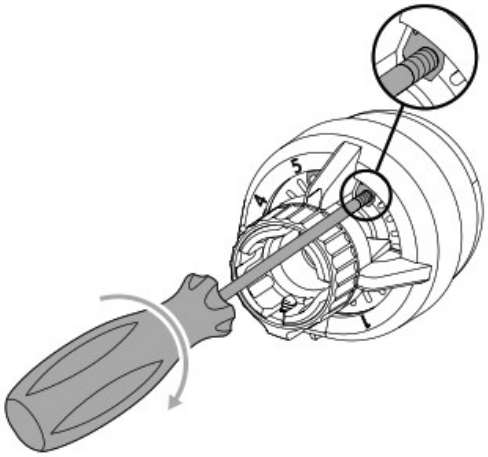

4.

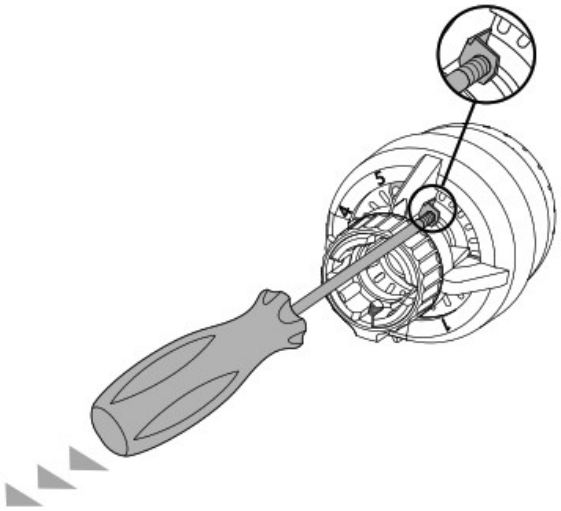

5.

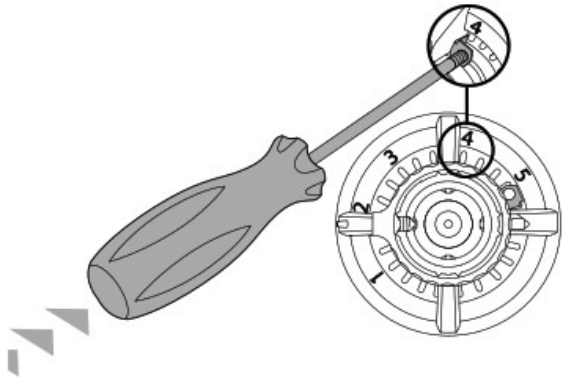

6.

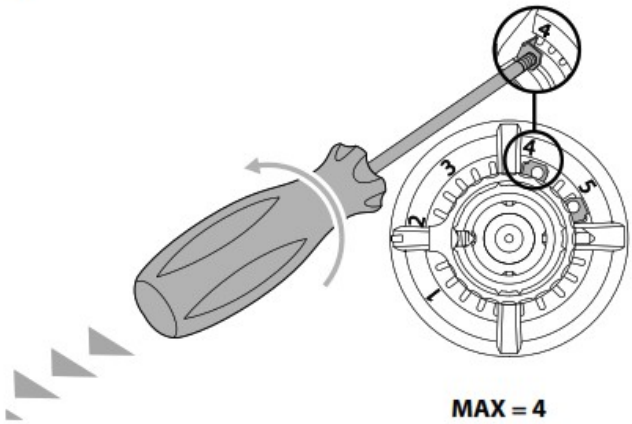

(MINIMUM)

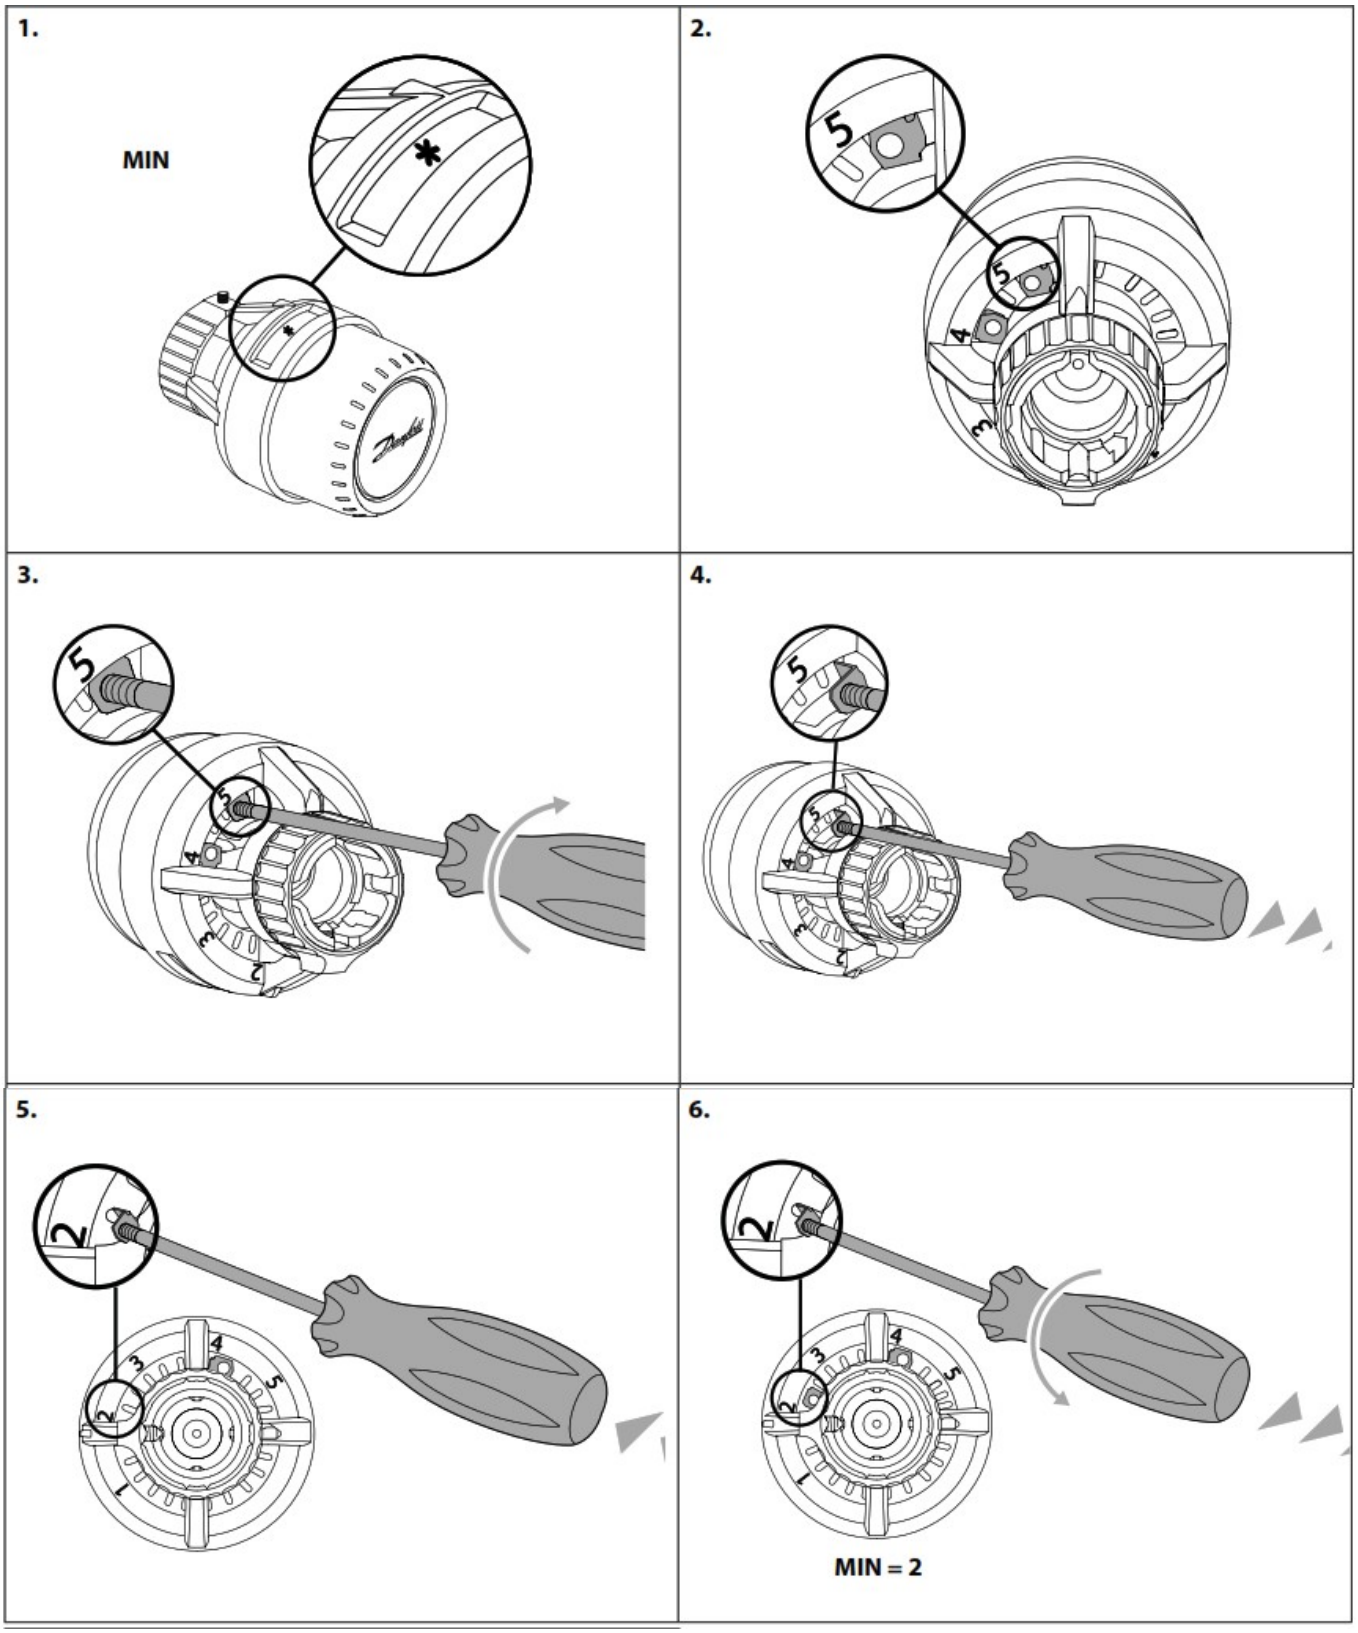

	Code no.
	013G1237
	013G1236

Theft protection

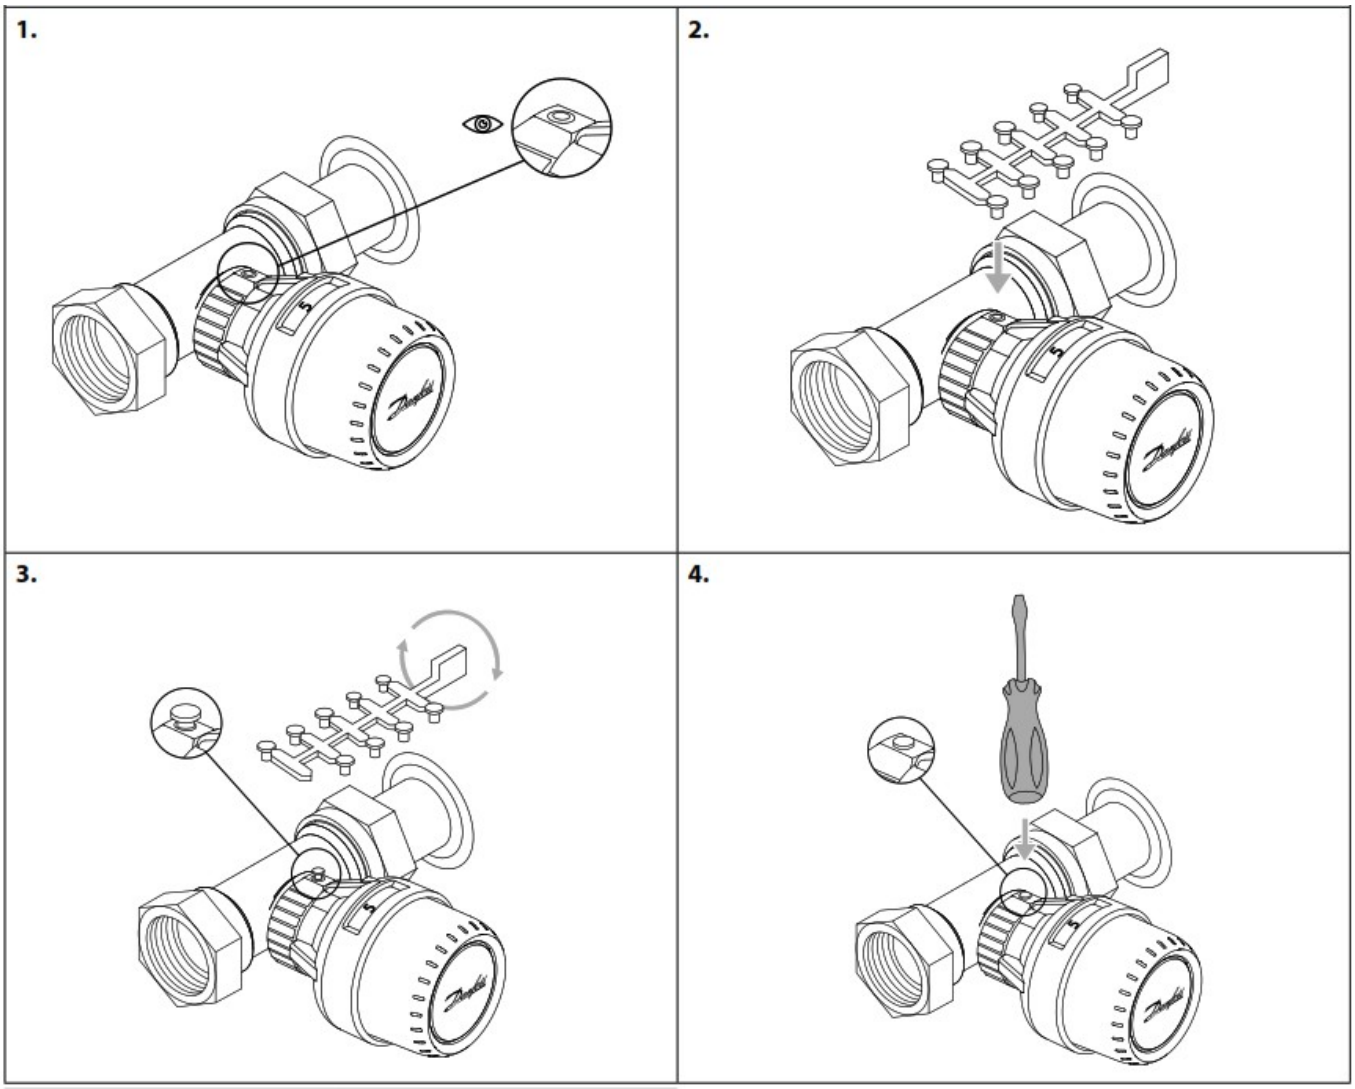

	Code no.
	013G1232 (20 pcs.)
	013G1236

Scale cover

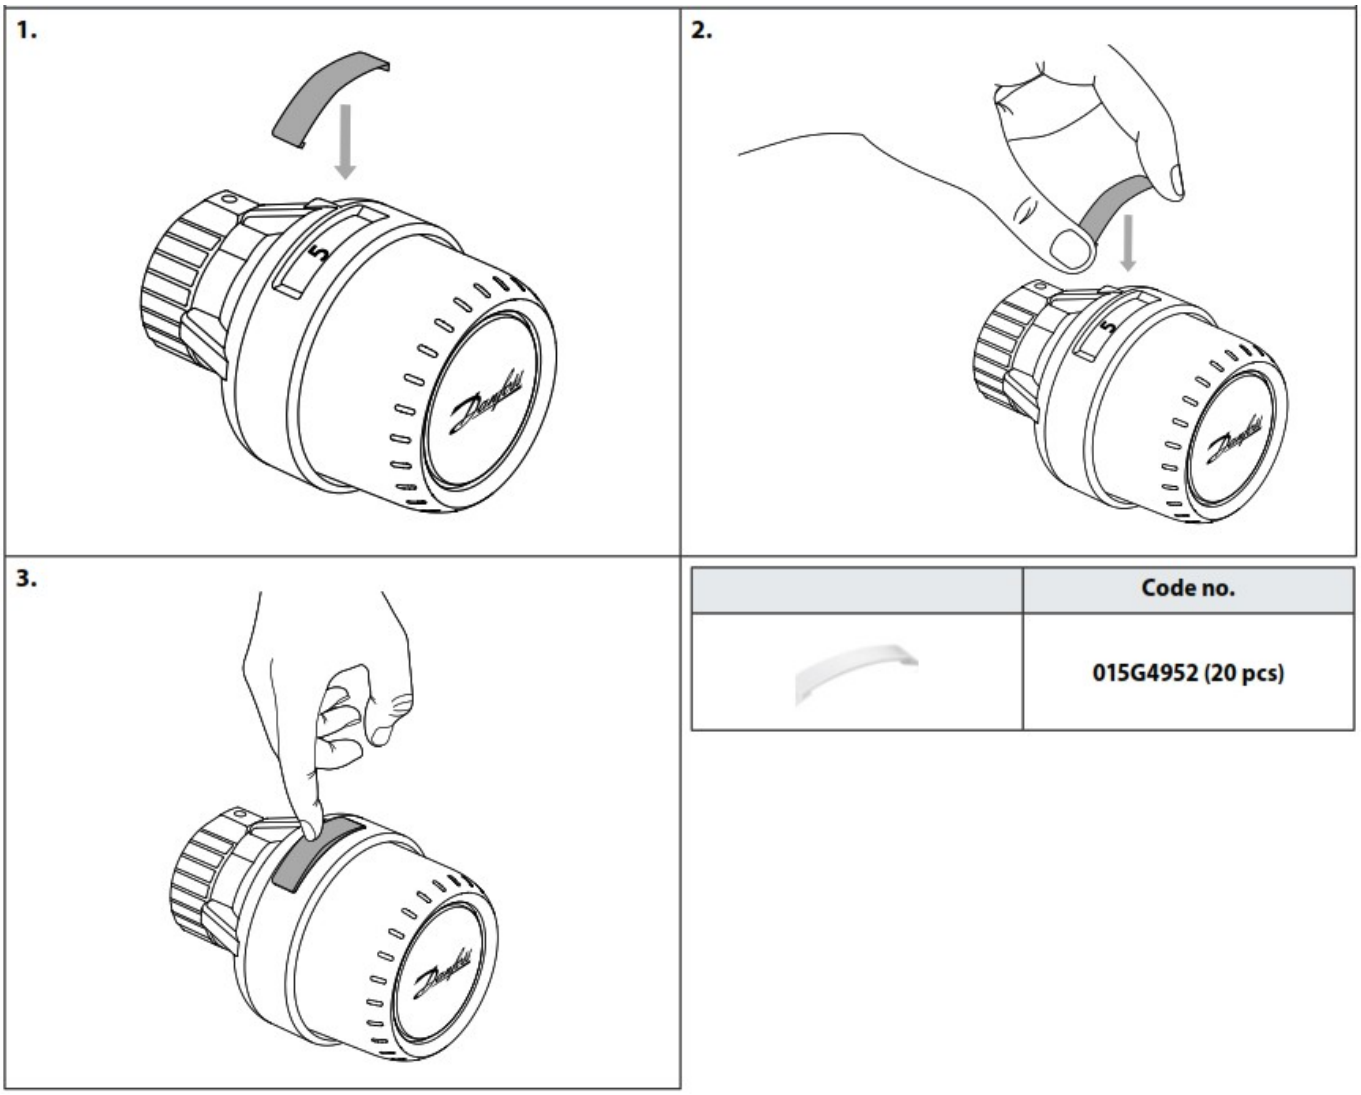

Danfoss A/S
Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

© Danfoss Climate Solutions | 2023.03
AI447467004488en-000101

Documents / Resources

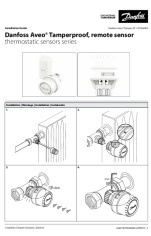	Danfoss 013G1232 Aveo Tamperproof Remote Sensor [pdf] Installation Guide 013G1232 Aveo Tamperproof Remote Sensor, 013G1232, Aveo Tamperproof Remote Sensor, Tamperproof Remote Sensor, Remote Sensor, Sensor

Manuals+.