Manuals+ — User Manuals Simplified.

EVERCADE EXP 2024C Standard Edition

EVERCADE EXP 2024C Standard Edition User Guide

Contents

EVERCADE EXP 2024C Standard Edition

PLUG

HOLD 2 SECONDS

R1
R2

L1
L2

MINI HDMI

POWER

PLAY

QUICKSTART GUIDE

FR: GUIDE DE DÉMARRAGE RAPIDE
IT: GUIDA RAPIDA
DE: SCHNELLSTARTANLEITUNG
ES: GUÍA DE INICIO RÁPIDO

EVERCΛDE® E**XP**

START

SELECT

GAME MENU

BEST IN
TATE

EVERCΛDE® E**XP**

START

SELECT

B

A

D-PAD

A BATTERY ICON WITH AN EXCLAMATION MARK INDICATES LOW POWER. CONNECT TO A POWER SOURCE TO RECHARGE AND RESUME PLAY.

START UP

SCREEN SAVE

LOW BATTERY
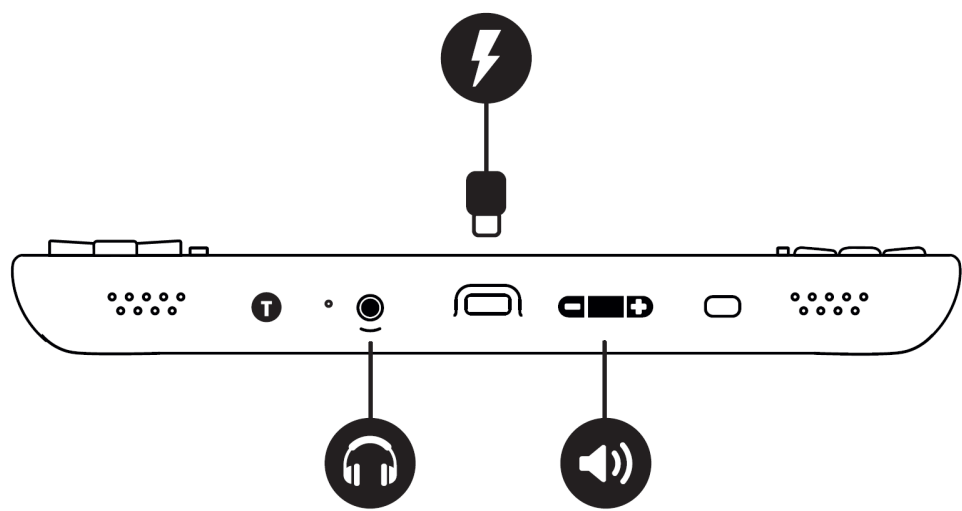
DO NOT COVER REAR VENTS
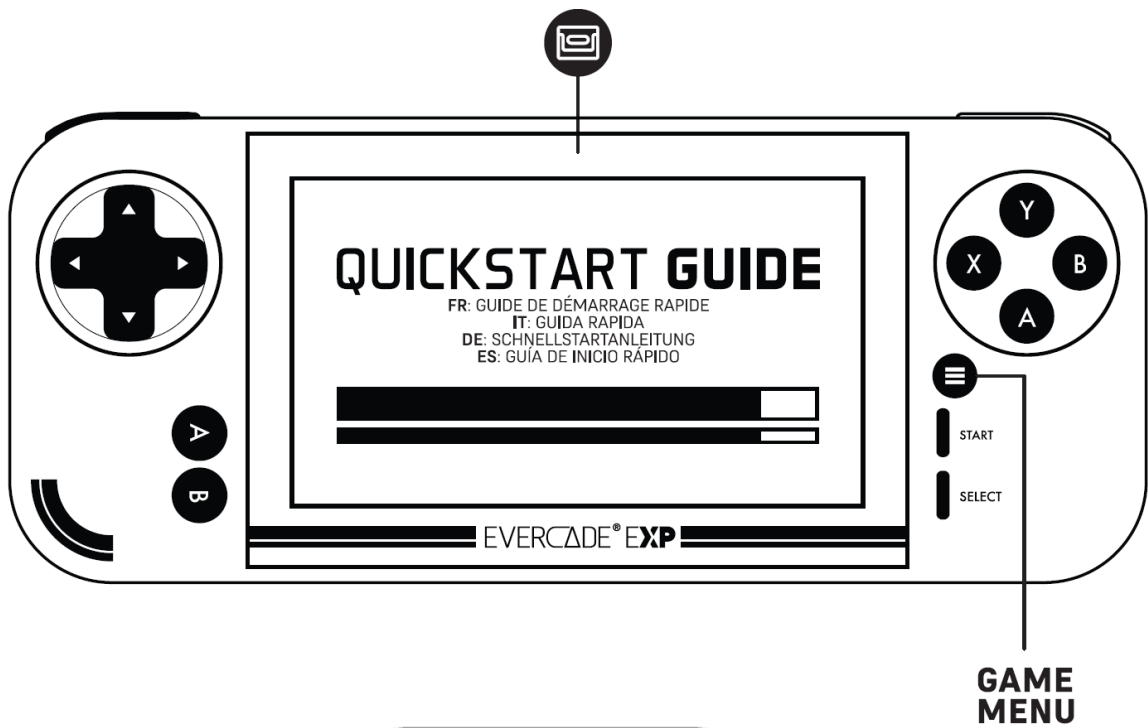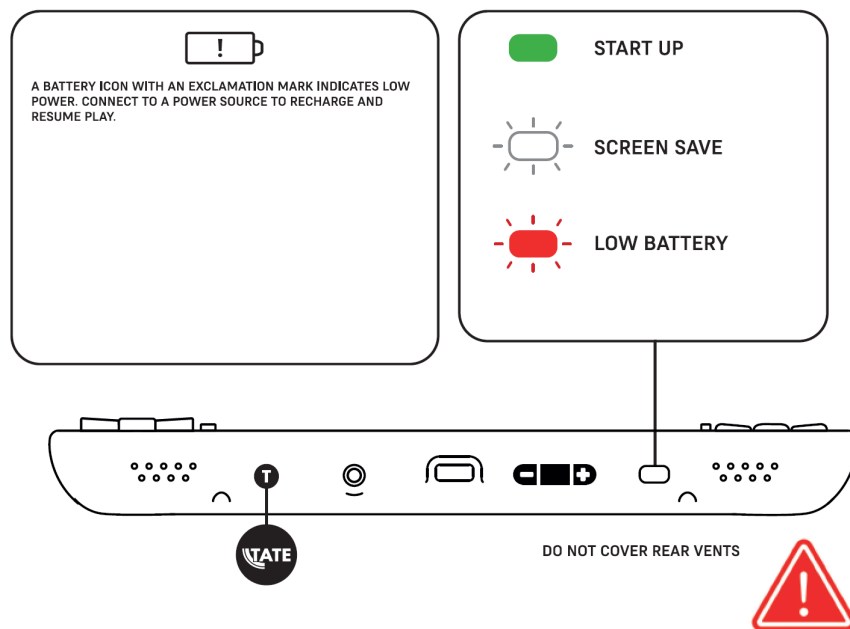
Dot Not Cover Rear Vents

DECLARATION OF CONFORMITY
HEREBY, BLAZE ENTERTAINMENT LTD, DECLARES THAT THE RADIO EQUIPMENT TYPE WLAN IS IN COMPLIANCE WITH DIRECTIVE 2014/53/EU. THE FULL TEXT OF THE EU DECLARATION OF CONFORMITY IS AVAILABLE AT THE FOLLOWING INTERNET ADDRESS: **HTTPS://EVERCADE.CO.UK/SUPPORT**

1	SUPPORTING MODE(S)	WLAN 2.4G			
2	TEST MODULATION	WLAN(DSSS/OFDM)			
3	DEVICE CLASS	B			
4	OPERATING FREQUENCY RANGES	BAND	Tx (MHz)	Rx (MHz)	MAX FREQUENCY POWER
		WLAN 2.4G	2412-2462		17dBm

A COMPATIBLE USB AC ADAPTER (NOT INCLUDED) IS REQUIRED TO USE THIS CONSOLE. USE A 5V/1-3A OUTPUT AC ADAPTER WITH A USB PORT.
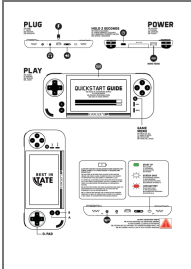
evercade.ca.uk/support

BLAZE® ENTERTAINMENT | EVERCADE®
© 2024 Blaze Entertainment Ltd.

Documents / Resources

EVERCADE EXP 2024C Standard Edition [pdf] User Guide
2024C, EXP 2024C Standard Edition, EXP 2024C, EXP, 2024C

References

- **User Manual**