FANTECH Maxfit61 RGB Mechanical Keyboard User Manual

FANTECH Maxfit61 RGB Mechanical

Keyboard User Manual

FANTECH

ENGLISH

MAXFIT61
RGB MECHANICAL KEYBOARD

What's included in the box ⓐ
1. FANTECH MAXFIT61 Mechanical Keyboard
2. Switch plugger
3. Keycaps plugger
4. Detachable Type-C cable
5. User manual

System requirements ⓑ
1. Operating systems: Windows XP/7/8/10; MAC OS
   (Software only works with windows)
2. One free USB 2.0/3.0 port

USER MANUAL

Contents

Instruction manual

Thank you for purchasing FANTECH MAXFIT6 l MK857 Mechanical Keyboard.
The MAXFIT61 features hot-swappable switches for Cherry, Gateron, and Icily branded switches. There ls no need to Install any drivers for your first use.
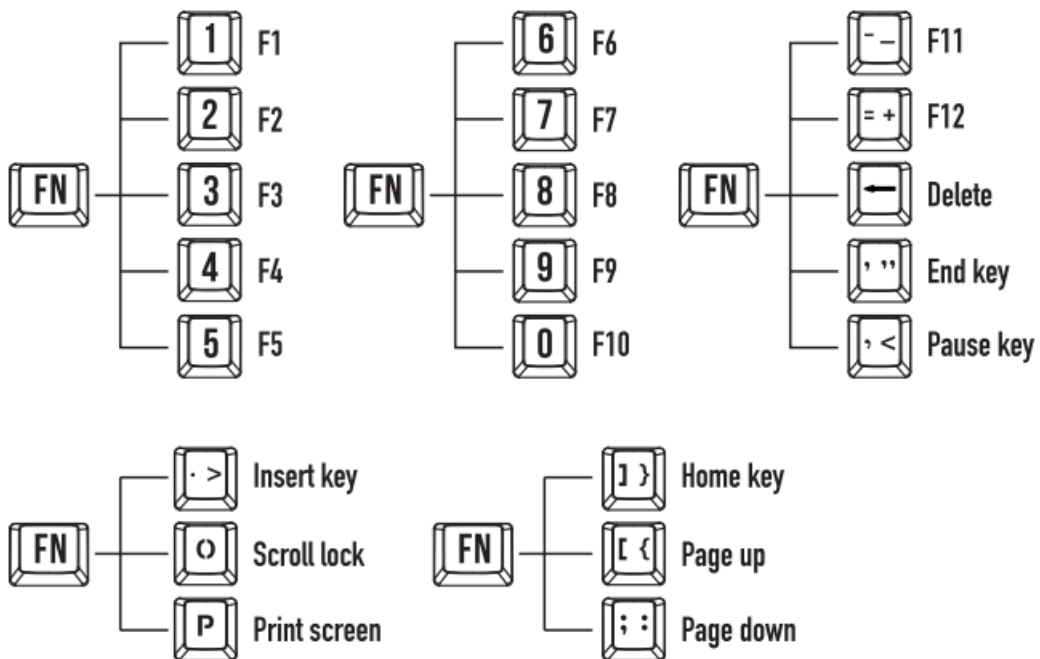
Technical specification

- Product Name: MAXFIT61 MK857 RGB Mechanical Keyboard
- Numbered keys: 611,:eys
- Switch type: Mechanical
- Anti-Ghosting: All keys
- Size: 294(L)xl □ J(W)x42IH)mm
- Weight: 566gr
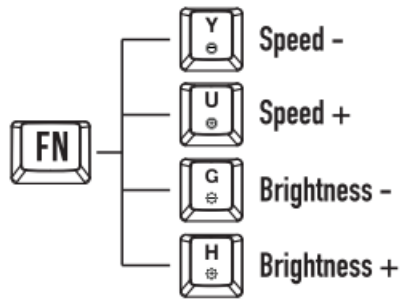
Size

Secondary functions

Functions

FN		
1	F1	
2	F2	
3	F3	
4	F4	
5	F5	

FN		
6	F6	
7	F7	
8	F8	
9	F9	
0	F10	

FN		
– _	F11	
= +	F12	
←	Delete	
' ''	End key	
, <	Pause key	

FN
- · > Insert key
- O Scroll lock
- P Print screen

FN
-] } Home key
- [{ Page up
- ; : Page down

Multimedia

FN
- Tab Mute
- Q Volume-
- W Volume+

FN
- E Previous track
- R Play/Pause
- T Next track

Lighting

FN
- N Ñ RGB ON/Off
- M Ñ Spectrum mode selector

Windows lock

FN — Win 🔒 Windows key lock

Adjusting Brightness and speed

Y — Speed –

FN — U — Speed +

G — Brightness –

H — Brightness +

Note: The tab keys and capslock will blink
3 times when the minimum or maximum
value of the LED speed or LED brightness
is reached.

Reset

FN — Z — Reset

Magic FN

FN — Caps — Magic FN

The magic key can copy the Fuction keys that gives you a quick access to your media
player, custom function etc. By using FN+Caps lock key, you get a quick access to
multimedia key, home page, custom function, etc.

Note: The FN keys will light white LED when magic FN is ON

Download our Manual / Software from our official website www.lantechwortd.com

Software

Device

In this bar you can customize your keyboard keys using these two options, APP mode and On-board editor.

APP mode

* Select each key for function replacement.
* You can choose either remap key, macro, multimedia keys , and etc.
* After choosing your desire function, then press OK.

Note: In app mode, the function of button customization can only be used when the app is opened. The customized content can only be saved on the computer and it does not support downloading to the keyboard.

On-board Editor

* Select each key for function replacement.
* You can choose either remap key, macro, multimedia keys, and etc.
* After choosing your desire function, then press OK.

Note: In on-board editing mode, the interactive light effect is invalid. The key can be downloaded and saved to the keyboard according to the customized content. The board can be divided into two layers, the default layer and the FN1 layer.

Default layer: Press the key directly to send the code.
FN1 layer: Select a key and set it to FN1 then send the code by combining with custom FN1 key

Lighting

* You can select up to 16 preset illumination modes.
* Some of illumination modes, you can customize the speed and the brightness

Macro

* To make a new macro, select macro bar then add the macro key in the macro group section and then input the action.
* The command recording will start just after you press the record button, you can choose the recording delay.
* To save, press stop button to save your macro.
* You can modify the macro recording, by selecting the action input in the macro record section, either you can input more macro action, or you can change the key that you want in the property section, then press modify.

Note: You can only input a max of 20 actions.

How to use

Change switches and keycaps

1. **Remove keycap**
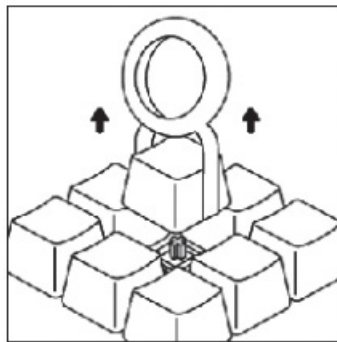
Use the Keycap puller tool to clamp on a keycap and pull upward. to detach keycap from switch. Sometimes the switch may come out as well if the keycap is secured tightly on switch, which is normal. For longer keys such as the space bar, always clomp and remove from the MIDDLE of the keycap.

2. **Remove switch**
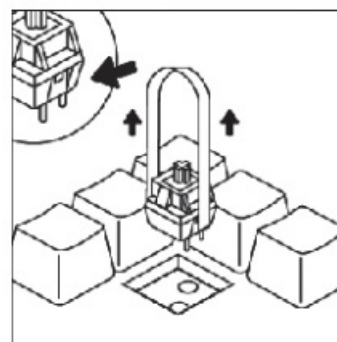
Use the switch puller to push in the two tabs located on the top and bottom side of the switch. Once they ore pushed in, pull upwards to remove switch from keyboard case. Warning: It is very easy to scratch your keyboard case with lilies tool, so take caution when removing switches!
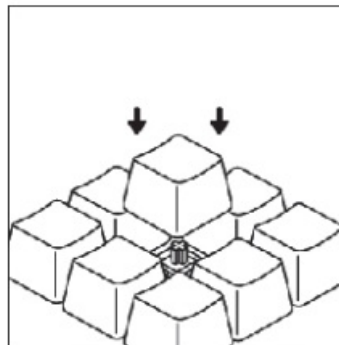
3. **Insert switch**
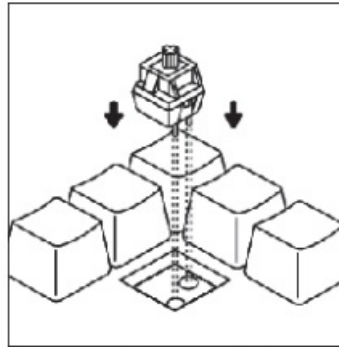
When inserting o new switch, align switch to holes on the keyboard, and insert straight dove. There should be minimal resistance and the switch should pop into the Frome of the keyboard. It is recommended at this time to hove o Notepad ready on your PC, open it and make sure the switch works twine you press It. If the switch does not light up, or the key doesn't show up on your PC when you press It, then the switch was not inserted properly. Remove switch, and make sure pins ere straight then insert ongoing.
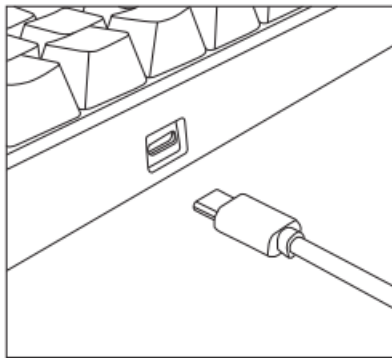
• Note: II is safe lo swop switches who your keyboard I! plugged in to your PC
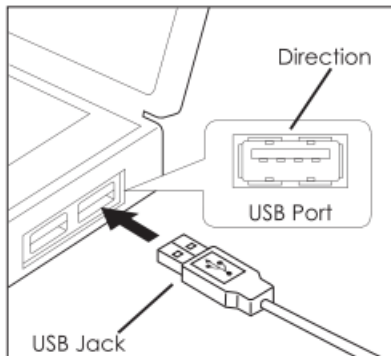
4. **Insert keycap**

Once you have confirmed the switch was properly inserted, snap back In the appropriate keycap.
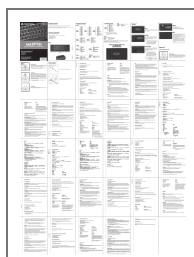
How to connect

Plug in the Type-C cable to the keyboard.

Direction

USB Port

USB Jack

Connect the keyboard to computer by inserting
USB jack to your computer USB port.

Documents / Resources