iclever IC-BK10 Wireless Keyboard Manual: Pairing, Connection & Troubleshooting

The iclever IC-BK10 Wireless Keyboard is a versatile and reliable keyboard that allows users to connect up to three devices via Bluetooth. It boasts a long battery life of up to 90 hours of uninterrupted work time and can be charged in under two hours. This user manual provides detailed instructions on how to pair, connect, and troubleshoot the keyboard. It also includes information on the keyboard's specifications, power-saving mode, and keys and functions. The manual also provides tips on how to care for the keyboard and contact support in case of any issues. The keyboard is compatible with iOS, macOS, Windows, and Android devices. However, it is not fully compatible with Windows 7 PC/laptop, Bluetooth adapter, Mac mini, Samsung Smart TV, and Nokia phones. This manual is a comprehensive guide for users who want to get the most out of their iclever IC-BK10 Wireless Keyboard.

Contents [**hide**]

iclever

iclever IC-BK10 Wireless Keyboard

iclever IC-BK10 Wireless Keyboard

Thank you for choosing receiver! Please read this user manual carefully and save it for future reference.

Package Contents

- 1 x Wireless Keyboard
- 1 x Charging Cable
- 1 x Keyboard Cover
- 1 x User Manual

Specifications

Bluetooth Specification	Bluetooth 5.1
Dimensions	366x125x16.2mm
Operating Range	< 10 meters
Stand-by Time	90 days
Charge Time	< 2 hours
Uninterrupted Work Time	90 hours
Lithium Battery Capacity	280 mAh
Key Life	3 million clicks
Front Side of Keyboard	ABS
Back Side of Keyboard	Stainless steel
Frequency Band	2402MHz – 2480MHz
Maximum Transmission power	0 dBm

Product Overview
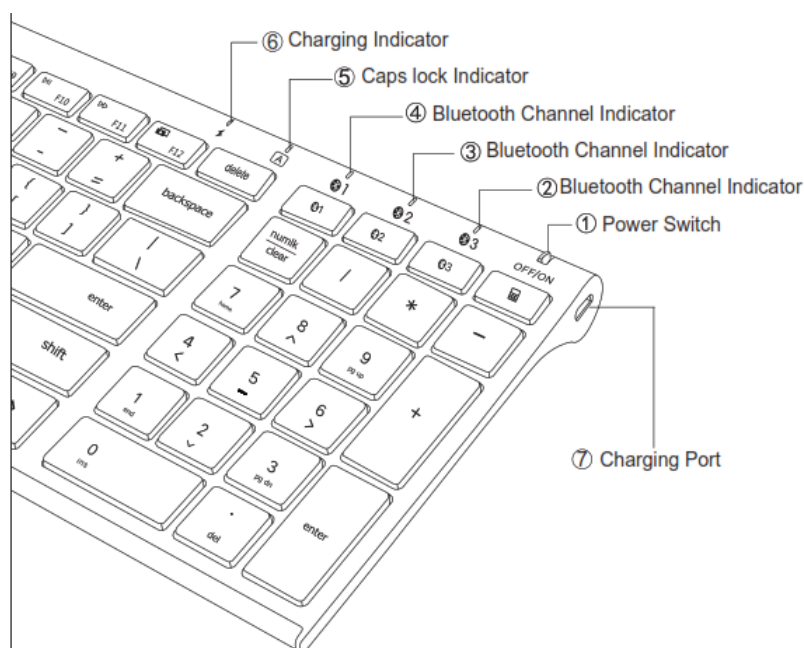
① Power Switch: slide the power switch to ON/OFF to turn on/off.

②③④ Bluetooth Channel Indicators: when turning on the keyboard, ②③④ indicators will be on for 3s. ⑤ Caps Lock Indicator: press the "caps lock" key to switch between uppercase and lowercase and the indicator will light up when you switch to uppercase.

⑥ Charging Indicator:

- stay in red when charging.
- turn green after fully charged (about 2 hours fully charged).
    ⑦ Charging Port: for charging.

Guide to Use

A. How to pair with Bluetooth devices?
Pair with 1st device
Step 1. Charge the keyboard for 2 hours.
Step 2. Slide the power switch to "ON" to power on the keyboard.

Step 3. Hold and press the key of [01] for 5 seconds to pairing mode in channel 1; the Bluetooth channel indicator will flash blue and start to search for the available Bluetooth device.
Step 4. On your Bluetooth device, find the Bluetooth name "clever IC-BK10 Keyboard" and click to connect it.

Pair with 2nd device

Step 1. Hold and press the key of [02] for 5 seconds to pairing mode in channel 2; the Bluetooth channel indicator will flash blue and start to Search for the available Bluetooth device.
Step 2. On your Bluetooth device, find the Bluetooth name "clever IC-BK10 Keyboard" and click to connect it.

Pair with 3rd device

Step 1. Hold and press the key of [03] for 5 seconds to pairing mode in channel 3; the Bluetooth channel indicator will flash blue and start to search for the available Bluetooth device.
Step 2. On your Bluetooth device, find the Bluetooth name "clever IC-BK10 Keyboard" and click to connect it.

Connect with iClever Bluetooth Keyboard in the different systems:

► For Windows 10:
Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Click "iClever IC-BK10 Keyboard" to connect.
► For MacBook/iMac:
Click System Preferences > Bluetooth > Click "iClever IC-BK10 Keyboard" to connect.
► For iPad/iPhone:
Click Setting > Bluetooth > Click "iClever IC-BK10 Keyboard" to connect.

Notes:
—Auto re-connect function: the keyboard will connect with the last-used device automatically.
—Do not connect it via a Bluetooth adapter.
—If fail to connect, please read the FAQ.

B. How to switch among the connected devices?

Press the key [01] / [02] / [03] to switch among the connected devices.

C. How to repair?
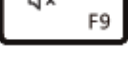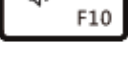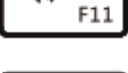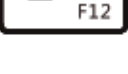
Step 1. Press key [01] / [02] / [03] to choose the channel 1/2/3 you want to repair.

Step 2. Hold and press key of [01] / [02] / [03] for 5 seconds to re-pair AGAIN.
Step 3. On your Bluetooth device, find the Bluetooth name "clever IC-BK10 Keyboard" and click to connect it.

Keys and Functions

The table below describes special key combinations for different operating systems.

Function Keys	iOS	Android	Windows	Mac OS	Windows
Way to use	Press directly	Press fn +	Press fn +	Press directly	Press directly
	Brightness –	Brightness –	– (WinBrightness dows 10)	Brightness –	Fl
	Brightness +	Brightness +	Brs (Windowsig htnes + 10)	Brightness +	F2
	Home	Home or N/A	Web browser	Mission control	F3
	Switch apps	N/A	Switch apps	Switch apps	F4
	Search	Search in browser or N/A	Search	Search	F5
	Previous track	Previous track	Previous track	Previous track	F6
	Play/pause	Play/pause	Play/pause	Play/pause	F7
	Next track	Next track	Next track	Next track	F8
	Mute	Mute	Mute	Mute	F9
	Volume –	Volume –	Volume –	Volume –	F10
	Volume +	Volume +	Volume +	Volume +	Fl 1

	Screenshot	Screenshot	Screenshot	Screenshot	F12

Special Key	Description
	Press In" + "esc" keys to turn on/off fn lock function. For iOS and Mac users. your keyboard has by default access to the Media and Hotkeys such as Volume Down, Volume Up, Play/Pause, and so on. If you prefer to have direct access to F-keys simply press In" + "esc" keys to swap them.
	The "fn" key is used in combination with other keys to access special features.
	Switch function: press this key to Bluetooth Channel 1. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 1 indicator will flash blue to pairing mode.

esc 🔒	Switch function: press this key to Bluetooth Channel 2. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 2 indicator will flash blue to pairing mode.
	Switch function: press this key to Bluetooth Channel 3. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 3 indicator will flash blue to pairing mode.
fn	It works as a calculator function when your system is Windows. **NOTE:** works for Windows only.
	It works as "win" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
❸1	It works as "alt" when your system is Windows or Android. It works as "command" when your system is iOS or Mac OS.
	It works as "ctrl" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
❸2	
❸3	
▦	
win alt ⌥	
alt cmd ⌘	
ctrl alt ⌥	
numlk clear	It works as "Number lock" when your system is Windows and Android. It works as "clear" when your system is Mac OS. **NOTE:** not works for iOS

System Requirements

- ► iOS 9.0 or late
- ► macOS 10.12 or later
- ► Windows 8 or later with Bluetooth HID Profile
- ► Android 6.0 or late

NOTE:

it is not fully compatible with Windows 7 PC/laptop, Bluetooth adapter, Mac mini, Samsung Smart TV, and Nokia phones.

Power Saving Mode

The keyboard will enter power saving mode after 30 minutes of inactivity.

Press any key and wait for 3 seconds to activate it.

Note: there may be a delay in typing when wake up the keyboard.

Charge the Keyboard

- Charge the device with the included USB cable.
- Output: DC 5V/200mA; USB charger is not included.
- In the charging, the indicator will stay in red and turn green after fully charged. Generally, it takes about 2 hours to get fully charged.

Tips

- Keep away from oil, chemical, liquid, and snacks.
- Keep away from sharp objects.
- Keep away from metal and other sources of the wireless signal.

Contact

- For more questions, please contact us by **support@iclever.com**

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to The following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

DOWNLOAD RESOURCES

- **iclever IC-BK10 Wireless Keyboard** [pdf] User Manual IC-BK10 Wireless Keyboard, IC-BK10, Wireless Keyboard
- **Read more: https://manuals.plus/iclever/ic-bk10-wireless-keyboard-manual#ixzz7db8RlnJj**

FAQ'S

How do I connect my iClever BK10 keyboard?

Press and hold the Bluetooth key for 10 seconds, then choose "iClever IC-BK10 Keyboard" on your device to connect it.

Does the keyboard have backlight?

No.

Does the keyboard work with Mac OS?

Yes, it does. But you need to download a driver from the Internet.

How long can I use the keyboard after fully charged?

About 90 hours.

Can I use the keyboard in a room without WiFi?

Yes, you can. But you need to connect it with WiFi to download app firstly.

Why is my Iclever keyboard not working?

Restart your PC/laptop and iClever keyboard. Verify the product or receiver is connected directly to the computer and not to a hub, extender, switch, or something similar. Move the device closer to the USB receiver. If your receiver is in the back of your computer, it may help to relocate the receiver to a front port.

How long does the Iclever keyboard take to charge?

When you do need to plug the keyboard in, it takes about two hours to fully charge with the included micro-USB cable.

Why has my wireless keyboard stopped working?

Replace the batteries in the keyboard and/or mouse. Reconnect the devices by pressing the reconnect button on the wireless receiver, and on the keyboard and mouse. Failing to reconnect wireless devices after changing the batteries is the most common cause of wireless keyboard and mouse failures.

How do I clean my Iclever keyboard?

You can use a cleaning wipe to get the large spaces and the underside of the keyboard. Finally, go back over the entire keyboard with a lint-free cloth to remove any remaining dust and to dry the device off. The price for a Bluetooth keyboard varies based on design and extra features.

How do you screenshot on a Iclever wireless keyboard?

The PrtScr function is on the F12 key. Please try to press fn+ F12 keys or F12 key to activate the print screen function.

How do I update my keyboard drivers?

In the search box on the taskbar, type device manager, then select Device Manager from the list of results. In the list of hardware categories, find the device that you want to update, and then double-click the device name. Click the Driver tab, click Update Driver, and then follow the instructions.

How do I turn on Iclever?

Power on: Switch the button to the "ON" direction. Then the LED indicator flashes blue for 1 second, and the colorful lights are on.
Shutdown: Switch the button to "OFF" direction, and the headphone is turned off. The LED indicator flashes blue for 1 second and then goes off.

How can I contact support for the iClever IC-BK10 Wireless Keyboard?

For more questions, please contact us by support@iclever.com.

Does the iClever IC-BK10 Wireless Keyboard have a backlight?

No, it does not have a backlight.

How do I charge the iClever IC-BK10 Wireless Keyboard?

Charge the device with the included USB cable. Output: DC 5V/200mA; USB charger is not included.

How do I switch among connected devices on the iClever IC-BK10 Wireless Keyboard?

Press the designated key to switch among connected devices.

How do I pair the iClever IC-BK10 Wireless Keyboard with a Bluetooth device?

Please refer to the pairing instructions in the user manual.

Can the iClever IC-BK10 Wireless Keyboard connect to a Windows 7 PC/laptop, Bluetooth adapter, Mac mini, Samsung Smart TV, or Nokia phone?

No, it is not fully compatible with these devices.

What systems is the iClever IC-BK10 Wireless Keyboard compatible with?

The keyboard is compatible with iOS, macOS, Windows, and Android devices.

What systems is the iClever IC-BK10 Wireless Keyboard compatible with?

The keyboard is compatible with iOS, macOS, Windows, and Android devices.

How long does it take to charge the iClever IC-BK10 Wireless Keyboard?

The keyboard can be charged in under two hours.

What is the battery life of the iClever IC-BK10 Wireless Keyboard?

The keyboard boasts a long battery life of up to 90 hours of uninterrupted work time.

How many devices can the iClever IC-BK10 Wireless Keyboard connect to via Bluetooth?

The keyboard can connect up to three devices via Bluetooth.

▶ 00:00 ────────────────── 00:00 🔊 ⛶

s/2022/07/iclever-IC-BK10-Wireless-

iclever

iclever IC-BK10 Wireless Keyboard
www://iclever.com/

Documents / Resources

	iclever IC-BK10 Wireless Keyboard [pdf] User Manual IC-BK10 Wireless Keyboard, IC-BK10, Wireless Keyboard