Manuals+ — User Manuals Simplified.

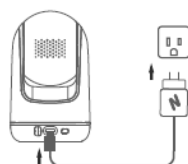# JOOM VB803 Wireless Baby Monitoring System User Guide

Contents

JOOM VB803 Wireless Baby Monitoring System

Quick Start

NOTE: Use only the power adapters included in the package.

Step 1

Step 2

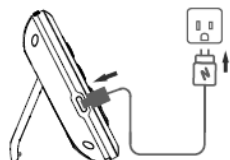**Step 3**
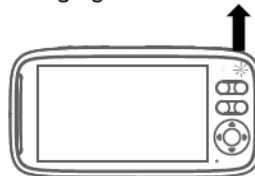
Check power blue LED ON
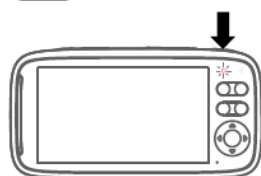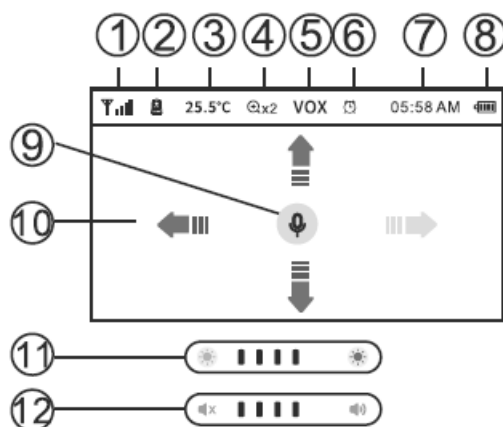
Check charging blue LED ON

Press and hold for 3s

Check power red LED ON

Status Bar

1. Signal Strength Indicator
2. Channel Selected
3. Temperature Of The Baby's Room
4. Zoom Level
5. VOX Function Active
6. Alarm "Timer Active
7. Current Time
8. Battery Power
9. PTT Function Active
10. Pan & Till Function Active
11. Backlighl Brightness Bar
12. tilume Level Bar

Baby Unit
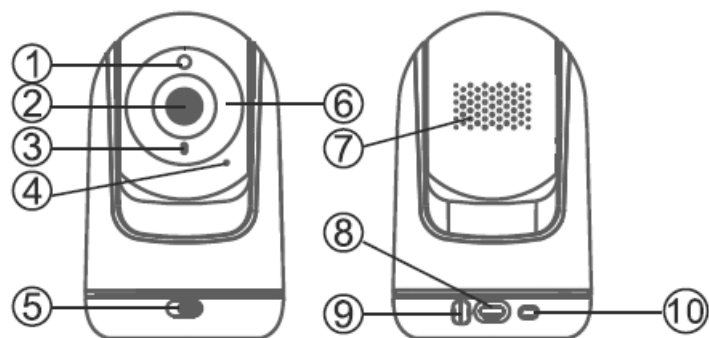
1. Light Sensor
2. Camera Lens
3. Power LED Indicator
4. Microphone
5. ON / OFF Switch
6. Infared LEDs
7. Speaker
8. DC Jack IN
9. Temperature Sensor
10. PAIR Button

Parent Unit
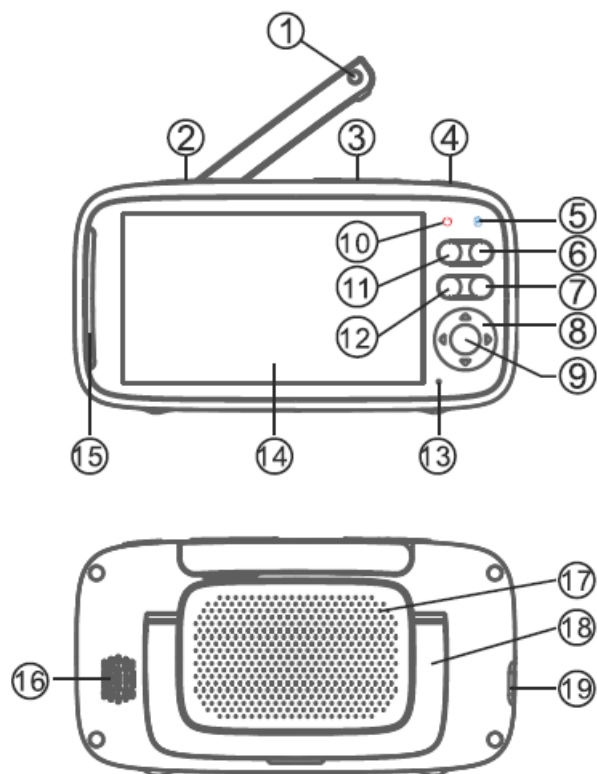
1. Antenna
2. Brightness Buttons
3. Volume Buttons

4. Power ON / OFF/ Sleep Button

5. Charging LED Indicator

6. Lullaby Control Button

7. Return Button

8. Navigation Buttons

9. Menu / OK Button

10. Signal LED Indicator

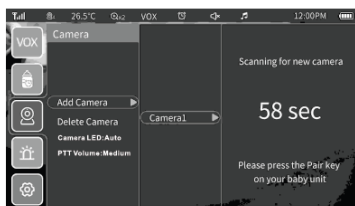11. PTT Button

12. ZOOM Button

13. Microphone

14. LCD Screen

15. Volume Level LED

16. Speaker

17. Battery Compartment

18. Kickstand

19. DC Jack IN

PAIRING

The Baby Unit is pre-registered and connected to your Parent Unit.If you need to pair Baby Unit and Parent Unit again, do the following:

Select MENU > Camera > Add Camera > OK.

Please short press PAIR button on Baby Unit.

Safety Instructions

- An adult is required to install. Keep small parts away from the children when assembling.

- This product is not a toy. Do not allow children to play with it.

- This baby monitor is not a substitute for responsible adult supervision.

- Do not place the baby unit or cables in the cot or within arm's reach of the baby (at least 1 meter away).Keep the cords out of the reach of children.

- Do not use the baby monitor near water or a heat source.

- Only use the power adapters provided.

- Do not touch the plug contacts with sharp or metal objects.

- This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

Specification

General:	
RF Frequency:	2400 MHz – 2483 MHz
Modulation Mode:	GFSK
Spread Spectrum:	FHSS
Operating Temperature:	-10 to +45°C
Operating Humidity:	<85%
Transmission Range:	Up to 1000feet in open field
Monitor:	
LCD Display:	5″ IPS LCD
Resolution:	1280X720 pixel
Battery:	3050mAh Li-ion 3.BV rechargeable
Duration(Screen ON):	8 Hours (3 Level Led backlightl
Duration(Audio-only mode):	16 Hours (3 Level volume)
Time To Full Charge:	5 Hours
Power Adapter:	Input: 100-240VAC,50-60Hz; Output: 5V/1.2A ,Type C
Camera:	
Sensor:	CMOS 1280X720 pixel
Vertical Turning Angle:	90° up, 45° down
Horizontal Turning Angle:	165° left, 165° right
Night Vison:	8 IR LEDs
Power Adapter:	Input: 100-240VAC,50-60Hz; Output: 5V/1.2A,Type C

Documents / Resources

VB803
WIRELESS BABY MONITORING SYSTEM
SMART | SECURE | PRIVATE

User Manual

Version 1.0
Smart parenting partner, Make life better

JOOM VB803 Wireless Baby Monitoring System [pdf] User Guide
VB803, VB803 Wireless Baby Monitoring System, Wireless Baby Monitoring System, Baby Monitoring System, Monitoring System, System