JASMINER®

Wi-Fi Quick Setup Guide for JASMINER X16-Q:

One-Click Connection via Mobile Phone

This tutorial aims to provide users with a step-by-step guide on how to effortlessly connect the JASMINER X16-Q series device to the mobile phone, enjoying an efficient and convenient network configuration experience. Before starting the configuration, please make sure to visit the JASMINER official website to download the latest firmware version.

Step 1: Powering On the Device and Connecting to the AP

Connect the new JASMINER X16-Q series device (or a reset device) to power. When the **red and green** status lights flash simultaneously, it indicates that Access Point (AP) mode has been activated.

Note: If the device detects a wired Ethernet connection, the AP (Access Point) mode will automatically turn off. Once the Ethernet cable is unplugged, the AP mode will automatically turn on again.

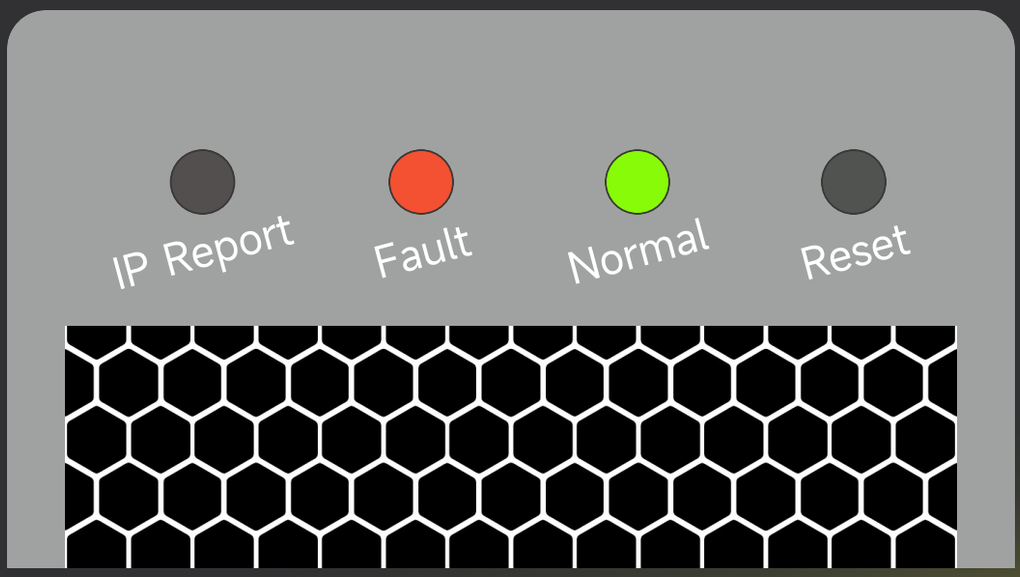

Connecting with a Wi-Fi network named "jasminer_ap" in the list. This will enable users to access the device for configuration through the AP network.

Step 2: Logging into the Backend Configuration Page

Using a mobile browser (preferably Google Chrome), scan the QR code below or the QR code on the JASMINER X16-Q device. You can also enter

83.85.78.1 to access the configuration page.

When logging in for the first time, please enter the default username and password: root/root.

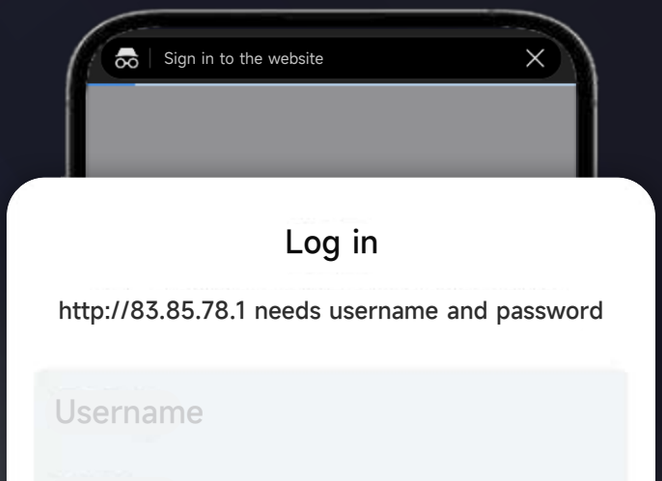

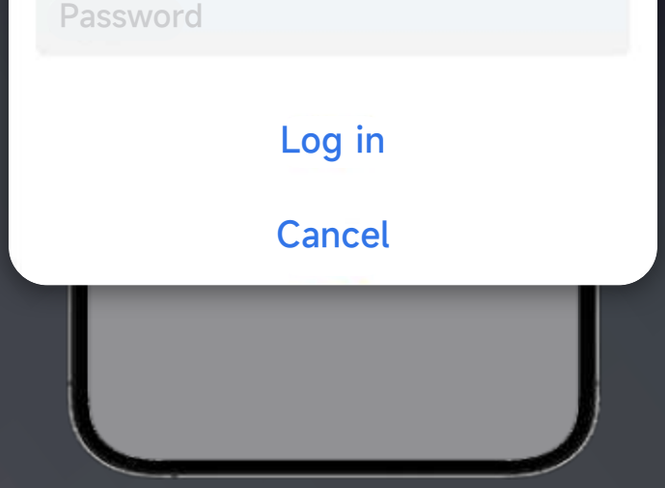

Enter the required details and tap the "Submit" button on the configuration page. If successful, a notification will appear and you will be automatically redirected to the Wi-Fi configuration page.

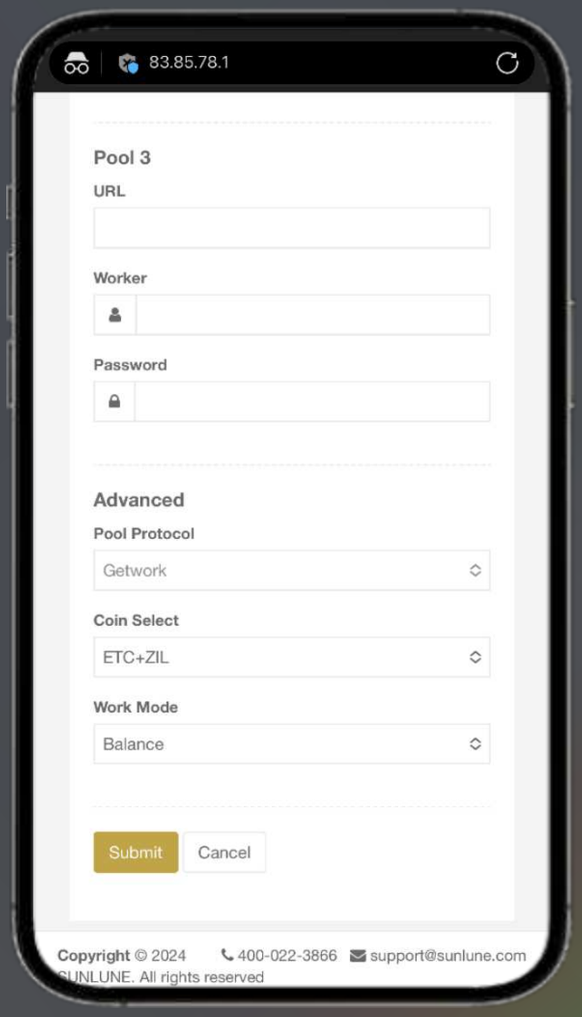

Step 3: Connecting to a Wi-Fi Network

After accessing the web backend, click the yellow button to the right of the JASMINER logo and select the "WLAN" option to enter the device's WiFi configuration interface. Tap the "Switch" button to activate the Wi-Fi function. The device will automatically search for available Wi-Fi networks after activated. If you need to update the list of available networks, please tap the "Refresh" button.

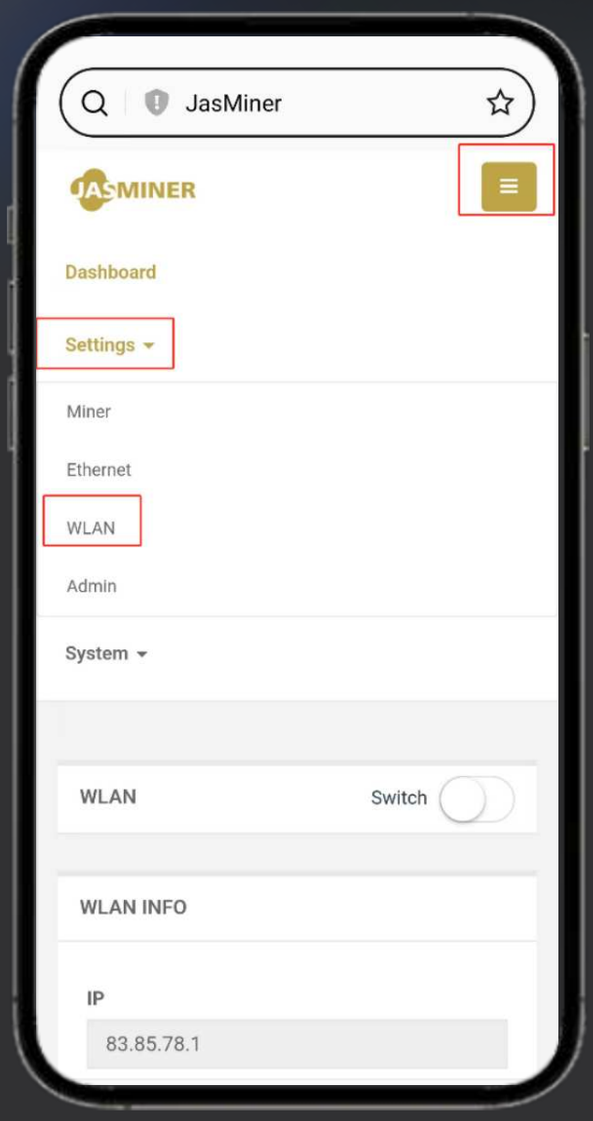

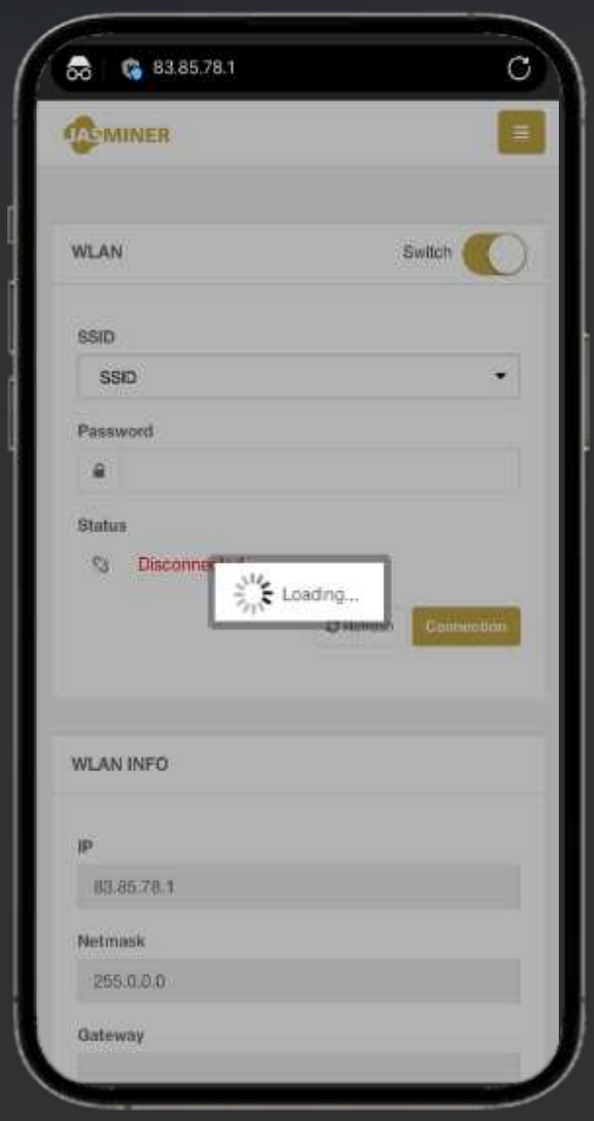

To connect, click on the SSID from the list of networks you want to join, enter the corresponding password, and then click the " Connection " button to establish a secure Wi-Fi connection.

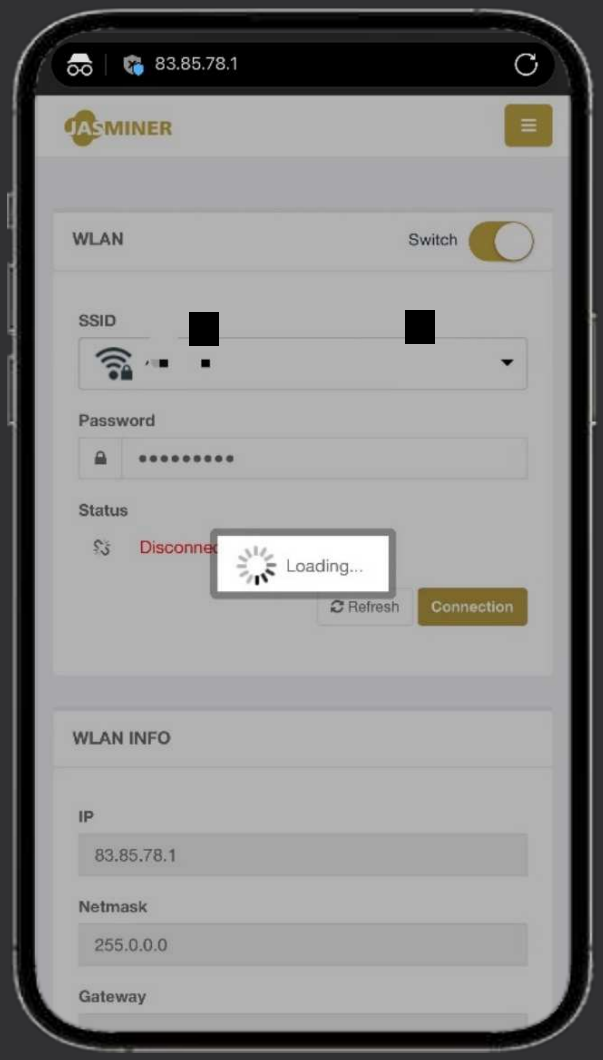

Upon completing the network connection, a notification window will appear. The flashing green light on the device indicates a successful Wi-Fi connection and a stable mining pool connection.

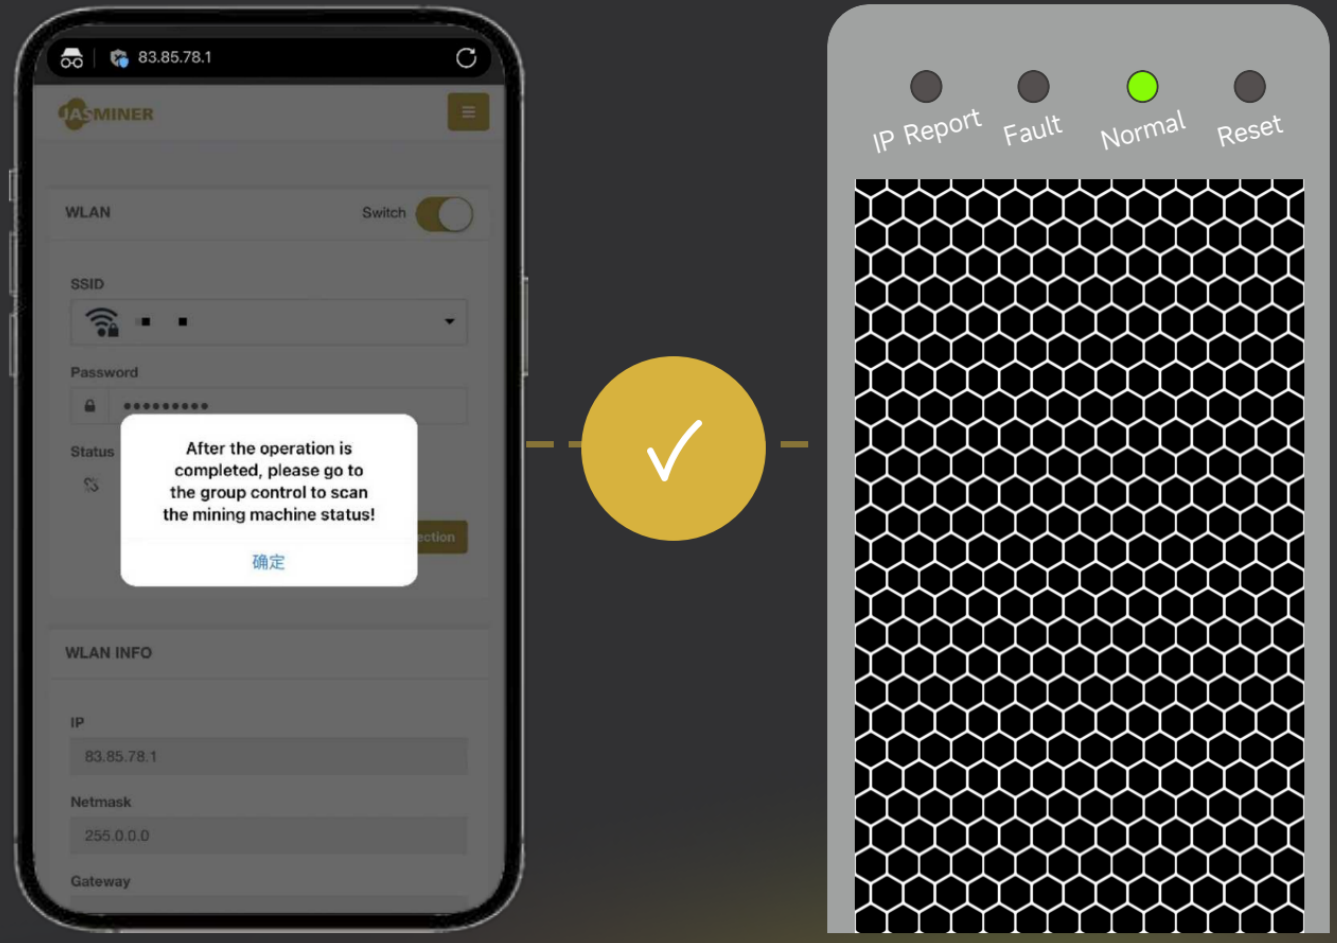

Step 4: Configuring JASMINER Network and Scanning Devices

Scan the QR code below using your mobile browser (Google Chrome recommended) or visit http://find.jasminer.com to access the JASMINER network discovery page. Please note that the page may take some time to load on the first visit.

If not yet configured, the Configuration tab will open by default. Click the "Add" button to create a new configuration.

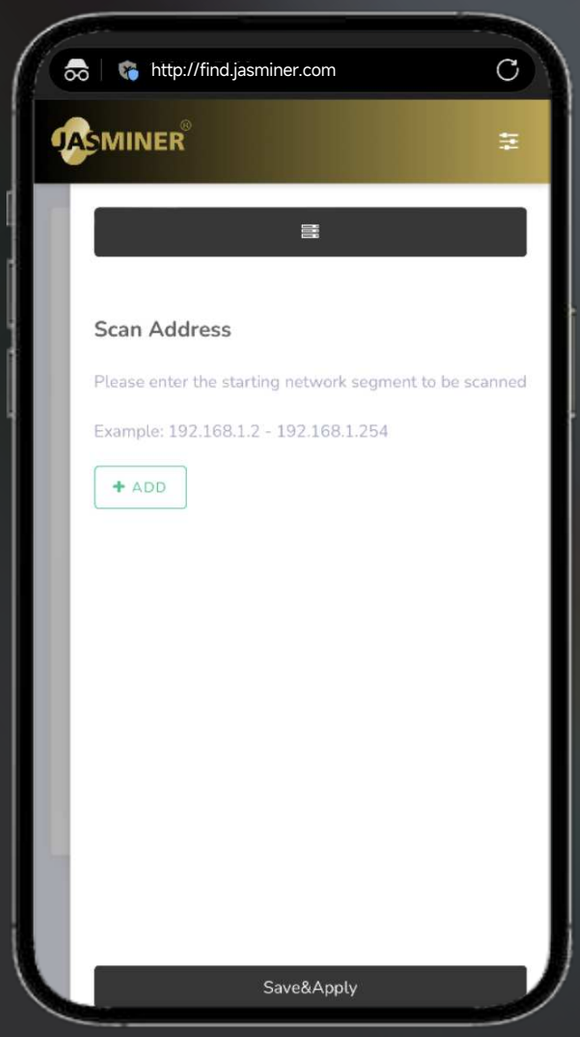

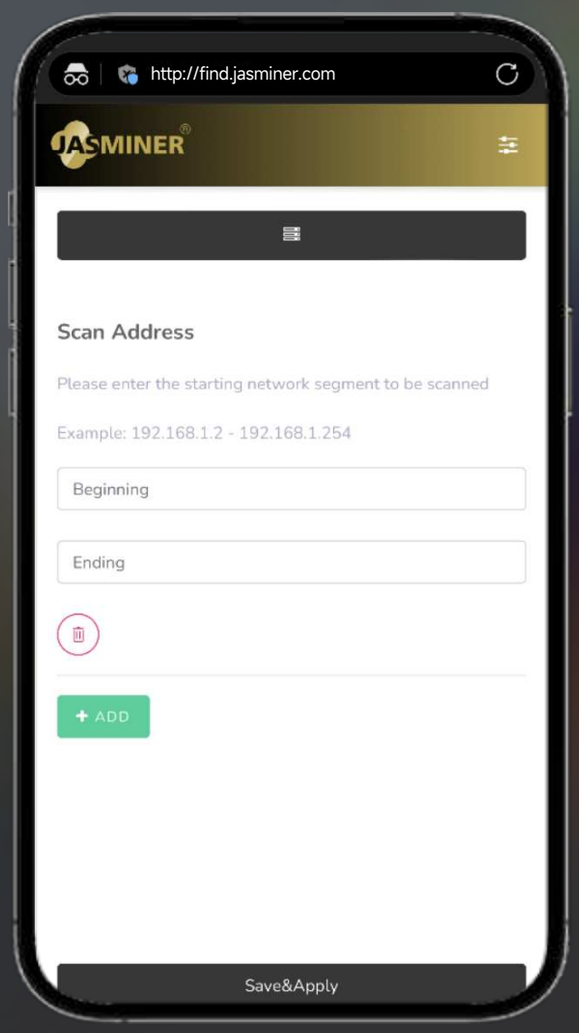

Enter the IP address range of your JASMINER device's network (ensure both the device and mobile phone are connected to the same local area network), and then click the "Save" button to apply the settings.

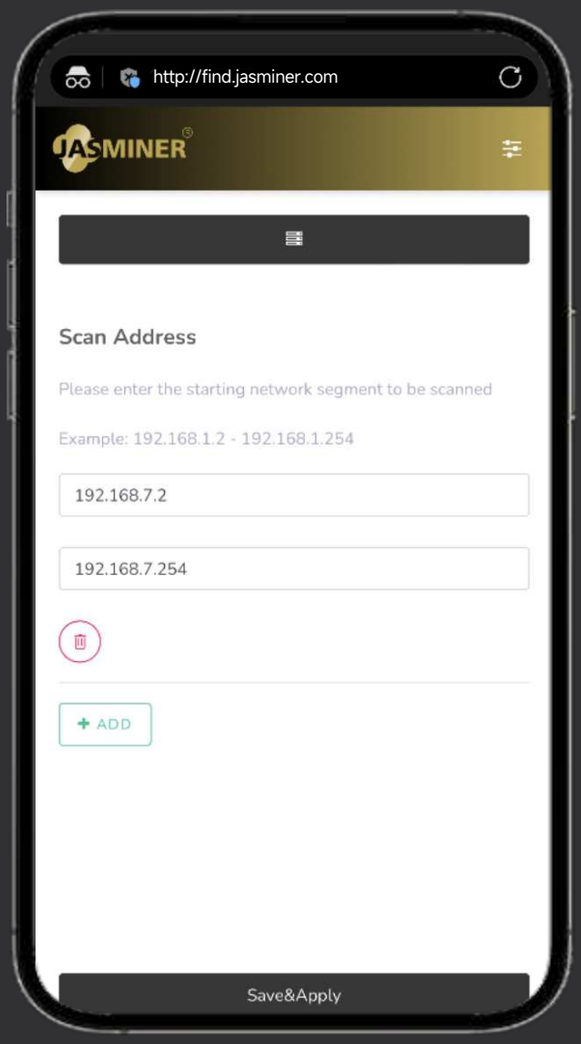

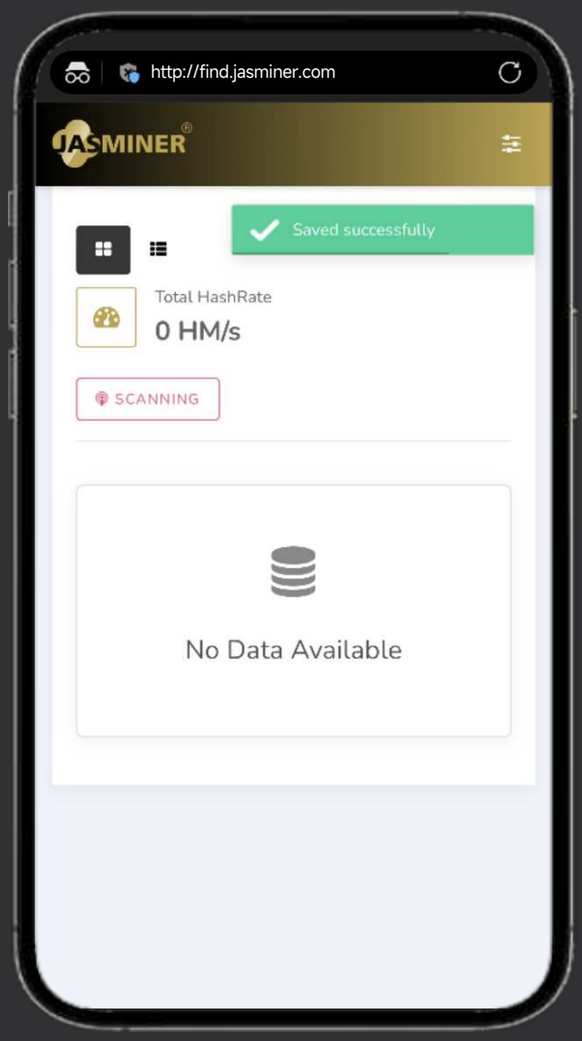

Tap "SCANNING" to start finding devices. The icon above the hashrate allows users to switch the display mode. By clicking on the image or IP address within the card, users can quickly switch to the corresponding device's backend page.

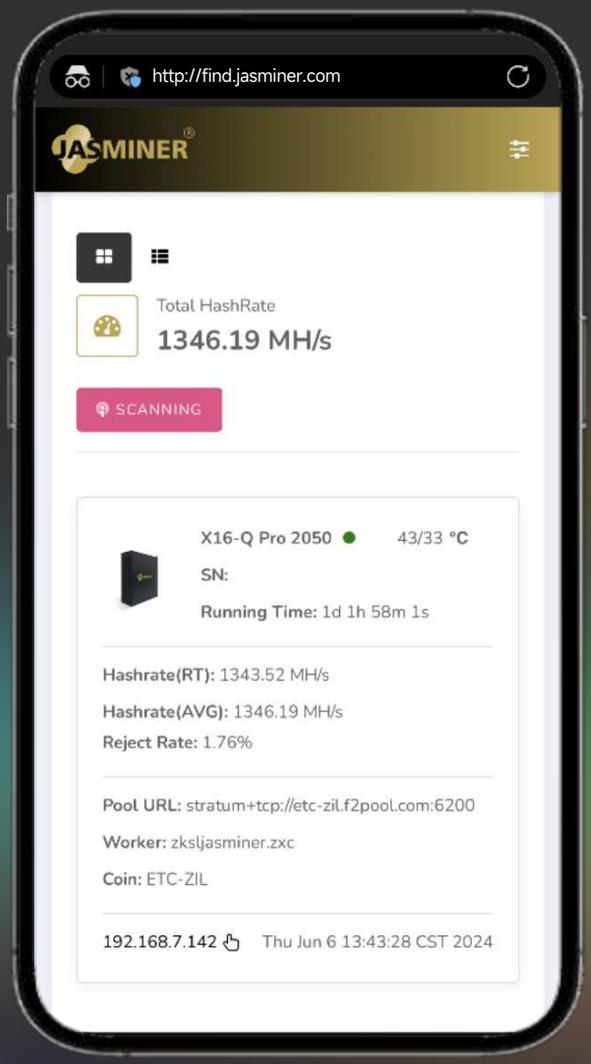

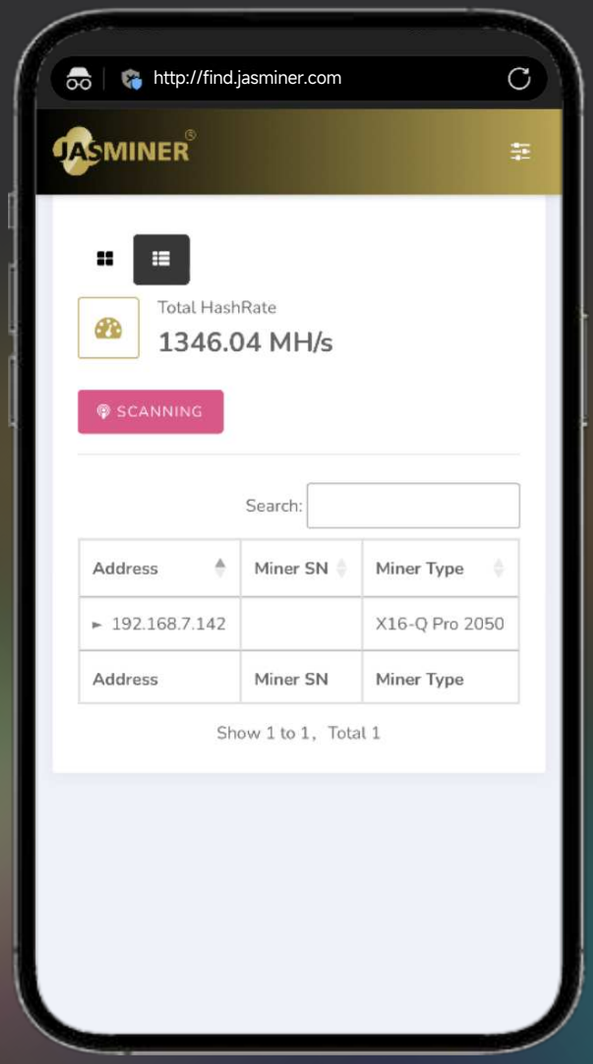

Congratulations!

You have completed the Wi-Fi setup for your JASMINER X16-Q series device. Now, you can easy to check the device's status via your mobile phone. If you encounter any difficulties during the setup process, please don't hesitate to reach out to our customer service team for assistance. We are looking forward to your valuable feedback.

WeChat

Telegram