Manuals+ — User Manuals Simplified.

Learning Resources LER 3097 Coding Critters Go Pets User Guide

📄

Contents

Learning Resources LER 3097 Coding Critters Go Pets

Coding Critters Go-Pets
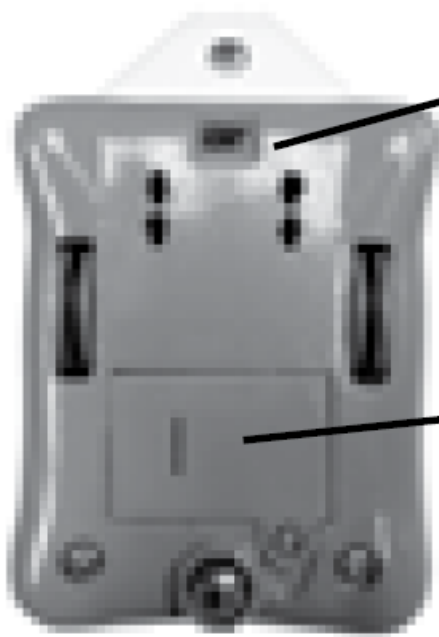
ON/Off
Encendido/apagado
Marche/Arrêt
An/Aus

Battery case
Compartimento de las pilas
Compartiment des piles
Batteriefach

How to Use

- Make sure batteries are installed before use. See Battery Information below.
- Playing with Coding Critters Go Pets: To get started, first make sure that 4 x LR44 batteries are correctly installed. Slide the Power switch to the ON position. Your Go-Pet's wheels should be moving. Now, line up your Go-Pet directly on top of the black line on the included tiles and let it go. It should follow along the black line path.
- Draw a Path: On a white piece of paper, try drawing a path using a thick black marker. The line should be between 3 mm and 8 mm thickness. Watch your Coding Critter Go-Pet follow along!

Installing or Replacing Batteries

- **WARNING**! To avoid battery leakage, please follow these instructions carefully.
- Failure to follow these instructions can result in battery acid leakage that may cause burns, personal injury, and property damage.
- Requires: 4 x LR44 batteries and a Phillips screwdriver
- Batteries should be installed or replaced by an adult.
- 4 x LR44 batteries are required.
- The battery compartment is located on the back of the unit.
- To install battery, first undo the screw with a Phillips screwdriver and remove the battery compartment door. Install batteries as indicated inside the compartment.
- Replace the compartment door and secure with screw.
- Battery Care and Maintenance Tips
- Be sure to insert batteries correctly (with adult supervision) and always follow the toy and battery manufacturer's instructions.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix new and used batteries.
- Insert battery with the correct polarity. Positive (+) and negative (-) ends must be inserted in the correct directions as indicated inside the battery compartment.
- Do not recharge non-rechargeable batteries.
- Only charge rechargeable batteries under adult supervision.
- Remove rechargeable batteries from the toy before charging.
- Only use batteries of the same or equivalent type.
- Do not short-circuit the supply terminals.
- Always remove weak or dead batteries from the product.
- Remove batteries if product will be stored for an extended period of time.
- Store at room temperature.
- To clean, wipe the surface of the unit with a dry cloth.
- Please retain these instructions for future reference.
- WARNING: This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WARNING: Contains button or coin cell battery. Hazardous if swallowed — see instructions.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions

1. this device may not cause harmful interference and
2. this device must accept any interference received, including interference that may cause undesired operation.

- Learning Resources, Inc., Vernon Hills, IL, US

- Learning Resources Ltd., Bergen Way,
- King's Lynn, Norfolk, PE30 2JG, UK
- Please retain the package for future reference.
- Made in China. LRM3097-GUD
- Hecho en China. Conserva el envase para futuras consultas.
- Fabriqué en Chine. Veuillez conserver l'emballage.
- Hergestellt in China. Bitte Verpackung gut aufbewahren

Documents / Resources

Learning Resources LER 3097 Coding Critters Go Pets [pdf] User Guide
LER 3097 Coding Critters Go Pets, LER 3097, Coding Critters Go Pets, Critters Go Pets, Go Pets, Pets

References

- **User Manual**