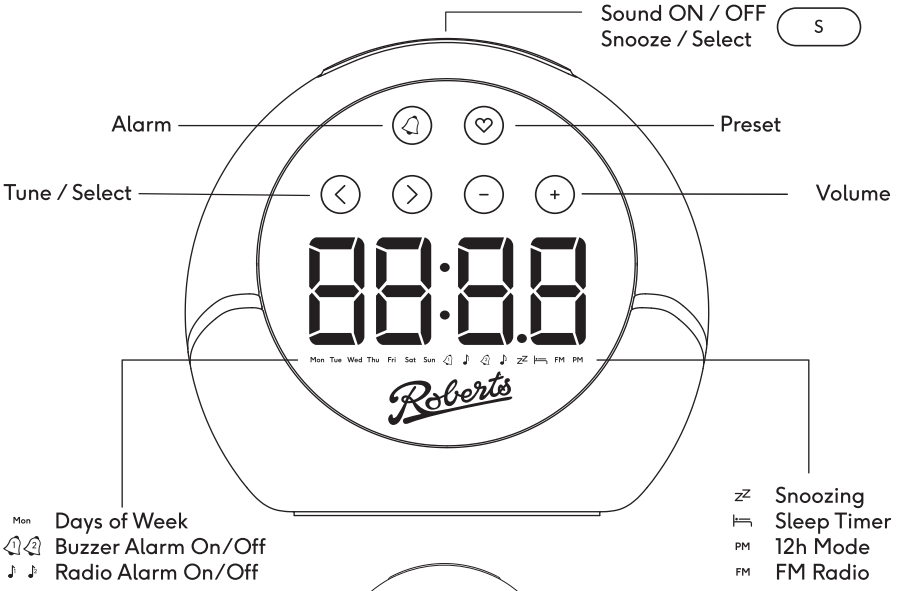

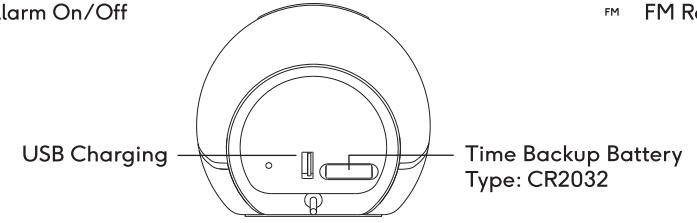

TIME MODE

- Alarm 1 / Alarm 2 / Alarm 1 & 2 / Alarms Off
- 2 sec — Set alarms
- S — Radio on / Radio off
- S 2 sec — Enter time settings

ALARM SOUNDING:

- S — Start snooze cycle (9 min)
- S — Cancel snooze
- Cancel alarm

ALARM SET

- 2 sec — Enter Alarm Settings
- Select Alarm (AL1 / AL2) S
- Select (Everyday / Weekdays / Weekends) S
- Change Hours (HH) S
- Change Minutes (MM) S
- Select Buzzer (♧) or Radio (♪) S
- Select Volume Level S Return to current mode

TIME SET

- S 2 sec — Enter Time Settings
- Select Day S
- Select (24H / 12H) S
- Change Hours (HH) S
- Change Minutes (MM) S Return to current mode

RADIO MODE

Starts last FM frequency - after 10sec displays time

- Tune FM frequency
- 2 sec — FM auto tuning
- S — Stop radio & return to time mode

SLEEP MODE

- S 2 sec — Enter sleep timer
- Cycle between (Off / 10 / 20 / 30 / 45 / 60 / 90 / 120min)
- S — Select sleep time, radio fades to off at end of timer

PRESETS

- Recall presets
- Select a preset
- Wait 5sec to exit
- 2 sec — Save presets
- Select a preset S
- Wait 5sec to exit

Scan for full instructions
Consultez les instructions complètes
Scannen für die vollständige Anleitung
www.robertsradio.com

© 2022 Roberts Radio Limited