ZIPPO

Pipe Lighter Insert
English USA – en

UNFILLED INSERTS WARNINGS:

[illegible]

GENERAL SAFETY WARNINGS AND INSTRUCTIONS:

- Keep lighters and their fuels out of reach of children.
- Ignite lighter away from face and clothing.
- Be sure flame is out after use.
- When filled, will contain flammable fuel.
- Use lighter fuel only.
- Hold insert or lighter away from face.
- Use Zippo® lighter fuel for best performance.
- Never expose to heat above 50°C (122°F) or to prolonged sunlight.
- Never puncture or put in fire.
- This insert is only designed to work with regular-sized genuine Zippo Windproof Lighter models including, Regular, Vintage, Armor®, and 1941 Replica.
- DOES NOT work with Slim or 1935 Replica models.
- Follow all instructions and warnings provided by manufacturer of any other item when using this product.

DISCLAIMER:

ZIPPO WILL NOT BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES YOU OR ANY THIRD PARTY MAY SUFFER AS A RESULT OF USE OR MISUSE OF THIS PRODUCT.

© Zippo Manufacturing Company 2025.

Pipe Lighter Insert

1. Flint Wheel
2. Flint
3. Wick
4. Flame
5. Cam
6. Fuel Reservoir

Always use genuine Zippo fuel, flints and wicks.

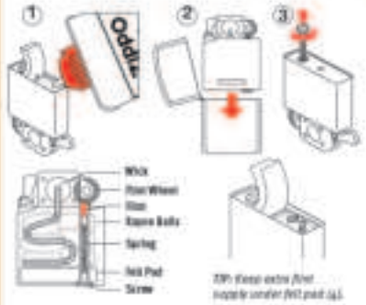

TIP: Keep extra flint supply under felt pad (4).

To fill your Zippo insert or lighter

[illegible] Lift felt pad to reveal the packing material in the fuel chamber (3). Saturate the packing with Zippo lighter fuel. Stop filling when fuel reaches top of packing. If overfilled it can leak fuel. Fuel is a skin irritant.

[illegible] Place insert into lighter case (2). If overfilled, do not put in pocket or next to skin. If fuel gets on skin, wash the affected area. If irritation persists or worsens, see a Doctor.

[illegible] and there is no spilled fuel in victim's before igniting. This is flammable fluid.

To re-flint your Zippo insert or lighter

Remove screw (5) and attached spring at end of fuel chamber. Be sure old flint is removed from tube. Place new flint in tube and replace spring, screw tightly. Be sure screw is turned as far as it will go, if not, cover will not close properly. Preheat bristle after new flint is inserted, turn wheel backwards a few times.

Wick Maintenance

When wick becomes black from cotton, pull it up with tweezers until clean wick appears (approx. 1 cm), then trim the end making it even with the chimney height. Perform this maintenance 1 or 2 times a year. It will be necessary to replace the wick after it has been trimmed more than 2 or 3 times. For more information visit the website listed.

ZIPPO European Repair Clinic
Zippo Europe
Gewerbestrasse Weg 17
[illegible] Kronach, am Rhein
GERMANY
Phone: +[illegible]
Fax: +[illegible]
www.zippo.de

WINLEX (PTY) LTD.
T/A ZIPPO SALES SOUTH AFRICA
[illegible] Road, Tuscany Est. 9,
Randfontein, Gauteng 1401
South Africa
Phone: 27 11 3433[illegible]
zippo@zipposales.com

et

[illegible]

ÜLDISED OHUTUSHOIUDED JA JUHISED:

- [illegible]
- Kaitsta lapsed tulemasta tulemõrvade lähedusse.
- [illegible]
- Veenduge, et leek oleks pärast kasutamist kustunud.
- [illegible]
- [illegible] temperatuuril ülal ja 122 °F (50 °C) [illegible]
- Mitmekülgne kergsõidu-[illegible]
- [illegible]
- [illegible]
- [