WYE

Wireless Speaker

Model:Y-SKR18-7

User's Manual

Button and interface description

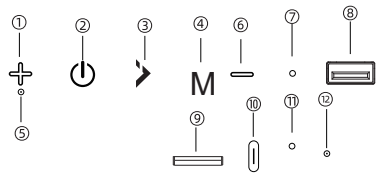

① Short press for volume +/long press for next song
② ON/OFF
③ Play/Pause
④ Switch model
⑤ Indicator light
⑥ Short press for volume -/long press for previous song
⑦ Microphone hole
⑧ USB
⑨ TF card
⑩ Charging port
⑪ Charging indicator light
⑫ 3.5mm audio input line/Auxiliary

Connection method

① Turn on the speaker

Turn on the speaker, the speaker will automatically enter into the wireless mode.

② Connect to mobile devices

Turn on wireless option in mobile device,select (Y-SKR18) in the mobile device,the speaker will make a sound after successful connection.
For future uses, just keep the mobile device's wireless turned on, it can automatically connect.

Connect to new mobile device

If the current device with the speaker is connected, you need to disconnect the current device's wireless, then use the new mobile device to connect the speaker.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the device and receiver.
--Connect the device into an outlet on a circuit different from that to
which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Instructions for use

【 + 】

Next/Volume+ Button

Short press for volume +,
Long press for next song.

【 ⏻ 】

ON/OFF

Long press for 3 seconds to turn on/off;
Short press to switch/on/off the light

【 ⏵ 】

Play/Pause

Short press to play/pause;
Short press to answer/end phone call; when incoming call, long press to reject;
Under BT mode, long press to activate voice assistant;
Under BT mode, press 2 times to redial last number

【 M 】

Light switch/on/off

Short press to switch BT/AUX/USB/BT mode;
D ouble press to enter/exit TWS mode
Under BT mode, please disconnect speaker first, then long press the button for 5 seconds to clear Bluetooth pairing information;
Under BT mode, long press for 2 seconds to disconnect bluetooth.

【 — 】

Previous /Volume-

Short press for vioume -,
Long press for previous song.

【 ⊙ 】

Indicator light

1. Charging status: the red light will be constant on;
2. Charging finished: the red light will be off.

Warning

1. Do not expose the product to high temperatures, corrosive or high-pressure environment.
2. Do not attempt to disassemble the Speaker, or to replace any electronic components in it.
3. If the internal devices have fluid leakage, please stop use.

Technical parameter

Loudspeaker output	20W(4Ohm)
Speaker	ϕ58mm
Version	V5.4
Frequency response range	120Hz-20KHz
Battery capacity/Voltage	1800mAh
Battery charge time	About 2-6 hours
Working time	About 7.5 hours
USB power input	5V 1A
Speaker size	99x97x220mm

Size:65*85mm折页