发行文件

140 mm

215 mm

Bobtot

OWNER'S MANUAL

B901

5.1 CHANNEL HOME THEATER SYSTEM WITH LED LIGHT EFFECTS

DEAR CUSTOMER
Congratulations on your purchase!
Please read this manual careful and keep it for future reference

P1

P2

发行文件

Thank you for purchasing this BOBTOT B901 5.1 Channel Home Theater System. This powered home theater speaker system creates a new performance level in home theater speakers.

INCLUDES

- Subwoofer with built in receiver
- (2) Front Speakers
- (2) Rear speakers
- (1) Center channel speaker
- Remote Control
- Signal Cable
- Antenna Cable
- Manual

IMPORTANT SAFETY INSTRUCTIONS

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE AMPLIFIER PLATE. NO USER SERVICEABLE PARTS INSIDE. WE RECOMMEND TAKING THE UNIT TO A QUALIFIED SERVICE TECHNICIAN FOR ANY REPAIRS.

- Do not place these speakers on an unstable surface. The speaker may fall over, causing serious injury to a child or adult and serious damage to the unit.
- Do not use these speakers near water, for example, near a bathtub, sink, in a wet basement, or near a swimming pool.
- The speakers should be situated away from heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- Clean only with a soft damp cloth. Unplug the main unit from the wall outlet before cleaning.

3

P3

SET UP

Place speakers in the desired position (see speaker positioning diagram on the next page). Using the included color coded speaker cables, connect the center, front, and satellite speakers to the corresponding Audio Output RCA plugs on the subwoofer unit. Next plug the LED power cables to the corresponding LED power RCA plugs.

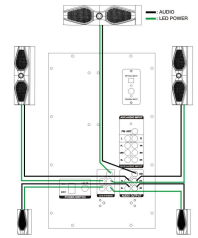

4

P4

COMPONENT CONNECTIONS

1. OPTICAL/COAXIAL AUDIO INPUT: Use the optical port to input the sound signal from any 5.1 channel optical output enabled source such as TVs, Digital set-top boxes, game consoles, DVD players, Blu-ray players, CD players, etc.

Please note: If you are having issues with sound output, follow these steps:
a. Set your TV's sound output to external speakers.
b. Go into your TV's audio settings and make sure to deactivate Dolby Pro-Logic, Dolby ATMOS, etc. and select PCM format.

2. RCA AUX AUDIO INPUT: Use the RCA Auxiliary jacks to connect computers, cellphones, or any other external sound source with a 3.5mm output. You will need an RCA to 3.5mm Y cable.

3. DVD AUDIO INPUT: Use these RCA jacks to input the sound signal from any 5.1 channel output enabled source such as a TV, Digital set-top boxes, game consoles, DVD players, Blu-ray players, CD players, etc.

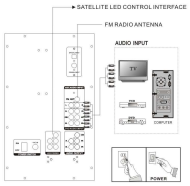

5

P5

POSITIONING THE SPEAKERS

1. Most people place the subwoofer in the front of the room, near the sound input source, for ease of connection. But since bass frequencies are omnidirectional the subwoofer can be placed anywhere. Try placing it near a wall or a corner for increased bass.

2. The center channel speaker should be place directly in front of the listening position, above or below the sound input source. If possible, tilt it as necessary to direct the sound to ear level.

3. Mount the front speakers on the wall, directly to the left and right of the center channel speaker. Angle them towards the listening position. Preferably, the tweeters should be at ear level.

4. Mount the satellite speakers on the wall, slightly behind the listening position, about 1 to 2 feet above ear level. If side placement isn't possible place them to the rear of the listening position and angle there forward.

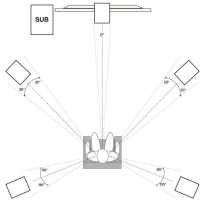

6

P6

REMOTE CONTROL FUNCTIONS

⏻ : Power/Standby

INPUT: Switch between input modes USB/SD/FM/AUX/DVD/OPT/COAXBT

MUTE: Mute all output

5.1/2.1: Channel mode select

SLEEP: set unit to sleep mode

LED LIGHT: Set subwoofer LED light mode/turn off speaker LEDs

SAVE: Save stations to unit memory

TUNE +/- : Manually tune FM stations

▶II : Play/Pause in USB/SD/BT modes

AUTO: Automatic station search

CH-:⏮ : Previous FM station/previous track (USB/SD)

CH+:⏭ : Next FM station/next track (USB/SD)

FL +/- : Front left speaker volume control

FR +/- : Front right speaker volume control

SW +/- Subwoofer volume level

CEN +/- : Center speaker volume control

VOL +/- Master volume control

SL +/- : Front left speaker volume control

SR +/- : Front right speaker volume control

0 – 9: Number pad used to direct select tracks when in USB/SD mode

REPEAT: Repeat one song/repeat all songs/shuffle

RESET: Reset volume level

MIC +/- (EQ +/-) : When a mics are connected, these buttons will control the mic volume. In USB/SD mode, they will allow you to navigate the 5 preset EQ curves. Please note: connecting mics will override the EQ +/- function.

ECHO +/- (DISP +/-): When a mics are connected, these buttons will control the echo effect. If there are no mics connected, they will control the display brightness. Please note: connecting mics will override the DISP +/- function.

7

P7

FRONT PANEL

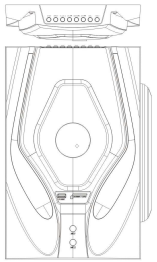

8

P8

发行文件

FRONT PANEL

STANDBY ---------- Stand by function by pressing it 3 secs in AUX/USB/SD/FM/OPTICAL/COAXIAL mode.

INPUT ---------- Input function key, switch among AUX/USB/SD/ FM/OPTICAL/COAXIAL mode

5.1/2.1---------- 5.1/2.1 function key.

CH-/⏮---------- "Previous" function Key. Previous song when USB/SD input; Previous channel when FM input.

AUTO/▶II ---------- USB/SD pause/Play function key. When the FM state when the automatic search and save the radio station.

CH+/⏭---------- "next" function Key. Next song when USB/SD input; Next channel when FM input.

VOL- ----------Decrease the volume button

VOL+ ----------Increase the volume button

SD/MMC CARD------SD card socket

U DISK ----------USB socket

MIC 1 ----------MIC 1 socket

MIC 2 ----------MIC 2 socket

9

P9

REAR PANEL

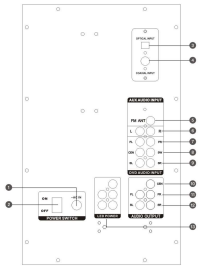

10

P10

REAR PANEL

1. Power input
2. Power switch
3. Optical audio input
4. Coaxial audio input
5. FM antenna
6. RCA AUX in
7. Front L/R RCA DVD audio input
8. Center/subwoofer RCA DVD audio input
9. Rear L/R RCA DVD audio input
10. Center RCA audio output
11. Front L/R RCA audio output
12. Rear L/R RCA audio output
13. LED power output

BT

To connect your iPod, iPhone, MP3 player, Android phone or any other BT capable device follow the steps listed below:
1. Make sure the unit is plugged in and the power switch is in the ON position.
2. Press the INPUT button on the remote control or push the INPUT button on the unit until the digital read out shows "BT".
3. Turn on the BT feature on your device and ensure that it is in "discoverable" mode. Search for " B901 " on your list of available devices and select it.
4. If your device requires a password, please use "0000".

11

P11

FM RADIO

For FM radio follow the steps listed below:
1. Make sure the unit is plugged in and the power switch is in the ON position. Be sure to connect the included FM antenna.
2. Press the INPUT button on the remote control or push the INPUT button on the unit until the digital read out shows "FM".
3. To automatically save stations:
   - Press and hold the AUTO button for 3 seconds. The unit will begin to automatically search and save any available stations.
4. To **manually** save stations:
   - Use the TUNE +/TUNE- buttons to find a station you like and that is coming in clearly.
   - Press the SAVE button. CHAN will start flashing on the screen. Use the CH-/CH+ buttons to select the channel number you'd like to program for that station.
   - Press the SAVE button again. This will set the channel & the message "saved" will be displayed.
5. Use the CH-/CH+ buttons to navigate through saved stations or use the TUNE +/TUNE- buttons to manually find a station.

USB/SD

For USB/SD playback, follow the steps listed below:
1. Make sure the unit is plugged in and the power switch is in the ON position.
2. Press the INPUT button on the remote control or push the INPUT button on the unit until the digital read out shows "USB" or "SD".
3. Plug in your SD card or USB flash drive. The unit will automatically read the files and begin playing music.

OPTICAL/COAXIAL

Many TVs, Digital set-top boxes, game consoles, and DVD players have optical (fiber optic) or coaxial outputs. To connect via Optical or Coaxial input, follow the steps listed below:

1. Make sure the unit is plugged in and the power switch is in the ON position.
2. Press the OPT/COAX button on the remote control or push the INPUT button on the unit until the digital readout shows "OPT" or "COAX".
3. Use a digital optical audio cable to connect the speakers to the source.

MIC INPUT

To use the system for karaoke connect any microphone via either one of the ¼" inputs located on the front of the unit. While the MICs are connected, you can control the mic volume by pressing the MIC- or MIC+ buttons on the remote. Additionally, you can control the mic echo effect settings by pressing the ECHO- or ECHO+ buttons on the remote.

12

P12

FEATURES

- 5.1 Channel Home Theater System with LED Light Effects
- Plug and play system with everything you need right out of the box
- 1000 Watts Peak Power
- 500 Watts Program Power
- 250 Watts Continuous RMS Power
- 10" Subwoofer with built-in receiver
- 1 x 3" Center Channel speaker
- 2 x 3" Full Range Front Channel speakers
- 2 x 3" Full Range Rear Channel speakers
- Top quality MDF wood cabinets with plastic front panels
- Built-in FM receiver with amazing reception
- Digital display
- 9 Band equalizer
- You can independently control the volume of each speaker and the subwoofer
- BT Version5.0+EDR
- USB input (max file size 16Gb)
- SD input (max file size 16Gb)
- 2 ¼" MIC inputs with echo function for karaoke
- 5 RCA audio outputs
- 6 RCA DVD audio inputs
- 2 RCA AUX inputs
- Optical audio input
- Coaxial audio input
- FM antenna input
- Full function remote

13

P13

SPECIFICATIONS

- Cable length: Front L/F: 2M, Rear L/R: 4M , Center: 2M
- Frequency response: 20Hz ~ 20KHz
- Amplifier: Class AB, very efficient amplifier with top components!
- Signal to noise ratio: 70dB (Maximum output with THD+1<1%)
- System impedance:10'driver: 8 Ohm /3' driver: 4 Ohm
- Input voltage: 120V/60Hz
- Subwoofer dimensions : (W*H*D)W235xH370xD460mm
- Center speaker dimensions : (W*H*D) W370xH100xD115mm
- Front L/R satellite speaker dimensions : (W*H*D) W100xH370xD115mm
- Rear L/R satellite speaker dimensions : (W*H*D) W100xH235xD115mm
- Net weight:16.5Kg

RF exposure statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

14

P14

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.

– Increase the separation between the equipment and receiver.

– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help.

15

P15

Bobtot

16

P16

说明：尺寸：140x215mm
材质：128G铜版纸 四色双面印刷 8张装订本

说明：尺寸：140x215mm
材质：128G铜版纸 四色双面印刷 8张装订本

说明：尺寸：140x215mm
材质：128G铜版纸 四色双面印刷 8张装订本

说明：尺寸：140x215mm
材质：128G铜版纸 四色双面印刷 8张装订本