EasySMX

D05 Gaming Controller Manual

Product Overview

The D05 is a multi-platform gaming controller supporting 2.4GHz Wireless, Bluetooth, and Switch connection modes. It is compatible with PC, Switch, Android/iOS (iOS 13.0+ MFI-supported games), and other devices.

Button Layout

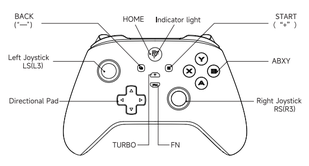

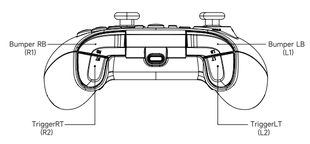

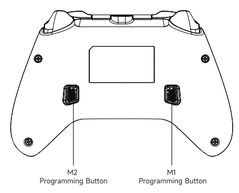

Connection Instructions

1. First-Time Connection

2.4 Ghz Receiver Mode:

• Insert the USB receiver into the charging dock's USB port.

• Press and hold the **B** button & **Home** button for 3 seconds to enter pairing mode.

• The indicator on D05 controller's logo will flash rapidly. When it turns solid, and the controller vibrates briefly, the connection is successful.

【**Note**】The receiver will only connect to PC when the charging dock is plugged into the PC. If the dock is not connected to the PC, insert the receiver directly into the PC's USB port.

2. Bluetooth Mode:

• Press and hold the **X** button & **Home** button for 3 seconds to enter pairing mode.

• The indicator on D05 controller's logo will flash rapidly. On your device, open Bluetooth settings and select **Xbox Wireless Controller** to pair.

• When the light turns solid and the controller vibrates briefly, the pairing is successful.

【**Note**】This method is suitable for PC, iOS, and Android Bluetooth connections.

3. Switch Mode:

A. Press and hold the **Y** button & **Home** button for 3 seconds to enter pairing mode.

B. On the Switch, go to **Controllers > Change Grip/Order** to initiate pairing.

C. Once the light turns solid and the controller vibrates briefly, pairing is successful.

【**Note**】The Fn button triggers the screenshot function in Switch mode when pressed without a combo.

Reconnection

• If the device and connection mode remain unchanged,short-press the **Home** button to automatically reconnect to the last device.

Mode Switching

• In receiver or wired mode, the controller defaults to **X-INPUT** mode. To Switch to **D-input** mode, hold **BACK & START** for 5 seconds. To switch to **Switch Mode**, hold **BACK & START** for 5 seconds again. A brief vibration confirms the successful mode switch. The controller cycles through three modes: **X-INPUT**, **D-input**, and **Switch Mode.**

Turbo and Continuous Firing Settings

• **Manual Turbo:**1.Press TURBO & A to activate continuous firing while holding the A button.

• **Auto Turbo:**1.Press **TURBO** & **A** again to toggle auto-firing. The A button will now automatically trigger continuous firing with a single press.

• **Cancel Turbo:**1.Press **TURBO** & **A** a third time to disable continuous firing.

【**Note**】Only A/B/X/Y/L1/L2/R1/R2/D-pad/M1/M2 can be set turbo.

RGB Lighting Adjustment

• **Lighting Mode:** Press **FN** & **Right D-pad** to cycle through lighting modes.

• **Brightness Adjustment:** Press **FN** & **Left D-pad** to adjust brightness.

Vibration Adjustment

• Increase vibration intensity with **FN & Up D-pad.**

• Decrease vibration intensity with **FN & Down D-pad.**

ABXY Layout Switch

• Press and hold **FN** & **A** for 3 seconds to switch between layouts. The controller will vibrate briefly to confirm the switch.

Rapid Trigger Switch

• **Left Trigger:** Press **FN** & **LT** to adjust the left trigger settings.

• **Right Trigger:** Press **FN** & **RT** to adjust the right trigger settings.

Stick and Trigger Calibration

• In power-off mode, press and hold **BACK** & **B** & **Home** for 3 seconds to enter manual calibration mode.

• Both thumbstick lights will flash. Rotate the joysticks clockwise for 3 full rotations and fully press the triggers three times.

• Press **START** to exit calibration mode. The lights will turn off, indicating successful calibration.

Programming Function

• In connected mode, press **FN** & **M1/M2** to enter programming mode.

• Press the button you want to program (e.g., **A** or **B**).

• Press M1/M2 to save and exit programming mode.

【**Note**】

• If no button is recorded, pressing **M1/M2** will save an empty input.

• Only A/B/X/Y/D-pad/LB/RB/LT/RT/L3/R3/joysticks/+/- can be programmed.

Power Off

• Press and hold the **Home** button for 5 seconds to power off the controller.

• The controller will also automatically power off after 10 minutes of inactivity.

Product Specifications

Model	D05	Current	60mA
Battery	1000mAh	Sleep Current	≤100uA
Charging Time	2-3 hours		

Package Contents

• D05 Gaming Controller x 1

• Wireless Receiver x 1

• Charging Dock x 1

• TYPE-C USB Cable x 1 (1 Meter)

• User Manual x1

※Safety Information

Before using and operating the device, please read and follow the precautions below to ensure optimal device performance and to avoid dangers or illegal situations.

1. Use the device within a temperature range of 0 to 35°C and store the device and its accessories within -10°C to 40°C. Extreme temperatures may cause device malfunction.

2. The device and its accessories may contain small parts. Keep them out of reach of children to prevent accidental damage or choking hazards.

3. Avoid exposing the device and its accessories to rain or moisture to prevent fire or electric shock hazards.

4. Keep the device and its batteries away from fire, high temperatures, and direct sunlight.

5. Do not throw batteries into fire; do not disassemble, drop, crush, or modify batteries; avoid inserting foreign objects. Do not immerse batteries in water or other liquids; avoid external impacts and pressure on batteries to prevent leakage, overheating, fire, or explosion.

6. Do not replace batteries by yourself to prevent damage that may lead to overheating, fire, or personal injury.

7. Do not disassemble or modify the device (including replacing built-in batteries) and accessories without authorization, as this will void the warranty.

8. Dispose of the device, batteries, and other accessories properly according to local regulations. Improper battery disposal may lead to explosion.