产品说明书 尺寸:50x75mm 材质:80g书写纸 双面印刷 风琴折

htc
无线蓝牙耳机20

快速入门指南
使用前请阅读使用说明书
HTC NE20

产品规格

型号:HTC NE20

蓝牙
范围:~10m
版本:5.0

喇叭
直径:13mm
阻抗:32Ω

耳机功率
输入:5V=30mA
电池容量:30mAh
使用时间:~4小时
充电时间:~1.5小时

充电仓功率
输入:5V=300mA
输出:5V=60mA
电池容量:300mAh
充电时间:~1.5小时
充电仓充满电时,能给耳机充电约4次

物品清单

部件

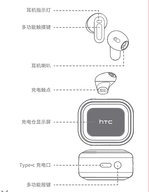

取出耳机并配对

如果您是第一次使用耳机,请将两个耳机从充电仓中取出,其中一个耳机的LED灯将会交替闪烁白灯和青灯,表示它们处于配对模式。
注:
-如果耳机未与任何设备配对,打开后会自动进入配对模式。
-配对成功后,您会听到两声激活声。
-如果耳机之前已配对,打开后会自动重新连接,连接时您会听到嘟嘟声。

如何佩戴耳机

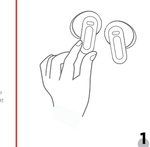

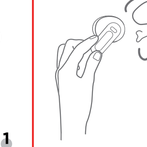

开机和关机

开机
自动开机:耳机在充电仓中,打开充电仓盖子,耳机开机。
手动开机:长按2秒,耳机开机。

关机
自动关机:耳机放入充电仓中,在上充电仓盖子,耳机关机。
手动关机:长按5秒,耳机关机。

注:连续开机状态,如未与蓝牙设备配对,便会自动关机;当配对的蓝牙设备超出信号有效连接距离,且未重新连接时,3分钟后,耳机自动关机。

连接到蓝牙设备

在您的设备上,打开蓝牙
并选择连接到"HTC NE20"。

基本操作

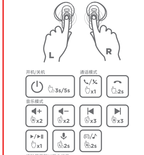

功能操作
- 暂停/播放:轻触任一耳机一次
- 音量加:轻触左耳机二次
- 音量减:轻触左耳机三次
- 上一曲:轻触左耳机三次
- 下一曲:轻触右耳机三次
- 接听/挂断电话:轻触任一耳机一次
- 通话拒接:按住任一耳机2秒
- 启动语音助手:按住左耳机2秒
注:单耳使用时,按住已开机的耳机2秒,均可激活语音助手
- 游戏模式与音乐模式切换:按住右耳机2秒切换
注:单耳使用时,无法切换游戏模式和音乐模式
注:出厂设置默认为音乐模式
注:通话声音始终使用该模式

指示灯显示

耳机指示灯	状态
白灯和青灯交替闪烁	两个耳机:开机 单耳机:未配对
白灯常亮	充电中
灭灯	配对成功或充满电

如何清除蓝牙配对历史记录

双耳从充电仓取出后会自动开机配对,耳机未与蓝牙设备连接或双耳从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五次单击按键,直至音"嘟"四声后,耳机自动关机后再开机,按回充电仓,两耳应可再配对。双耳机会自动配对,完成后即可连接蓝牙设备使用。
适用于以下情况:
A:双耳从无配对时,单击操作,双配对耳机。
B:使用单耳时,分别连接不同蓝牙设备时。
C:清除连接的所有蓝牙设备时。

特别提示:
当单边耳机出现无声,或者无法配对时,请按以上恢复重置操作。

充电仓基本操作

打开显示屏
开盖亮屏:打开充电仓盖子,屏幕会自动点亮
关闭显示屏:屏幕关闭时,按键三下以可
按键亮屏:单击多功能按键

关闭显示屏
自动关闭:点亮显示屏,30秒无操作后,显示屏将自动熄灭。
手动关闭:点击充电仓多功能按键一次,充电仓显示屏熄灭。

注:首次使用,请取出开机
方法1:通过type-c数口给充电仓充电显示灯
方法2:将两枚全多功能按键按住不松
提示:每产品出厂时都以为无初始状态,首次使用需要重新开机。

多功能按键功能

单击:打开/关闭屏幕。
三击:耳机进行配对。
两次三击:充电仓与耳机进行配对。
按住2秒:进入系统菜单"开机"和"重启"。
按住6秒:关机选项下,开机、开机状态下,恢复出厂设置。

图标介绍

图标	状态
红色	耳机在充电仓中,未连接到耳机
黑色	充电仓已连接到耳机,但耳机未连接到手机
黑色	充电仓已连接到耳机,且耳机已连接到手机
	状态
绿色	耳机充电中
黑色	耳机充满电
红色	耳机使用中

充电仓显示屏功能介绍

主界面

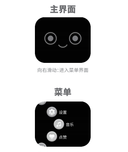

待机界面,进入菜单界面

菜单

点击图标,切换对应音乐

音乐播放

音效切换

TIKTOK翻页和点赞功能

恢复直播页面至设备使用,如手机:
1.此功能仅限TIKTOK软件使用,并取决软件在此法使用的情况
2.此功能在部分手机兼容性问题,可能存在部分手机无法使用
3.如果存在无法使用的情况,请禁用此功能

查找耳机

耳机充电仓连接后点击可查找左、右耳机。
查找状态耳机会发出滴滴警报声

拍摄功能

恢复直接到设备使用,如手机:
1.此功能仅限手机自带相机的情况。
其他摄像软件可能存在无法使用的情况
2.此功能存在部分手机兼容性问题,可能存在部分手机无法使用
3.如果存在无法使用的情况,请禁用此功能

打开拍摄软件,单击按钮,设备开始拍照

语音助手

点击启动语音助手

游戏

小马:点击屏幕让小马跳跃好玩,保持飞行不掉落



点击进入游戏总显示屏对应功能设置

调整亮度

调整亮度,上下滑动调节亮度
亮度时间:界面左滑切换亮度时间,可选择亮度的时间

表盘设置

可点击界面长按2秒切换其他表盘壁纸

菜单背景

可切换不同菜单,增加界面表现。
恢复出厂:开机后会跟屏保设置选择

时间设置

可设置当前的时间和日期,时间格式

语言设置

可切换不同语言

触摸唤醒

打开时可以触摸点亮屏幕
关闭时无法触摸点亮屏幕
默认为关闭

AI翻译

同步至APP翻译内容

产品中有害物质名称及含量

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溶性多溴联苯(PBB)	多溶性多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
表单标记"×"的部件,是因全球技术发展水平等限制无法实现有害物质的替代。

印刷电路板组件:包括印刷电路板及其零部件。
电子元器件等,根据产品型号不同,
您所购买的产品可能不会含有以上所有部件

重要安全说明

在使用本产品之前,请仔细阅读本说明书中的所有安全说明。

常规安全说明
- 小心使用本产品,并将其存放在没有极端温度、高湿度及和潮湿的清洁环境中,确保产品存放不再有危险或损坏的地方。
- 倘将松紧带只能由授权的售后服务人员进行。
- 请勿自行拆卸或更换产品的任何部件,以防受伤或损坏设备。对产品的任何未经授权的改装都将使保修无效。
- 仅在允许蓝牙传输的环境中使用本产品。

个人安全说明
- 如果产品有相应防水功能,请确保其不超过规定的高度和深度,请勿使用。
- 执行需要全神贯注的高风险任务时,请勿使用本产品。
- 为了保护您的听力,请勿长时间高音量收听
- 请将产品及其包装放在儿童和宠物接触不到的地方。
- 以免发生意外或误吞事故

电池安全说明
该产品内置可充电电池,请阅读以下说明,确保安全使用和处置。
- 请勿将产品中的电池重拆/改装,如拆卸或刺穿电池。
- 仅将产品放置在环境温度为 0°C 至 35°C (32°F 至 95°F) 的环境中。
- 请勿在高产生热量、温度、高湿、高压或高温度的环境中使用或存放本产品。
- 保持产品干燥,远离液体或湿气。
- 只能使用经 FCC 或 CCC 认证、输出电压为DC 5V/1A的充电器。
- 充电时不要使用产品。
- 产品电池的设计寿命超过 6 小时。
- 因那当地的废物管理规定负责任地处理产品。

htc

法律声明
商标声明:
HTC和HTC标志为HTC公司的商标。
授权知识产权:蓝牙技术联盟授权使用。
2025版权归蓝洞科技有限公司所有。
本文件仅供参考,不构成任何形式的保证。本公司保留所有权利。

htc
Wireless Earphones 20

Quick Start Guide
HTC NE20

Product Specifications

Model:HTC NE20

Bluetooth
Range: ~ 10 m
Version: 6.0

Speaker
Diameter: 13 mm
Impedance: 32 Ω

Earphone power
Input: 5 V=150 mA
Battery capacity: 30 mAh
Battery life: ~ 4 hrs
Charging time: ~ 1.5 hrs

Charging case power
Input: 5 V=300 mA
Output: 5 V=60 mA
Battery capacity: 300 mAh
Charging time: ~ 1.5 hrs
Earphone recharges: 3 charges (when case is fully charged)

What's in the box

Components

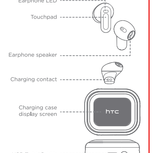

Take out and pair the earphones

If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and cyan alternately, indicating that they are in pairing mode.

Note:
- If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear a beep when they connect successfully.
- If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

How to put on the earphones

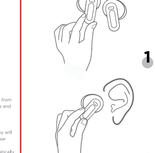

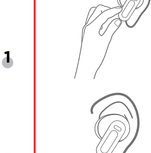

Power on and off

Power on
Opening the charging case will automatically turn on the earphones.
To manually turn on each earphone, press and hold the touchpad for three seconds.

Power off
Placing the earphones in the charging case and closing the case will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.

Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device

On your device, turn on Bluetooth and choose to connect to "HTC NE20".

Basic operations

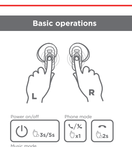

Key functions
- Play/Pause: Tap either earphone once.
- Volume up: Tap the right earphone twice.
- Volume down: Tap the left earphone twice.
- Play previous track: Tap the left earphone three times.
- Play next track: Tap the right earphone three times.
- Answer/End call: Tap either earphone once.
- Reject call: Press and hold either earphone for two seconds.
- Activate voice assistant: Press and hold the left earphone for two seconds.
- Mute/Unmute when using a single earphone: only press and hold the active earphone for two seconds.
- Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)
Note: Mode switching is disabled when you're using a single earphone only.

Indicator LEDs

Earphone LED	Status
Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired
Solid white	Charging
Off	Paired or fully charged

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously.
Note: Resetting the earphones will clear the Bluetooth pairing history.

Case Display Screen: Basic Operations

Activate the Display Screen
Lid-Open Activation: Open the charging case lid. Display activates automatically.
Touch Activation: Tap the display area when screen is off.
Manual Activation: Press the multi-function button.

Deactivate the Display Screen
Auto Deactivation: Display turns off automatically after 30 seconds of inactivity.
Manual Deactivation: Press the multi-function button once to turn off the display.

Note: Initial activation required for first-time use:
Method 1: Charge the charging case via the Type-C port to activate and power on.
Method 2: Press and hold the multi-function button for 8 seconds to power on.
Tip: The product is preset in shutdown mode upon factory shipment. Initial activation is required before first use.

Multi-Function Button Operations

Single-click: Turn the screen on/off.
Press and hold for 2 seconds: Open the system menu ("Powered Off" or "Restart").
Press and hold for 8 seconds:
When powered off: Powered On.
When powered on: Restore to factory settings.

Status Icons Guide

	Status
Solid red	Earphones in case, not connected to phone
Solid blue	Case connected to earphones, earphones paired to phone
	Status
Solid green	Earphone Charging
Solid black	Earphone fully charged
Solid red	Earphone in use

Case Display Screen: Feature Overview

Swipe right: Access the Menu Interface

Music Playback Functions

Sound Effect Switching

Click Icon: Switch Corresponding Sound Effect

TIKTOK Page Flipping and Like Function

After connecting the earphones to the mobile phone and entering TIKTOK, you can adjust the volume, switch to the previous/next video, and "like" the current video by tapping the charging case.(For iOS devices, you need to enable Assistive Touch in Settings > Accessibility > Touch > AssistiveTouch.)
1.This function depends on the TIKTOK software. Other apps may not support it.
2.This feature may have compatibility issues with certain phones, and some phones may not be able to use it.
3.If this feature is not in use, please disregard it.

Find headphones

Click to find left or right earbud when connected to the charging case.
The earbud will beep continuously during location mode.

Camera Control

Requires Bluetooth connection to a compatible device (e.g. smartphone).
1.Native camera access: Connects with the device's pre-installed camera application. Third-party photography apps are unsupported.
2.Compatibility issues: Some phone models may occur on certain smartphone models.
3.Non-functional handling: Disable this feature if inoperative on your device.

Open your phone's camera app and click the device button to take photos.

Activate Voice Assistant

Click the icon to activate the voice assistant.

Mini Games

Flappy Bird
Click the screen to navigate through obstacles and maintain flight.

Settings

Tap the icon to access configuration options on the charging case display.

Brightness Control

Brightness Control: Swipe up/down to adjust screen brightness.
Screen Time Settings: Swipe left/right to adjust durations. Tap to confirm selections.

Wallpaper settings

Long press the main interface for 3 seconds to switch wallpaper styles.

Menu Background

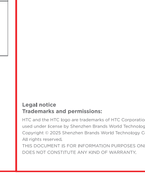

Toggle interface background options.

Time settings

Set current timestate and format preferences.

Language settings

Switch between different country/region languages.
Requires re-selection after factory reset.

Touch Wake-Up

Enable to wake screen by touch.
Disable to prevent accidental activation.
Default: Enabled.

AI Translation

Displays translated content synchronized with the connected app.

Important Safety Instructions

Carefully read the safety instructions in this document before using the product.

General safety instructions
- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Ensure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions
- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.
- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.

FCC ID: 2BHJR-NE20

FCC Caution
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP
Company name: MIRAMONT SOLUTIONS LLC
Company address: 34218 HIJURUGAS ST, TEMECULA, CA 92592 United States
FRN: 0026315288
Agent name: Wenyi Wang
Title: CEO
Email: wenyiwang@miramontsolutions.com
Phone: 951 407 3633

htc

Legal notice
Trademarks and permissions:
HTC and the HTC logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd.
Copyright © 2025 Shenzhen Brands World Technology Co., Ltd. All rights reserved.
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.

提示卡

颜色:白色
单粉卡

80 mm

114 mm

Special reminder operation

Before initial operation, power on the device.
1. Press and hold the multi-function button for 8 seconds to power on.
2. The battery level icon should appear on screen. If the charging case enters sleep mode due to low battery, charge it for 30 minutes before checking the charging case's battery level.

Connect to Bluetooth to synchronize the screen lock time
1. Please remove the earphones from the charging case.
2. Enable Bluetooth on your phone, locate "HTC NE20" in available devices, and tap to connect/pair.

Basic operations

Thank you for choosing our product! If you have any issues or unsatisfactory experiences during your shopping, please don't leave a negative review, instead, reach out to us at 7.info@earphone.com. We'd love to help and make it right for you!