FTI-STK1: Vehicle Coverage and Preparation Notes

FIRSTECH, LLC.
SUPPORT - 1 (888) 820-3690, EXT. 203

Make	Model	Year	Install	CAN	IMMO	BCM	Clutch	I/O Changes
DL-SUB9 Subaru	Crosstrek STD KEY AT (Canada)	2024	Type 1	20-Pin	Type B	DSD	N/A	Green White/Blue N/A

Covered vehicle use **BLADE-AL-SUB9** firmware and the following required accessories, Weblink Hub & ACC RFID1.
Flash module, and update the controller firmware. ***Please follow the directions for RFID programming before attempting to program the BLADE module to the vehicle.***
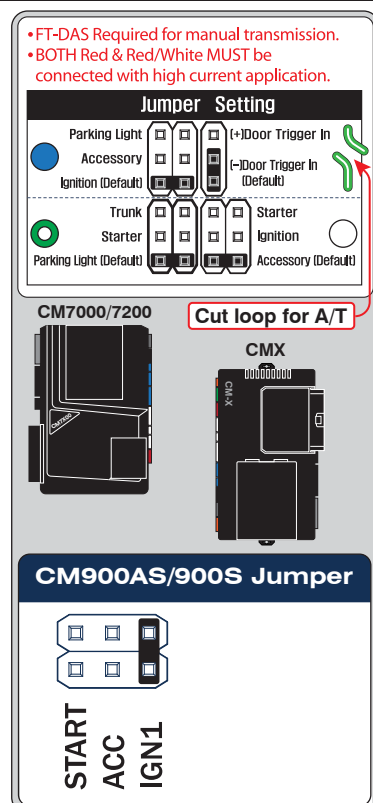
CAN: Type 1 CAN connections are made using the 20-Pin BCM adapter and require connecting the white 2-pin connectors at marker [D] of the illustration.

Immobilizer: Type B IMMO requires connecting the black and white 2-pin connectors at marker [C] of the illustration.

Lights: Parking lights are pre-wired in the FTI-STK1 harness. Replace the green/white wire of the CM I/O connector with the pre-terminated green/white wire of the harness.

ACC-RFID1 (REQUIRED): SUB9 firmware does not provide immobilizer data, an ACC-RFID1 is therefore required for remote start

2nd START: The FTI-STK1 harness is pre-wired with a red/black 2nd START output (not required in TYPE 1), cut and insulate the provided wire to prevent short circuits when not used.

I/O Changes: None required

Advisory 1: Program ACC-RFID1 before attempting to program the BLADE module to the vehicle.

Advisory 2: Secure all 2-pin connections, both used and unused, to the main harness body.

FTI-STK1: Installation and Configuration Notes

A **REQUIRED ACCESSORY**

B **ADAPTER REQUIRED**

C **REQUIRED CONFIGURATION** (TYPE B IMMO)

D **NO CONNECTION**

E **NO CONNECTION**
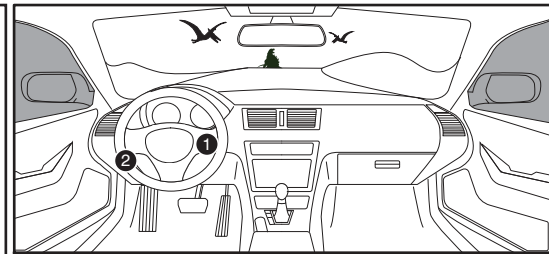
•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting

Parking Light	(+)Door Trigger In
Accessory	(-)Door Trigger In [Default]
Ignition [Default]	
Trunk	Starter
Starter	Ignition
Parking Light [Default]	Accessory [Default]

CM7000/7200 — Cut loop for A/T

CMX

CM900AS/900S Jumper
START ACC IGN1

FEATURE COVERAGE

IMMOBILIZER DATA	ARM OEM ALARM	DISARM OEM ALARM	DOOR LOCK	DOOR UNLOCK	PRIORITY UNLOCK	TRUNK/HATCH RELEASE	TACH OUTPUT	DOOR STATUS	TRUNK STATUS	BRAKE STATUS	E-BRAKE STATUS	A/M ALRM CONTROL FROM OEM REMOTE	A/M RS CONTROL FROM OEM REMOTE	AUTOLIGHT CTRL
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

A

BLADE

PWR

Notice:

Ground Connection Required

1 | 4 | 16

E

C

D

B

Ignition Switch Assembly ❶

BCM/Fuse Box ❷

WHITE

20 | 1
40 | 21

BCM/FUSEBOX
DRIVER SIDE DASH

GRAY

10 | 1
20 | 11

REAR VIEW

LED Programming Error Codes

Module LED flashing RED during programming

1x RED = Unable to communicate with RFID or
immobilizer data.
2x RED = No CAN activity. Check the CAN wire connections.
3x RED = No ignition detected. Check the ignition wire
connection and CAN.
4x RED = Required ignition output diode not detected.

INSTALL GUIDE

BLADE S E R I E S

CARTRIDGE INSTALLATION
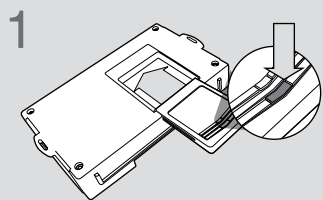
1 Slide cartridge into unit. Notice button under LED.

2 Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

1 For this installation, the Weblink HUB is required.
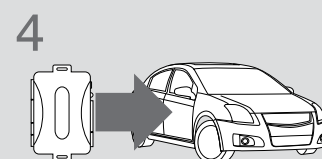
2 Remove OEM key 1 from keychain.

! Place all other keyfobs at least 1 foot away from the Weblink HUB. Failure to comply may result in damage to other keyfobs or interfere with the keyfob reading process.
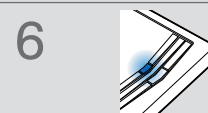
3 Flash the module using the Weblink HUB. Follow the on screen instructions to complete the keyfob reading process.

4 WARNING:
Do not press the module programming button.
Connect power first.
Connect module to vehicle.

5 Using OEM key 1, turn key to ON position.

ON

6 Wait, LED will turn solid BLUE for 2 seconds.

7 OFF   Turn key to OFF position.

8 Module Programming Procedure completed.