F850中英文说明书，风琴折，单黑，折好后成品尺寸：50*70mm
材质：80g双胶纸
印刷的时候去掉成品线

蓝牙耳机

使用说明书



使用前请仔细阅读本指南并保留备用

产品概述和包装清单

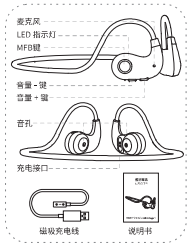

包装盒中包含无线耳机、充电电缆、使用说明书。

规格参数

传输距离	10 米	待机时间	约 100H
电池容量	70mAh	充电时间	约 2H
音乐时间	7H	充电方式	顶针 5V/1A
通话时间	5.5H		

按键操作

- **开机**：关机状态，长按 MFB 键约 2 秒，白色指示灯快闪 3 下。
- **关机**：开机状态，长按 MFB 键约 5 秒，蓝色指示灯快闪 3 下。无任何连接状态，待机 5 分钟内自动关机。
- **接听、挂断电话**：单击 MFB 键接听电话，通话中单击 MFB 键挂断电话。
- **拒接来电**：长按 MFB 键 2 秒后松手，拒接电话。
- **播放、暂停音乐**：连接成功后，单击 MFB 键，播放音乐；在播放音乐中，单击 MFB 键，暂停音乐。
- **上一曲**：长按音量 '+' 约 2 秒。
- **下一曲**：长按音量 '-' 约 2 秒。
- **音量**：通话或者听音乐时，单击音量 '+' 增加音量，单击音量 '-' 降低音量。
- **语音助手**：连接状态下长按 MFB 键约 2 秒松手→启动语音助手。
- **游戏模式、音乐模式**：连接状态下，三击 MFB 按键进入游戏模式，游戏模式下，三击 MFB 按键切换为音乐模式。
- **通音提示语言切换**：连接状态下，五击 MFB 按键 切换提示音语言。
- **恢复出厂设置**：关机状态下长按 MFB 键 10 秒恢复出厂设置。

蓝牙配对连接

- 蓝牙配对：关机状态长按 MFB 键约 4 秒，进入配对模式，蓝白指示灯交替闪烁，手机可搜索对应的型号，点击连接配对完成。配对成功白色指示灯快闪 3 下，并有语音提示。(如果搜索不到蓝牙请关闭手机的蓝牙重新连接。)
- 首次连接成功后，开机默认连接最后配对的设备。

双设备连接

- 一用二连接配对：当耳机连接一台设备后，若要连接第二台设备，需关闭第一台设备蓝牙断开连接，在第二台设备上连接上耳机，此时打开第一台设备上的蓝牙，耳机会自动连接第一台设备，即可完成一个耳机连接两台设备。
- 一拖二同连：当耳机连接过第一台和第二台设备后，将耳机和两个设备同时打开，耳机会先回连有效范围内最后连接的设备，再回连另一台设备。

断开耳机与手机的连接

要断开耳机与手机的连接（例如：将手机连接带其它蓝牙设备），请采用以下任一方式：
1、关闭耳机；2、关闭手机蓝牙；3、从手机历史配对名中删掉耳机的配对名。

充电说明

建议使用标准的充电器和随附的充电线对耳机充电。将磁吸充电线一端连接充电器，一端连接耳机的顶针充电座口给耳机充电。

- 充电时耳机自动关机，蓝色指示灯常亮。
- 充满电时，白色指示灯常亮。
- 低电量提醒：当电量低时，有语音提示，间隔 3 分钟提一次，同时蓝色指示灯闪 2 下。请连接充电器给耳机充电。

耳机佩戴

根据佩戴耳机的具体位置，对耳机位置相应的略作调整。

疑难排解

听到【蓝牙已断线】的声响

- 蓝牙对的协议距离是空旷地段，无障碍情况下可以达到 10m 距离传输，耳机与手机连接状态下，离开有效通信范围时会断开连接，5 分钟内重新进入有效通信范围时会自动回连手机，5 分钟未连接自动关机。

耳机没有声音

- 请确保耳机已经启动并完全充电。

手机与耳机连接不上

- 请确保耳机与手机已配对。
- 请确保手机的蓝牙装置已被启用。
- 请确保耳机位于手机 10 米范围之内，而当中并没有任何障碍物，例如墙壁或其它电子器材等。

如以上步骤未能解决问题，请尝试一下操作：

- 重新给耳机充电。
- 重启手机。
- 启动手机蓝牙功能并且删除以往所有配对历史记录。将蓝牙耳机重新与手机进行配对。

注意事项

- 切勿使用具有独性的清洁剂清理本产品。
- 切勿让本产品损坏或靠近火源，如煮食炉。
- 切勿让本产品长时间受阳光直接暴射。
- 切勿将本产品弄置于火中，避免发生爆炸。
- 切勿尝试拆开本产品作出任何修改，因为它并不包含任何维修组件。
- 切勿在雨中使用本产品。
- 为了更好的保护您的听力，请勿把音量调得太大。
- 当处于充电状态时，请勿清洁本产品，应先把耳机与充电器分开，再进行清理。
- 请勿让儿童玩耍本产品，细小的零件可能令儿童有窒息的危险。
- 如果长时间内不打算使用本产品，请您将它储存在干燥的环境中，并每月至少为耳机充电一次以延长寿命，避免极端的温度和灰尘。

⚠ 注意

- 针对可拆卸电池的产品，电池务必回收或妥善处理，针对不可拆卸电池的产品，禁止拆解。
- 如果电池能用不当，就有可能爆炸或泄漏，从而造成烧伤和其它人身伤害；如果电池泄漏，应小心并根据当地的电池处理相关法律和规定要求立即开置电池。

产品中有害物质名称及含量

部件名称	有害物质					
	铅 Pb	汞 Hg	镉 Cd	六价铬 Cr(VI)	多溴联苯 PBB	多溴二苯醚 PBDE
耳 机	X	O	O	O	O	O
电 池	X	O	O	O	O	O
充电线	X	O	O	O	O	O

本表格依据 SJ/T11364 的规定编制。

O 表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 规定的限量要求以下。

X 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572 规定的限量要求，且目前业界没有成熟的替代方案。

产品质量保修卡

* 在接受服务时必须提供此保修卡，请妥善保管。

产品型号	
商品产地	
用户姓名	
销售地点	
销售日期	
销售商名称	
销售商联系电话	
维修记录	

WIRELESS EARPHONE

USER MANUAL



Please read this guide carefully before use and keep it for future use.

Product overview and package list

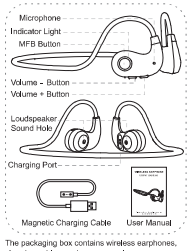

The packaging box contains wireless earphones, charging cables, and user manuals.

Specifications

Transmission distance	10m
Battery capacity	70mAh
Music time	7H
Talk time	5.5H
Standby time	100H
Charging time	2H
Charging port	POGO PIN 5V/1A

Function operation

- **Power On**: long press the MFB button about 2 seconds to turn on the earphone.
- **Power off**: long press the MFB button 5 seconds to turn off. The earphone will turn off automatically if there is no connection after being pairing status for 5 minutes.
- **Answer / Hang up the call**: click the MFB button to answer the call, and click the MFB button to hang up during the call.
- **Reject calls**: press the MFB button for 2 seconds to reject the in-coming call.
- **Play / Pause Music Player**: click the MFB button to play / pause music.
- **Previous track**: Long press the volume "+" for about 2 seconds.
- **Next track**: Long press the volume "-" for about 2 seconds.
- **Volume**: click the volume "+" to increase the volume, and click the volume "-" to decrease the volume.
- **Voice Assistant**: press the MFB button for about 2 seconds to activate the voice assistant.
- **Game mode / Music mode**: three click the MFB button to game mode, three click MFB button from game mode to music mode.
- **Voice prompt language switching**: five click the MFB button to switch languages when turned on.
- **Restore factory settings**: under the power off state, long press the MFB button for 10 seconds to restore factory settings.

Pairing

- When the earphone is off, touch the MFB button about 4 seconds to turn on, enter pairing mode. The phone will search pairing name of the earphone. The indicator light will flash white 3 times and have voice prompts when pairing successful. (If the pairing name can't be found, please turn off your phone's Bluetooth and reconnect).
- After the first successful connection, the earphone will automatically pairing in next time.

Connect two phones

- Connect two phones: First connect the first phone, then turn off the bluetooth of the first phone, then connect the second phone, turn on the first phone bluetooth, the earphone automatically connect the first phone, so that one earphone can be connected to two phones.
- Reconnect two phones: When the earphone has been connected to two phones, turn on the two phones and the earphone at the same time, the earphone will connect back to the last connected phone, and then connect back to another phone.

Disconnect

To disconnect the earphone from your phone (for example, connecting the earphone to another Bluetooth device), use any of the following methods: 1. Turn off earphone; 2. turn off the Bluetooth of the phone; 3. Delete the pairing name from list of pairing history on your phone .

Charging instructions

- Plug the Charging cable to the charging port of the earphone, the earphone automatically turn off when charging, the blue indicator light is remains on, The white indicator light remains on when fully charged.
- Low battery reminder: When the battery is low, there will be a voice prompt, which will sound every 3 minutes. The blue indicator light will flash twice (synchronized with the volume). Please connect a charger to charge the earphone.

Earphone to wear

The earphone position is slightly adjusted according to the exact position of the earphone is worn.

Troubleshooting

- **Hear the sound of "Disconnected"**
  Since the protocol distance of Bluetooth is an open area, the transmission distance can reach 10m in barrier less conditions. When the earphone and the mobile phone are connected, the connection will be disconnected when they leave the effective communication range, and the mobile phone will be automatically connected when they re-enter the effective communication range within 5 minutes.
- **There is no sound in the earphone.**
  Make sure the earphone is powered on and fully charged.
- **The device can't connect to the earphone.**
  Make sure the earphone is paired with your device. Make sure your device's Bluetooth is enabled.

Make sure that the earphone is located within 10 m of the device and there are no obstructions, such as walls or other electronic devices.

- **If the above steps can't solve the problem, please try the following methods:**
- Re-charge your earphone.
- Restart your phone.
- Delete your device past pairing history. Re-pair the earphone with your phone.

Matters needing attention

- Do not use corrosive cleaning agents to clean the product.
- Do not allow this product to heat or be near fire sources, such as cooking stoves.
- Do not expose this product to direct sunlight for a long time.
- Do not dispose of this product in fire to avoid explosion.
- Do not attempt to disassemble this product for any modification, as it does not contain any repair components.
- Do not use this product in the rain.
  In order to better protect your hearing, do not turn the volume too high.
- Do not clean the product while it is charging. Separate the earphone from the charger before cleaning it.
- Do not allow children to play with this product, small parts may cause choking hazards to children.
- If you do not intend to use this product for a long time, please store it in a dry environment and monthly Charge your earphone at least once to extend their life and avoid extreme temperatures and dust.

⚠ Warning

- Batteries must be recycled or properly disposed when the product Batteries could removable. Do not disassemble the battery when the product Batteries could not removable.
- If the battery is not used properly, it may explode or leak, causing burns and other injuries. If the battery leaks, be careful and dispose of the battery immediately in accordance with local laws and regulations on battery handling.

FCC

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
  Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- **RF warning for Portable device:** The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Quality Warranty Card

This warranty card must be provided when receiving the service, please keep it properly.

Model	
Commodity Origin	
User Name	
Sales Location	
Sale Date	
Seller's Name	
Seller's contact number	
Repair Record	