zingbird
www.zingbird.tech

Z67 USER MANUAL

Sports Wireless Headphone

V1

Contents

1. Packing List & Product Parameters.....01
2. Product Overview.....02
3. Important Reminder.....03
4. How to Wear.....04
5. How to Charge.....05
6. Power on / Power Off.....06–07
7. How to Pair/Reset.....08–09
8. Button Control Music/Call/Voice Assistant.....10
9. Button Control (Mono Earbud Mode).....11
10. How to sync volume on Android.....11
11. Battery Warning & Storage and Maintanance.....12
12. IC Caution & FCC Caution.....12–13
13. FAQ.....14–16

Packing List

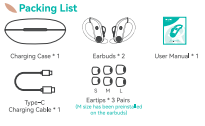

Product Parameters

Model No	Z67
Charging Port	Type C
Input	5V⎓1A
Support Profile	A2DP,AVRCP,HSP,HFP
Earbuds	50mAh 3.7V, 0.185Wh
Charging Case	400mAh, 3.7V, 1.48Wh
Charging Time	1h for earbuds; 2h for charging case
Transmission Range	33 feets(with no obstacle)
Support Device	Smartphones, Computer & Tablet

Overview

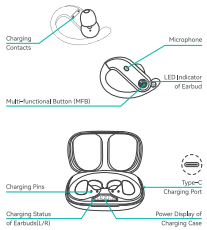

Important Reminder

1. Before use, remove the protective films from the charging contacts; Otherwise, the headphones won't charge.

2. If the headphones won't charge, clean the earbud's magnetic charging contacts and the charging pins on the case with cleaning stick.

3. If the sound becomes low, clean the protective grille on both earbuds.

4. Choose the suitable ear tips and wear them properly for better sound quality.

How to Wear

Step 1:
Choose the suitable eartips. (M size has been preinstalled on the earbuds)

Change eartips:
① Place eartips onto the earbuds ② Firmly push eartips onto the earbuds

Step 2:
Insert the earbuds into your ear canals, gently rotate them to find the correct position, and adjust for the best fit.

How to Charge?

Earbuds Charging

① ① ① ① Place both earbuds in the charging case.
While charging, the LED indicator will flash white.
When the earbuds are fully charged, the white light will turn off.

Charging Case Charging

Please use the included Type-C USB cable with your charger to charge the case.
During charging, the digital display will flash, showing real-time power.

Note: Before the initial use, please make sure to fully charge both the earbuds and the charging case.

Power On and Power Off

Auto Power On

Take out the earbuds from the case, it will automatically power on.

Auto Power Off

Put both earbuds in the case and close the case, earbuds will auto power off.

Note: These earbuds will power off automatically if they don't connect to any device within 5 minutes.

Manual Power On

Long press either Earbud for 3s, then the earbud will power on, the LED indicator will flash white.

Manual Power Off

Long press either Earbud for 5s, the LED indicator will flash white, then the Earbud will power off.

Note: The headphones can be manually powered off by long-pressing for 5 seconds in the connected state, standby state, or when music playback is paused. Otherwise, you can put it back in the case to power off automatically.

How to Pair

Stereo Mode

① Take out both earbuds from the case.
(Both earbuds will automatically power on and enter pairing mode within 10s.)
② Activate the Bluetooth setting on your device (Phone/iPad/PC).
③ Search and select "Z67" to connect.

Single Earbud Mode

① Take out one earbud from the charging case.
② Turn on Bluetooth on your device and select "Z67" to successfully connect the earbud.

Second-Time Use and Pairing with Another Device

For second-time use, if the earbuds have previously connected to your device and its Bluetooth setting is enabled, they will automatically reconnect when you remove the earbuds from the charging case.

To pair with another device, follow these steps: Disconnect "Z67" from the last paired device and forget the pairing record on your device. Then, attempt to connect the earbuds to the new device; they should work properly.

How to Reset

Note: When only one earbud is working / Earbuds fail to pair or connect related issues / Can't find "Z67" on the device, you should to reset them.
1. Remove/Forget (Z67) Records: Remove or forget (Z67) from all your connected devices and turn off their Bluetooth settings.
2. When (Z67) is turned on, simultaneously long-press both earbuds for 5s to power them off. Do not place them back into the charging case.
3. Reset (Z67): Quickly click both earbuds 5 times to initiate the reset process. Both earbuds' LEDs will flash white 3 times.
4. Power On and Reconnect: Long-press both earbuds again for 3s to power them on, turn on the Bluetooth of your device and select (Z67) to connect.



Button Control

Dual Earbud Mode

Music

Play/Pause:	Single click L/R earbud
Next Track:	Double click R earbud
Last Track:	Double click L earbud
Volume +:	Long press R earbud
Volume -:	Long press L earbud

Call

Answer Call:	Single click L/R earbud
End Call:	Single click L/R earbud
Reject Call:	Long press L/R earbud 2s
Volume +:	Long press R earbud
Volume -:	Long press L earbud

Voice Assistant

Activate Siri or other voice assistants:
Triple click L/R earbud

Mono Earbud Mode

(Earbud does not support increasing or decreasing the volume)

Music

Play/Pause:	Single click L/R earbud
Next Track:	Double click L/R earbud
Last Track:	Unsupported
Volume Control:	Unsupported

Call

Answer /End Call:	Single click L/R earbud
Reject Call:	Long press L/R earbud 2s

Voice Assistant

Activate Siri or other voice assistants:
Triple click L/R earbud

How to sync volume on Android?

1. Find "Settings" on the phone
2. Enable "Bluetooth"
3. Connect with "Z67"
4. Click on the "Set button"
5. Enable the option "Sync volume with phone"

Battery Warning

Using the wrong battery can cause fire and other hazards(for example, in the case of some lithium battery types).

1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery that can result in an explosion.
2. Do not leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Storage and Maintenance

1. If the earbuds have been unused for more than 3 months, we recommend that you charge them.
2. Please use chargers that are FCC (Federal Communications).
3. Do not disassemble earbuds.
4. Adult supervision is required for children aged 6 and under.
5. Do not expose earbuds to high or low temperature, do not use the earbuds in thunderstorm storm. Avoid falling or violent impact of the device. Keep the device away from fire, do not put.

IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s).
Operation is subject to the following two conditions:
(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même le brouillage susceptible de compromettre le fonctionnement de l'appareil.
Le matériel a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Le dispositif peut être utilisé dans des conditions d'exposition portables illimitées.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to attempt to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase separation between equipment and receiver.
-- Connect the equipment to an outlet on a circuit different from that to the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FAQ

If you can refer to the following solutions, and if you can't resolve the issue, please contact us by amazon or www.zingbird.tech, and we will provide full support throughout.!

1. My headphones won't charge. What should I do?

① Check if there are any foreign objects on the charging contacts of the headphones and charging case. If so, use a cleaning stick dipped in a small amount of alcohol to clean the charging contacts and the charging pins.

② Check if the headphones can power on normally. If the charging case has power, and if it can charge.
③ Ensure that you are using a standard adapter and the provided Type-C data cable for charging.

2. How do I pair my headphones with my phone/computer if they won't connect?

① Fully charge the headphones, reset them, and then re-pair.
② Check if the headphones are already connected to another device. If they

are, disconnect from the other device and then re-pair with the new device.
③ If headphones can't pair with a computer, it may be because your device doesn't have Bluetooth capability. You can try using an external Bluetooth receiver.
④ It might also be due to a lower Bluetooth version on your computer. Consider upgrading the Bluetooth driver.

3. Signal interruptions and music cutting in and out.

① Make sure the headphones and the device are not more than 33 feet apart (with no obstacles), and ensure that the headphones have sufficient battery and are at a normal temperature.
② If the above conditions do not resolve the issue, follow these steps:
Place the headphones back in the charging case and close the lid.
Forget the "Z67" device from your phone's Bluetooth list.
After one minute, remove the headphones from the charging case, open your phone's Bluetooth, and search and re-pair with "Z67."

4. Unclear calls or unable to make calls.

① Confirm a master-slave switch to ensure that both headphones have the same call quality.
② Verify that you are wearing the master earphone (the one placed in the charging case and closed with the lid will switch to master-slave mode).
③ If you are using a conferencing APP, it might be a compatibility issue with the application.

5. Automatic volume adjustments or low volume.

① Check if there is sweat on the touch area. If so, wipe it with a dry paper towel, and then check if the headphones still automatically adjust the volume.
② Check if the audio output port is blocked. If it is, use a cleaning stick to clean it.

③ Try adjusting the device's volume and the headphone's volume separately to the maximum to see if the headphone volume is still low.

6. Poor sound quality and not satisfied?

Please adjust the ear tip size and the orientation of the headphones for a better fit.

Customer Sevice

Thank you for purchasing the genuine product. Please scan the QR code to activate the lifetime warranty.

www.zingbird.tech

FC CE IC RoHS