GAMESIR

# G7 PRO TRI-MODE

Xbox Wired, Mobile & PC Wireless Controller

**Model No.: GameSir-G7 Pro**
**Scan the code for more tutorials ➡**
https://gamesir.com/pages/support

## PACKAGE CONTENTS

Controller *1 · Charging Station *1 · Receiver *1 · D-pad *2 · Cable Retainer *1
3m Type-C cable*1 · Xbox Game Pass Ultimate Card (1 month) *1
GameSir Sticker*1 · Thank You & After-sale Service Card *1 · Manual *1

## REQUIREMENT

*Xbox Series X|S / Xbox One / Android 8.0 or above / PC (Win 10 or above) with USB port

## DEVICE LAYOUT

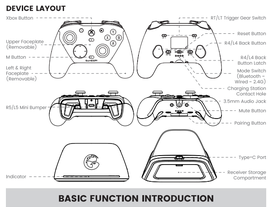


## BASIC FUNCTION INTRODUCTION

### ACCESSORY REPLACEMENT GUIDE

### CONNECTION STATE

| Xbox Indicator | Description |
|---|---|
| Breathing | Reconnecting State<br>*It can connect to previously paired devices. |
| Flowing Light Mode (Surround Flowing Effect) | Pairing State (Bluetooth Mode)<br>*In this state, it can be discovered and paired with devices. |
| Solid | Connection Successful |
| Off | Power-off State<br>*The controller will enter standby state after 10 minutes of inactivity in 2.4G or Bluetooth mode. |

### OPERATING INSTRUCTIONS

| Description | Operation |
|---|---|
| Power On/Off | Short press the Xbox button to power on. While powered on, press and hold the Xbox button for 5 seconds to power off. |
| Pairing | In Bluetooth mode, press and hold the pairing button for 2 seconds to enter forced pairing mode. |
| Preset Configuration Switching | M+Y Configuration 1 · M+B Configuration 2<br>M+A Configuration 3 · M+X Configuration 4 |
| Hair Trigger Mode | Enable/disable hair trigger mode<br>Press and hold the M button + LT/RT button for 2 seconds. |
| Low Battery | When the battery is below 15%, the Xbox indicator will flash red. |
| Charging | You can charge the controller via the Type-C port or the charging station. |

## WINDOWS CONNECTION TUTORIAL

### WIRED CONNECTION

1. Use the included Type-C cable to connect the controller to your computer, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.

### RECEIVER CONNECTION

1. Insert the receiver into the computer.
2. Toggle the controller's mode switch to the 2.4G mode, and press the Xbox button briefly to power on. Wait for the controller to connect.
3. Once connected successfully, the Xbox indicator will remain solid.

## ANDROID CONNECTION TUTORIAL

### BLUETOOTH CONNECTION

1. Toggle the controller's mode switch to the Bluetooth mode, and press the Xbox button briefly to power on.
2. Open the Bluetooth list on your phone, find the device named GameSir-G7 Pro, and click to connect.
3. Once connected successfully, the Xbox indicator will remain solid.
*If the connection is unsuccessful, press and hold the pairing button on the controller to re-enter pairing status.

## XBOX CONNECTION TUTORIAL

### WIRED CONNECTION

1. Use the included Type-C cable to connect the controller to the Xbox console, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.
* Only supports wired connection.

## VOLUME ADJUSTMENT

1. Hold the M button + the D-pad up/down to increase/decrease the main volume. (11 levels in total).
**A sound cue will be provided when adjusting to the maximum or minimum level.**
**Requires headset connection.**

2. Hold the M button + the D-pad left/right to increase game volume (while decreasing voice volume) / decrease game volume (while increasing voice volume).
**A sound cue will be provided when adjusting to the maximum, medium or minimum level.**
**PC only works on wired consoles.**

3. Mute Function: Press the mute button to enable the mute function; the mute indicator will turn solid red. Press the mute button again to disable the mute function (default state); the mute indicator will turn off. While the mute function is active, holding the mute button will temporarily disable it. Release the button to restore the mute function.

## EXTRA BUTTON SETTING

Set the extra button value: Press and hold the M button + L4/R4/L5/R5 button, and the Xbox indicator will start flashing slowly. Press the button you want to map to the extra button, and the Xbox indicator will return to a solid light, indicating that the extra button setting is complete.
* Within the setting mode, pressing the corresponding extra button will clear its button value.

## STICKS & TRIGGERS CALIBRATION

1. Set the trigger to analog mode, then press and hold until the Xbox indicator starts flashing slowly.
2. Ensure that the LT & RT triggers and the left & right sticks are not being touched. Then Press the A button. The Xbox indicator will turn off.
3. Press the LT & RT triggers to their maximum travel for 3 times. Rotate the left & right sticks to their maximum angles for 3 times. Press the A button. A solid light on the Xbox indicator indicates that the calibration is complete.

## CONTROLLER RESET

If the controller encounters issues such as being unable to power on or off properly, you can use a small object similar to the size of a paperclip to press the Reset button inside the circular hole on the back of the controller. This will force the controller to power off.

## CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download the "GameSir Nexus" software from the Microsoft Store on Xbox/PC or from gamesir.com.

## ⚠ PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable ports.
- Use a soft, dry cloth while cleaning.
- DO NOT use the product while charging, in cockpit or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

## WASTE ELECTRICAL & ELECTRICAL EQUIPMENT

**CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)**
Applicable in the European Union and other European countries with separate collection systems.

This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your product to your local retailer upon purchase of an equivalent product. Correct disposal of this product helps conserve valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you sy so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

## DECLARATION OF CONFORMITY

**FCC WARNING**
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**IC CAUTION**
This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

**STATEMENT OF COMPLIANCE WITH EU DIRECTIVE**
Hereby, Guangchao Chicken Run Network Technology Co., Ltd. declares that this Gamesir G7 Pro Controller is in compliance with the Directive 2014/30/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.

The power provided by the charger is between the minimum 1W required by the radio device and the maximum 15W to achieve the maximum charging speed.

## WARNINGS AND SAFETY INFORMATION

All information regarding the use of the products can be found in the attached user manual.
Before using the product, please read the manual carefully and follow the manufacturer's recommendations. Also, please review the following safety information and warnings before use:

### USAGE WARNINGS

**RISK OF DEVICE DAMAGE:**
- Controllers should be used exclusively for their intended purpose—video games. Do not use the device for any purpose other than those recommended by the manufacturer.
- If the controller comes into contact with liquid, immediately disconnect it and dry it according to the manufacturer's instructions.
- Avoid applying excessive force when pressing buttons or operating the controller to prevent damage to the mechanisms.

**RISK TO THE USER:**
- During extended use, take regular breaks to avoid fatigue in your hands, wrists, and shoulders.
- Ensure the controller is placed securely to prevent it from slipping or tipping over during use.
- Controllers with force feedback systems may generate sudden movements—always hold them with both hands while playing.

**POWER AND CONNECTION RISKS:**
- Do not use damaged power cables or USB cables. Always use the original accessories provided by the manufacturer.
- Ensure that USB ports and power sockets are clean and free of debris to ensure a proper connection.
- For wireless devices, regularly charge the batteries or replace them with new ones to ensure continuous operation.

## PROPER USAGE INFORMATION

**PREPARATION AND SETUP:**
- Refrain from use, install any software or drivers provided by the manufacturer if required.
- Place the controller on a stable surface, such as a desk, to ensure comfort and precision during use.
- Make sure all cables are properly connected and secured to prevent accidental disconnections.

**SAFE USAGE:**
- Adjust the device settings in games (e.g., sensitivity, vibrations) according to your preferences to ensure comfort and avoid strain on your hands or shoulders.
- Regularly check the condition of buttons, joysticks, and other components to ensure they are functioning properly.
- For controllers with force feedback, ensure the feedback settings are not too strong.

**ADDITIONAL PRECAUTIONS:**
- Cleaning and Maintenance: Regularly remove dust from the controller using a dry, soft cloth. Avoid using harsh chemicals that may damage the surface of the device.
- Storage: After use, disconnect the controller from the console or PC and store it in a dry, dust-free place.
- Cable Management: For wired controllers, ensure cables are organized to prevent tangling or damage.

## COMPLIANCE DECLARATION

Controllers are designed in accordance with the safety requirements outlined in Regulation (EU) 2023/988. They meet the essential safety requirements and other relevant provisions of the EU product safety.
This manual is a translation of the original user manual created by the manufacturer.
Detailed information regarding the distributor/manufacturer warranty conditions is available on the website: www.gamesir.com.
The product must be regularly maintained (cleaned) by the user or through specialized service points at the manufacturer's discretion. The product must be free of any hazardous contamination upon delivery to service maintenance actions, the physical condition of the product should be assessed regularly (at least once a week) to detect any deviation from the condition of a new product. If any deviation is detected or identified, immediate maintenance (cleaning) or servicing actions should be taken. Failure to perform proper maintenance (cleaning) and respond to identified issues may result in permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect.
EU Company: SC DIGI RIGAMICRO SRL
Address: Str. Mihai Bravu, Nr. 330, Bl. 42, Scara 1, Etaj 5, Apartament 29, 22082Bucuresti Sectorul 2, Romania
Producer: Guangchao Chicken Run Network Technology Co., Ltd.
Address: Room 1001E003, No. 19, Yard 2, Yuanxun West Street, Tianhe District, Guangzhou, China
GameSir and the GameSir logo are registered trademarks of Guangchao Chicken Run Network Technology Co., Ltd. All other trademarks are the property of their respective owners.

## LI-ION BATTERY

The device is equipped with a Li-ION (lithium-ion) battery, which, due to its physical and chemical structure, ages over time and with usage. The manufacturer specifies the maximum operating time of the device under laboratory conditions (new battery, fully charged). Actual usage time may differ from the declared value and this is not considered a defect of the device. To maintain the maximum lifespan of the battery, it is not recommended to discharge it below 3.8V or 15% of its total capacity. Lower values, such as 2.5V for the cell, permanently damage the battery and are not covered by the warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50%, and the charge level should be checked regularly every two months. Store the battery and device in a dry place, away from direct sunlight and negative temperatures.

## LI-PO BATTERY

The device is equipped with a Li-PO (lithium-polymer) battery, which, due to its physical and chemical structure, ages over time and with usage. The manufacturer specifies the maximum operating time of the device under laboratory conditions (new battery, fully charged). Actual usage time may differ from the declared value and this is not considered a defect of the device. To maintain the maximum lifespan of the battery, it is not recommended to discharge it below 3.8V or 15% of its total capacity. Lower values, such as 2.5V for the cell, permanently damage the battery and are not covered by the warranty. If the battery or the entire device is not used for more than one month, the battery should be charged to 50%, and the charge level should be checked regularly every two months. Store the battery and device in a dry place, away from direct sunlight and negative temperatures.

JUST IN GAME.
www.gamesir.com
Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.
https://gamesir.com/pages/we-are-gamesir-global (CUSTOMER SERVICE)
Ver.: G7 Pro-251207-V4

ENGLISH

繁體中文

# G7 PRO TRI-MODE

Xbox Wired, Mobile & PC Wireless Controller

型號: GameSir-G7 Pro
掃描獲取更多教程 ➡
https://gamesir.com/pages/support

## 包裝內容

手柄*1 · 充電底座*1 · 接收器*1 · 十字键*2
數據線認證款*1 · Type-C數據線3.米*1 · Xbox Game Pass體品卡(1個月)
GameSir貼紙*1 · 售後感謝卡*1 · 說明書*1

## 要求

*Xbox Series X|S / Xbox One / Android 8.0 或更高版本 / 帶USB介面的電腦 (Win 10或更高版本)

## 設備佈局




## 基礎功能介紹

### 配件更換指南



### 連接狀態

| Xbox指示燈 | 說明 |
|---|---|
| 呼吸 | 回連狀態<br>*可與已經配對的設備進行連接。 |
| 流光模式<br>(環繞流光) | 配對狀態(藍牙模式)<br>*進入該狀態後可被設備搜索配對。 |
| 常亮 | 連接成功 |
| 熄滅 | 關機狀態<br>*手柄2.4G或藍牙模位下10分鐘未操作進入待機狀態。 |

### 操作說明

| 描述 | 操作 |
|---|---|
| 開關機 | 短按Xbox按鍵開機,開機狀態下長按5秒Xbox按鍵關機。 |
| 配對 | 藍牙模式下可通過長按2秒配對按鍵入強制配對狀態。 |
| 預設配置切換 | M + Y 配置1 · M + B 配置2<br>M + A 配置3 · M + X 配置4 |
| 快速扳機 | 開啟/關閉快速扳機模式<br>長按2秒 M + LT/RT |
| 低電 | 手柄電量低於15%時,Xbox指示燈紅色閃爍提示。 |
| 充電 | 可通過手柄Type-C介面或充電底座對手柄進行充電。 |

## WINDOWS 連接教程

### 有線連接

1.使用附贈的Type-C數據線連接手柄和電腦,短按Xbox鍵開機。
2.連接成功後,Xbox指示燈常亮。

### 接收器連接

1.將接收器插入電腦中。
2.將手柄模式切換到2.4G,短按Xbox鍵開機,等待連接。
3.連接成功後,Xbox指示燈常亮。

## Android連接教程

### 藍牙連接

1.將手柄模式切換到藍牙,短按Xbox鍵開機。
2.打開手機藍牙列表,選擇設備GameSir-G7 Pro,點擊連接。
3.連接成功後,Xbox指示燈常亮。
*如果未連接成功,需要長按手柄的配對鍵重新進入配對狀態

## Xbox連接教程

### 有線連接

1.使用附贈的Type-C數據線連接手柄和Xbox主機,短按Xbox鍵開機。
2.連接成功後,Xbox指示燈常亮。
*該支持有線連接

## 聲音調節

1. 按住M键 + 方向键上/下,可增大主音量/減小主音量。(共11級)
**!!!調節最大/最小級位時,會有提示音。**
**需要連接耳機後使用。**

2. 按住M键 + 方向键左/右,可增大遊戲音量 (同步減小人聲音量) /減小遊戲音量 (同步增大人聲音量)。
**!!!調節最大/中間/最小級位時,會有提示音。**
**僅限有線連接主機使用**

3. 靜音功能: 單擊靜音键,靜音模式啓常亮,靜音功能開啓,再次單擊靜音键,靜音模式關閉,靜音功能關閉(默認),在靜音功能開啓的狀態下,長按靜音键可暫時關閉靜音功能,松開靜音键後恢復開啓功能開啓狀態。

紅燈常亮-開麥

Solid Red Light = Microphone Muted

## 拓展設置

### EXTRA BUTTON SETTING

設定拓展鍵鍵值: 同時按住M键+L4/R4/L5/R5键,Xbox指示燈進入慢閃,單擊需映射到拓展鍵上的按键,Xbox指示燈常常亮,拓展鍵設定完成。
*進入設定模式後,若直接單擊對應拓展鍵,則清空該拓展鍵鍵值。

### 搖杆、扳機的校準

1.將扳機切換至模拟模式,長按 + ,直至Xbox指示燈慢閃。
2.確保不碰觸LT、RT扳機及左右搖杆的狀態下,按下A鍵,此時指示燈熄滅。
3.將雙LT和RT至最大行程3次,最大角度旋轉左右搖杆各3圈後,按下A鍵,Xbox指示燈恢復為常亮後,校準完成。

### 手柄Reset

當遇到手柄使用異常卡住,如無法正常開關機的情況,可用類似針卡針尺寸的物件,按下手柄背部圓孔裏的Reset按鍵即可手柄強制關機。

### 通過GameSir Nexus軟體自定義配置

前往Xbox,電腦的Microsoft Store,或gamesir.com網站下載"GameSir Nexus"軟體。

## ⚠ 使用前請務必閱讀本注意事項

- 內含細小零件,請務必放在遠以下兒童觸及不到的地方,若不慎吞食或吸入,請立即就醫。
- 請勿靠近火源使用產品。
- 請勿將產品置於烈日下及高溫或高濕的環境中。
- 請勿將產品置於潮濕或多塵的環境中。
- 請勿撞擊產品或摔落其高度。
- 請勿直接接觸USB端口,否則可能會導致故障。
- 請勿用力彎曲或拉扯線材。
- 請使用柔軟的乾布清洁。
- 請勿使用汽油或稀釋劑等化學品。
- 請勿自行拆卸、修理、或改造。
- 請勿將產品用於除本說明書以外的用途。對用於非原本用途造成的事故或損壞,我們概不負責。
- 請勿直視光源,它可能會傷害你的眼睛。
- 如果您有任何有關產品品質的問題或建議,請聯繫GameSir或您當地的經銷商。

## 產品型號:GameSir-G7 Pro

「取得兼容性認證之信功率和頻寬:2.4G:13.5dBm,藍牙:10.5dBm,符合國家規定的最大功率限制。此外,功率或頻寬原設計之特性及功能,低功率射頻模組不受影響,不得擅自變更發射頻率、提高原廠設定之功率或改變原設計之特性及功能。低功率射頻模組之操作須符合國家無線電管理法規規定:第二條:未經許可,任何公司、商號或使用者不得擅自變更頻率、加大功率或變更原設計之特性及功能。第三條:低功率射頻模組之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。前述合法通信,指依電信管理法規定作業之無線電通信。低功率射頻模組須忍受合法通信或工業、科學及醫療電波輻射性電機設備之干擾。」

## 電池說明

## 充電

## 保養

## 聲音調節

## 拓展設置

## 產品型號:GameSir-G7 Pro

## 注意事項

## 產品型號:GameSir-G7 Pro

## 產品型號:GameSir-G7 Pro

## 產品型號:GameSir-G7 Pro

JUST IN GAME.
www.gamesir.com
Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.
https://gamesir.com/pages/we-are-gamesir-global (CUSTOMER SERVICE)

DEUTSCH

# G7 PRO TRI-MODE

Xbox Wired, Mobile & PC Wireless Controller

**Modellname: GameSir-G7 Pro**
**Code für weitere Anleitungen scannen ➡**
https://gamesir.com/pages/support

## PAKETINHALT

Controller *1 · Ladestation *1 · Empfänger *1 · D-Steuerkreuz *1 · Kabelhalterung *1
USB-C-Kabel 3.m *1 · „Xbox Game Pass Ultimate"-Karte (1 Monat) *1 · GameSir-Sticker *1
Danke- und Kundendienstkarte *1 · Handbuch *1

## ANFORDERUNGEN

*Xbox Series X|S / Xbox One / Android 8.0 oder höher / PC (Win 10 oder höher) mit USB-Anschluss

## GERÄTELAYOUT

## EINFÜHRUNG IN BASISFUNKTIONEN

### LEITFADEN ZUM AUSTAUSCHEN DER ACCESSOIRES

### VERBINDUNGSSTATUS

| Xbox-LED-Anzeige | Beschreibung |
|---|---|
| Pulsiert | Wiederverbindungsmodus<br>* Zur Herstellung der Verbindung zu zuvor gekoppelten Geräten. |
| Fließlichtmodus (Umgebendes Fließeffekt) | Kopplungsmodus (Bluetooth-Modus)<br>* Zum Erkennen und Verbinden von Geräten. |
| Leuchtet durchgehend | Verbunden |
| Aus | Ausgeschalteter Zustand<br>* Der Controller wechselt nach 10 Minuten Inaktivität im 2.4G-oder Bluetooth-Modus in den Standby-Modus. |

### BEDIENANWEISUNG

| Beschreibung | Bedienung |
|---|---|
| Ein-/Ausschalten | Drücken Sie die Xbox-Taste kurz, um das Gerät einzuschalten. Im eingeschalteten Zustand halten Sie die Xbox-Taste 5 Sekunden lang gedrückt, um es auszuschalten. |
| Koppeln | Halten Bluetooth-Modus die Kopplungstaste 2 Sekunden lang gedrückt, um den Kopplungsmodus zu aktivieren. |
| Konfigura-tionswechsel | M+Y Konfiguration 1 · M+B Konfiguration 2<br>M+A Konfiguration 3 · M+X Konfiguration 4 |
| Haartrigger-Modus | Aktiviert/deaktiviert den Haartrigger-Modus.<br>Halte die M-Taste und die LT+/RT+Taste 2 Sekunden lang gedrückt. |
| Niedriger Akkustand | Wenn der Akku weniger als 15 % Restkleistung aufweist, blinkt die Xbox-LED-Anzeige rot. |
| Aufladen | Du kannst den Controller über den USB-C-Anschluss oder die Ladestation aufladen. |

## WINDOWS-VERBINDUNGSANLEITUNG

### KABELGEBUNDENE VERBINDUNG

1.Verwende das enthaltene USB-C-Kabel, um den Controller mit deinem Computer zu verbinden, und drücke dann kurz auf die Home-Taste, um den Controller einzuschalten.
2.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.

### EMPFÄNGERVERBINDUNG

1.Verbinde den Empfänger mit deinem Computer.
2.Schiebe die Modusweschelstaste des Controllers in die 2.4-GHz-Modus-Position und drücke kurz auf die Xbox-Taste, um den Controller einzuschalten. Warte, bis die Verbindung erfolgreich hergestellt wurde.
3.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.

## ANDROID-VERBINDUNGSANLEITUNG

### BLUETOOTH-VERBINDUNG

1.Schiebe die Modusweschelstaste des Controllers in die Bluetooth-Modusposition und drücke kurz auf die Xbox-Taste, um das Gerät einzuschalten.
2.Öffne die Liste mit den Bluetooth-Geräten auf deinem Mobilgerät, suche nach dem Gerät "GameSir-G7 Pro" und tippe darauf, um eine Verbindung herzustellen.
3.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.
* Wurde die Verbindung nicht hergestellt, halte die Kopplungstaste am Controller gedrückt, um den Kopplungsmodus erneut zu aktivieren.

## XBOX-VERBINDUNGSANLEITUNG

### KABELGEBUNDENE VERBINDUNG

1.Verwende das enthaltene USB-C-Kabel, um den Controller mit deiner Xbox-Konsole zu verbinden, und drücke dann kurz auf die Home-Taste, um den Controller einzuschalten.
2.Nach erfolgreicher Verbindung leuchtet die Xbox-LED-Anzeige durchgehend.
* Nur kabelgebundene Verbindung wird unterstützt.

## LAUTSTÄRKENANPASSUNG

1.Halte die M-Taste gedrückt und drücke auf dem Steuerkreuz nach oben/unten, um die Gesamtlautstärke zu erhöhen/verringern (insgesamt 11 Stufen).
* Ein Tonefeke wird abgespielt, wenn du die höchste/niedrigste Stufe erreichst.
* Erfordert eine Headset-Verbindung.

2.Halte die M-Taste gedrückt und drücke auf dem Steuerkreuz nach links/rechts, um die Spielelautstärke zu erhöhen und die Sprachlautstärke zu reduzieren (bzw. die Spielelautstärke zu reduzieren und die Sprachlautstärke zu erhöhen.
* Ein Tonefeke wird abgespielt, wenn du die höchste/mittlere/niedrigste Stufe erreichst.
* Funktioniert nur mit Xbox-Konsolen.

3.Stummschaltfunktion: Drücke die Stummschaltenn-Taste, um die Stummschaltfunktion zu aktivieren. Die Stummschalten-LED-Anzeige leuchtet dauraufhin durchgehend rot. Drücke erneut auf die Stummschaltenn-Taste, um die Stummschaltfunktion wieder auszuschalten (Standardstatus). Die Stummschalten-LED-Anzeige leuchtet daraufhin nicht mehr. Du kannst die Stummschaltfunktion, sofern sie aktiv ist, durch Gedrückthalten der Stummschaltenn-Taste kurzzeitig deaktivieren. Wenn du die Taste wieder loslässt, wird die Stummschaltfunktion wieder aktiviert.

## EXTRA-TASTEN-PROGRAMMIERUNG

Halte die M-Taste sowie L4/R4/L5/R5 gedrückt, um Extra-Tasten zu programmieren. Die Xbox-LED-Anzeige blinkt daraufhin langsam. Drücke die Taste, die du einer Extra-Taste zuweisen möchtest. Die Xbox-LED-Anzeige leuchtet daraufhin wieder durchgehend, was anglibt, dass die Programmierung der Extra-Taste erfolgreich war.
* Drücke während der Extra-Programmierung einer Taste erneut auf die entsprechende Extra-Taste, um die Programierung für diese Taste zu löschen.

## STICK- UND TRIGGER-KALIBRIERUNG

1.Stellen Sie den Trigger auf den linearen Modus, und halten Sie dann + + gedrückt, bis die Xbox-Anzeige langsam zu blinken beginnt.
2.Berühre dabei keinesfalls die Tasten LT und RT oder den linken oder rechten Stick. Drücke dann die A-Taste. Die Xbox-LED-Anzeige erlischt sich dus.
3.Drücke LT und RT 3-mal vollständig durch. Drehe die Sticks 3-mal um ihren maximalen Winkel. Drücke dann erneut die A-Taste. Die Xbox-LED-Anzeige leuchtet durchgehend und die Kalibrierung ist damit abgeschlossen.

## CONTROLLER ZURÜCKSETZEN

Wenn du Probleme mit deinem Controller hast, z. B., wenn er sich nicht mehr ordnungsgemäß ein-/ausschalten lässt, kannst du einen kleinen Gegenstand, z. B. eine Büroklammer, in das Loch auf der Rückseite des Controllers drücken, um den Reset-Taste zu betätigen. Dadurch wird der Controller ausgeschaltet und zurückgesetzt.

## PERSONALISIERUNG ÜBER DIE „GAMESIR NEXUS"-SOFTWARE

Lade die „GameSir Nexus"-Software im Microsoft Store auf Xbox/PC oder über die Website gamesir.com herunter.

## ⚠ BITTE LES DIR DIE SICHERHEITSHINWEISE AUFMERKSAM DURCH

- ENTHÄLT KLEINTEILE. Von Kindern unter 3 Jahren fernhalten. Bei verschlucken oder Einatmen sofort medizinische Hilfe aufsuchen.
- NICHT in der Nähe von Feuer benutzen.
- NICHT direkten Sonnenlicht oder hohen Temperaturen aussetzen.
- NICHT in feuchten oder staubigen Umgebungen aufbewahren.
- NICHT stoßen oder fallen lassen.
- USB-Anschluss NICHT mit den Fingern anfassen. Dies könnte zu Fehlfunktionen führen.
- Kabelbelle NICHT gewaltsam verbiegen oder ziehen.
- Für die Reinigung ein weiches, trockenes Tuch verwenden.
- KEINE Chemikalien wie Benzin oder Verdünner verwenden.
- Das Ladegerät während des Ladevorgangs NICHT verwenden.
- NUR für den ursprünglich gedachten Zweck verwenden. Wir können NICHT für Unfälle, Verletzungen oder Schäden haftbar gemacht werden, wenn das Gerät für nicht gedachte Zwecke verwendet wird.
- NICHT direkt in das Laserlicht blicken. Dies könnte zur Schädigung der Augen führen.
- Wenn du Qualitätsmängel festgestellt oder Anregungen für uns hast, wende dich bitte an GameSir oder deinen Händler vor Ort.

## ELEKTROSCHROTT UND ELEKTROGERÄTE INFORMATIONEN

**KORRKETE ENTSORGUNG DIESES PRODUKTS (ELEKTROSCHROTT UND ELEKTROGERÄTE)**
Gilt für die Europäische Union und andere europäische Länder mit separaten Sammelsystemen.

Dieses Zeichen auf dem Produkt oder den beiliegenden Dokumenten bedeutet, dass es nicht im Gegenmeien Hausmüll entsorgt werden sollte. Damit das Produkt ordnungsgemäß behandelt, recycelt werden kann, sollte es an einem Wertstoffhof (oder vergleichbaren Anlagen) gebracht werden, wo es kostenlos deponiert werden kann. In einigen Ländern kann das Produkt eventuell auch beim örtlichen Händler beim Kauf eines gleichwertigen Produkts zurückgegeben werden. Die ordnungsgemäße Entsorgung dieses Produkts hilft dabei, wertvolle Ressourcen zu sparen, und verhindert potentielle negative Effekte auf die menschliche Gesundheit und die Umwelt, die durch eine unsachgemäße Entsorgung entstehen könnten. Haushalten sollten sich entweder an den Händler, bei dem sie das Produkt gekauft haben, oder an die zuständige Behörde vor Ort wenden, um zu erfahren, wo und wie sie das Produkt umweltfreundlich entsorgen können. Geschäftskunden sollten sich an ihren Lieferanten wenden, um weitere Informationen zu erhalten. Dadurch wird sichergestellt, dass das Produkt ordnungsgemäß entsorgt und, falls möglich, recycelt wird, wodurch negative Auswirkungen auf die menschliche Gesundheit und die Umwelt vermieden werden.

## KONFORMITÄTSERKLÄRUNG

**ERKLÄRUNG ZUR EINHALTUNG DER EU-RICHTLINIEN**
Guangchao Chicken Run Network Technology Co., Ltd. erklärt hiermit, dass dieser GameSir G7 Pro Controller die Vorgaben der Richtlinien 2014/30/EU, 2014/53/EU und 2011/65/EU und ihrer Änderungen daran (EU) 2015/863 einhält.

Die vom Ladegerät bereitgestellte Leistung muss zwischen mindestens 1 W für das Funkgerät und maximal 5 W liegen, um die maximale Ladegeschwindigkeit zu erreichen.

## WARNUNGEN UND SICHERHEITSINFORMATIONEN

Alle Informationen zur Verwendung der Produkte können der beiliegenden Bedienungsanleitung entnommen werden. Lesen Sie vor der Benutzung die Bedienungsanleitung sorgfältig und befolgen Sie die Empfehlungen des Herstellers. Lesen Sie außerdem die folgenden Sicherheitsinformationen und Warnhinweise vor der Benutzung:

### NUTZUNGSWARNUNGEN

**GEFAHR FÜR DIE GERÄTE:**
- Controller sind ausschließlich für den vorgesehenen Zweck – Videospiele – zu verwenden. Verwenden Sie das Gerät nicht für andere Zwecke als die vom Hersteller empfohlenen.
- Wenn der Controller mit Flüssigkeit in Berührung kommt, trennen Sie ihn sofort und trocknen ihn gemäß den Herstellerangaben.
- Vermeiden Sie übermäßigen Druck beim Drücken der Tasten oder Bedienen des Controllers, um Schäden an den Mechanismen zu vermeiden.

**GEFAHR FÜR DEN NUTZER:**
- Bei längerer Nutzung regelmäßig Pausen einlegen, um Ermüdung in den Händen, Handgelenken und Schultern zu vermeiden.
- Sicherstellen, dass der Controller sicher platziert ist, um ein Rutschen oder Umkippen während der Nutzung zu verhindern.
- Controller mit Force-Feedback können plötzliche Bewegungen auslösen – immer mit beiden Händen festhalten.

**STROM- UND VERBINDUNGSRISIKEN:**
- Keine beschädigten Stromkabel oder USB-Kabel verwenden. Nur das mitgelieferte Zubehör des Herstellers verwenden.
- Sicherstellen, dass USB-Ports und Steckdosen sauber und frei von Fremdkörpern sind, um eine ordnungsgemäße Verbindung zu gewährleisten.
- Kabelgebundene Geräte regelmäßig aufladen oder durch neue ersetzen, um eine ununterbrochene Funktionsfähigkeit zu gewährleisten.

## ORDNUNGSGEMÄßE NUTZUNG

**VORBEREITUNG UND EINRICHTUNG:**
- Keine Installation von Software oder Treibern, außer der vom Hersteller bereitgestellten, falls erforderlich.
- Controller auf einer stabilen Oberfläche, z. B. einem Schreibtisch, platzieren, um Komfort und Präzision während der Nutzung zu gewährleisten.
- Sicherstellen, dass alle Kabel ordnungsgemäß angeschlossen und gesichert sind, um versehentliche Trennungen zu vermeiden.

**SICHERE NUTZUNG:**
- Gerätekonfigurationen in Spielen (z. B. Empfindlichkeit, Vibrationen) nach Ihren Vorlieben anpassen, um Komfort zu gewährleisten und Belastungen von Händen oder Schultern zu vermeiden.
- Regelmäßig den Zustand von Tasten, Joysticks und anderen Komponenten prüfen, um ihre ordnungsgemäße Funktionsweise sicherzustellen.
- Bei