KDTag 防丢器 说明书

1. 产品概述

KD-Tag 主要用于苹果手机、钥匙、钱包、书本、平板包、手套、相机、行李箱、钥匙、自行车等物品全球精准定位防丢、不用流量、免年费、仅限IOS系统使用，不支持安卓手机。

2. 产品主要功能

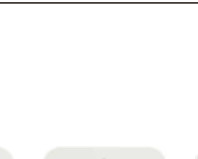|		
全球精准定位 Global precise positioning	近距离精准查找 Accurate search at close range	一键寻物 One click navigation
电量显示 Electricity level display	无需下载APP APP for APP download	免年费 No annual fees

3. 主要性能参数

电池规格	CR2032 3.9V
静机功耗	3.09mW
支持平台	IOS14.5以上
提醒方式	蜂鸣器
环境温度	-40℃-85℃
产品尺寸	13*13*4mm
重量	14g

4. 按键设置

按键

1. 开机：长按此处下，蜂鸣一次短鸣叫声，此时有开机提醒，长鸣叫；
2. 关机：开机状态下，长按按键3秒钟状态，此时有关机提醒，连续响声；
3. 自动蜂鸣：连续响4次蜂鸣提醒，此时有5秒鸣叫声，第5次需要按键3秒钟以上蜂鸣器停止状态。

5. 设备绑定

设备绑定前先检查手机蓝牙是否处于打开状态，确保手机蓝牙已开启再按一下KD-Tag按键，此时响一下后确定开机。

1. 打开"苹果"APP　　2. 点击"添物物品"　　3. 选择"其他支持的项目"

4. 连接KD-Tag　　5. 单击Apple 绑定的项目　　6. 完成绑定
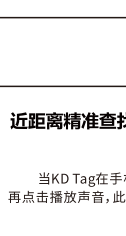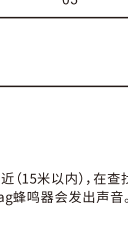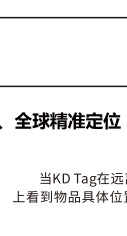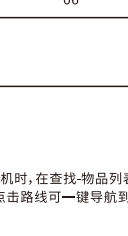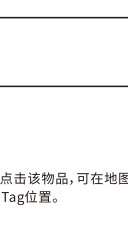
6. 近距离精准查找

当KD-Tag在手机附近（15米以内），在查找-物品列表中点击播放提示音，点击播放声音键，此时Tag静噪音发出声音。

7. 全球精准定位

当KD-Tag在远离手机时，在-物品列表中点击查找位置，可在地图上看到物品的最终位置，点击路线可一键带领你去寻找KD-Tag位置。
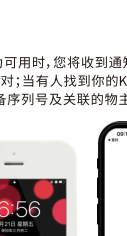
8. 遗落提醒

当你开启"遗落时通知"后，当您的KD-Tag一旦离身，手机会收到通知遗落物品提醒，您的物品已不在身边。
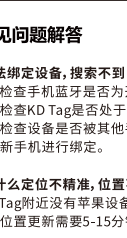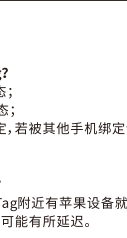
1. 启动遗落时通知提醒　　2. 你已经收到

9. 丢失模式

开启模式后，当它看丢失可用时，任何物品将可通过iCloud打接您时您的iphone 物品提示人员通知它，当有人找到你的KDTag时，可获取到关于此KD-Tag的支产"界, 设备开列可为您发现你物品身边之后。

1. 开启丢失模式　　2. 找到物品的提醒　　3. 提取物品信息

10. 常见问题解答

一、无法明定设备, 搜索无下 KD-Tag？
答1. 检查手机蓝牙是否已为开启状态；
答2. 检查KD-Tag是否为开机状态；
答3. 检查KD-Tag是否已重新放入新电池，距离
手机太远超出蓝牙连接范围，再重新搜索放进电池范围内重新连接。

二、为什么定位不精确, 位置不更新？
答1.Tag使用定位需要依靠GPS, 如果您的位置相对于更新，可能定位的实际位置会不同。
答2.苹果新系统会影响精度, 与系统偏差。

三、iphone设备丢失后怎么办？
答: 在"我的iPhone"和iPhone屏幕内都, 建议用iPhone配paid 系统更新至最新版本, 尽可能检修并关注。

四、适用机型
答: 在"我的iphone"和iPhone屏幕内都, 建议用iphone配paid 系统更新至最新版本, 尽可能检修并关注。

声明: 本公司有权在更新说明书的无需征得您或通知您的前提下, 自行对本公司中提及到不能，再仅提及仅技术实不说明内技术展期, 此外变化书实质内更加作承担。


KD-Tag Manual

1. Overview

KD-Tag is mainly used for global precise positioning of items such as backpacks, mobile phones, wallets, umbrellas, handbags, jackets, cameras, suitcases, keys, bicycles, etc. No need of mobile data or annual fees, only work with IOS system.

2. major function

|		
全球精准定位 Global precise positioning	近距离精准查找 Accurate search at close range	一键寻物 One click navigation
电量显示 Electricity level display	无需下载APP APP for APP download	免年费 No annual fees

3. Main working parameters

Battery specifications	CR2032 3.9V
Average electricity consumption	3.09mW
Supported IOS version	Above IOS14.5
Reminder	Buzzer
Working temperature	-40℃-85℃
Product size	13*13*4mm
Weight	14g

4. Buttons settings

key

1. Turn on: Click the button once, there will be long buzz heard. (If no buzz heard it means already been turned on or battery out)
2. Turn off: Hold the button for around 3 seconds until two short buzz sound were heard.
3. Enable the bluetooth of the KD-Tag. Click the button twice until one short buzz heard.
4. Restore factory settings: 4+1 click, the first 4 times click it short and the fifth time need to hold around 3 seconds until hear the buzz;
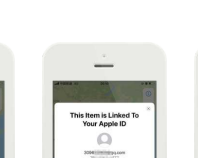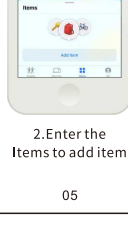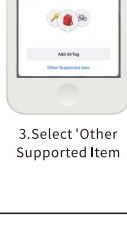
5. Product binding

Check whether the Bluetooth of the iphone is turned on before binding, ensure that the Bluetooth of the iphone is turned on, and press the KD-Tag button once to power on.

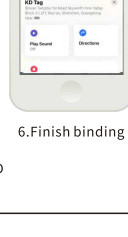1. Open the Find My of iphone　　2. Enter the items to add item　　3. Select 'Other Supported Item'
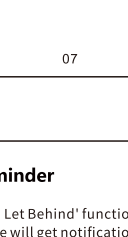
4. Connect the KD-Tag founded　　5. Click Agree to confirm the Apple ID　　6. Finish binding

6. Accurate search at close range
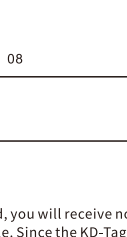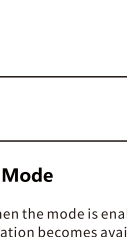
When KD-Tag is near the iphone (Within 15 meters), click the KD-Tag in the item list, click Play Sound, the KD-Tag buzzer will buzz.
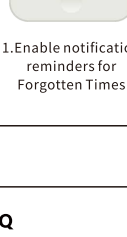
7. Precise global positioning

When KD-Tag is far away from the bound iphone, click the KD-Tag to check the location map, then click Directions to track the route to the KD-Tag.
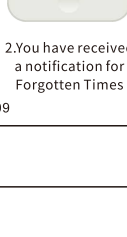
8. Left Behind Reminder

When 'Notify When Let Behind' function is on, if your KD-Tag is left behind, your phone will get notification message that your goods is left behind.

1. Enable notification reminders for Forgotten Times　　2. You have received a notification for Forgotten Times
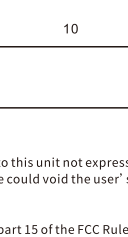
9. Lost Mode

When the mode is enabled, you will receive notification when this bluetooth device available. Since the KD-Tag was bound to your phone; it can't be bound to other phones; When someone find your KD-Tag the can see your contact information if they tried to bind the Tag.
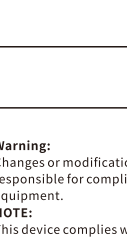
1. Enable lost mode　　2. Notify when found　　3. Retrieve item information

10. FAQ

1. Q: Failed to bind KD-Tag or find it
A.1. Check whether the bluetooth of phone is enabled.
2. Check whether KD Tag has been turned on.
3. Check whether the KD Tag has been bound to other phone, if bound please remove it from the bound phone first and then bind to your phone.

2. Why is the positioning not accurate and the position not update?
A. 1. No Apple device powered by nearby the Tag, if there were some Apple devices passed by, real-time positioning will be achieved.
2. It takes 5-15 minutes to update location and may be delayed

3. Scope of using.
A: This product is limited to busy urban areas or areas with many Apple devices, and is not suitable for use in remote areas or areas with few Apple devices.

4. Suitable Apple devices
A: Only can be used with iphone or ipad, we suggest to update iphone or ipad to the latest version.

Declaration: The final interpretation rights of this manual belong to Shenzhen Yiche Technology Co., Ltd. Without permission, no individual or organisation is allowed to disseminate this manual in any form. This manual is subject to change without prior notice.

Warning:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user`s authority to operate the equipment.

NOTE:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.