TV3 说明书
折叠尺寸：115*150mm　　风琴折

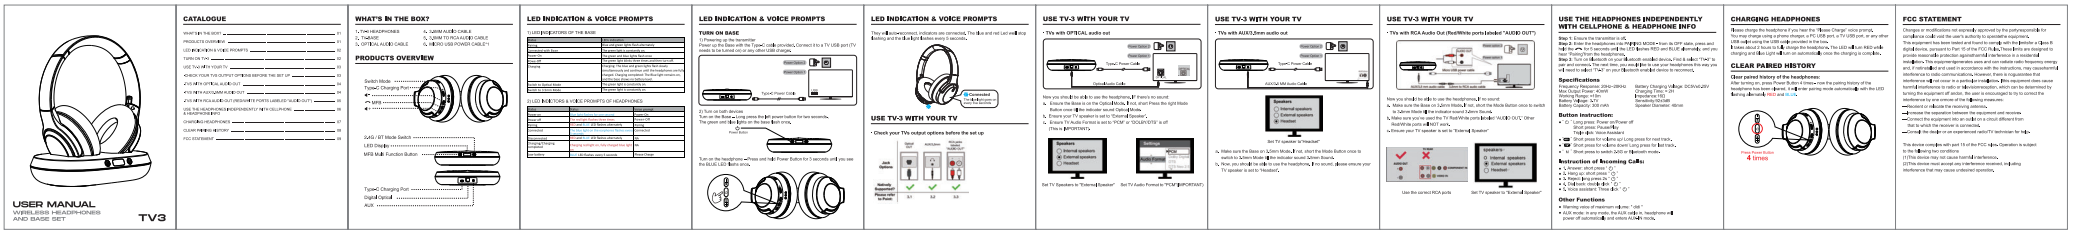

USER MANUAL
WIRELESS HEADPHONES AND BASE SET
TV3

CATALOGUE

WHAT'S IN THE BOX? 01
PRODUCTS OVERVIEW 01
LED INDICATION & VOICE PROMPTS 02
TURN ON THE 02
USE TV-3 WITH YOUR TV 03
• CHECK YOUR TV'S OUTPUT OPTIONS BEFORE THE SET UP 03
• TVs WITH OPTICAL AUDIO OUT 03
• TVs WITH AUX(3.5MM AUDIO OUT 04
• TVs WITH RCA AUDIO OUT (RED/WHITE PORTS LABELED "AUDIO OUT") 05
USE THE HEADPHONES INDEPENDENTLY WITH CELLPHONE & HEADPHONE INFO 06
CHARGING HEADPHONES 07
CLEAR PAIRED HISTORY 08
FCC STATEMENT 08

WHAT'S IN THE BOX?

1. TV3 HEADPHONES
2. TV3BASE
3. OPTICAL AUDIO CABLE
4. 3.5MM AUDIO CABLE
5. 1.2MM TO RCA AUDIO CABLE
6. MICRO USB POWER CABLE*1

PRODUCTS OVERVIEW

LED INDICATION & VOICE PROMPTS

CLARIFICATIONS OF THE BASE

Pairing	Red and blue lights flash alternately
Connect with Base	Red lights ON constantly on
Charging	Red lights ON constantly on
Fully Charged	Red lights OFF when headphones are off
Wiring	Ringing Tip-Hot and ground to Tip-Cold(Sleeve) simultaneously will continue with the headphones and TV connected, but the sound will change remains the same. Ringing Tip-Hot and ground to Tip-Cold(Sleeve) simultaneously will continue with the headphones and TV connected, but the sound will change remains the same.
Switch to Optical Mode	Red blue light flash alternately
Switch to Analog Mode	Red blue light flash alternately

LED INDICATORS & VOICE PROMPTS OF HEADPHONES

Power On	Blue light flash and Voice prompt	"Power On"
Power Off	Red light flashes three times	"Power Off"
Pairing	Red and blue lights flash alternately	"Pairing"
Connected	Blue light flashes every 5 seconds	"Connected"
Disconnected	Red light flashes every 5 seconds	"Disconnected"
Charging Volume Displayed	Blue light ON in the charging process	"Charging"
Fully Charged	Blue light ON constantly	"Fully Charged"

LED INDICATION & VOICE PROMPTS

TURN ON BASE

1) Powering up the transmitter
Power up the Base with the Type-C cable provided, Connect it to a TV USB port (TV needs to be turned on) or any other USB charger.

2) Turn on both devices
Turn on the Base by Long press the M button before for two seconds.
The green and blue lights on the base flash once.

Turn on the headphone, Press and hold Power Button for 3 seconds until you see the BLUE LED lights on(L).

LED INDICATION & VOICE PROMPTS

Then, if ■ (above image) indicators are connected, The blue and red Led will stop flashing and the Blue Light ■ remains on for 3 seconds.

Connected to TV, ■ Automatically Red Led turn off

USE TV-3 WITH YOUR TV

• Check your TVs output options before the set up

USE TV-3 WITH YOUR TV

• TVs with OPTICAL audio out

Now you should be able to see the headphone's ■ there's no sound.
1. Ensure the Base is on the Optical Mode, ■ not, short Press the right Mode Button once to switch to Optical Mode.
2. Ensure your TV speaker is set to "External Speaker".
3. Ensure TV Audio Format is set to "PCM" or "DOLBY DTS" is off (This is ■IMPORTANT).

Set TV Speakers to "External ■Speaker"　　Set TV Audio Format to "PCM" ■IMPORTANT)

USE TV-3 WITH YOUR TV

• TVs with AUX(3.5mm audio out

Now you should be able to see the headphones,■ no sound.
1. Make sure the Base on 1.2mm Mode, ■ not, short the Mode Button once to switch to 3.5mm Mode ■ the indicator sound 3.5mm Device.
2. Make sure you've used the TV Red/White ports labeled "AUDIO OUT". Other Red/White ports ■ WON'T work.
3. Ensure your TV speaker is set to "External ■Speaker"

Set TV speaker to "External ■Speaker"

4. Make sure the Base on 3.5mm Mode, ■ not, short the Mode Button once to switch to 3.5mm Mode ■ the indicator sound 3.5mm Device.
5. Now, you should be able to see the headphone, ■ no sound, please ensure your TV speaker is set to "Headset".

USE TV-3 WITH YOUR TV

• TVs with RCA Audio Out (Red/White ports Labled "AUDIO OUT")

Now you should be able to see the headphones,■ no sound.
1. Make sure the Base on 1.2mm Mode, ■ not, short the Mode Button once to switch to 3.5mm Mode ■ the indicator sound 3.5mm Device.
2. Make sure you've used the TV Red/White ports labeled "AUDIO OUT". Other Red/White ports ■ WON'T work.
3. Ensure your TV speaker is set to "External ■Speaker"

Use the correct RCA ports　　Set TV speaker to "External ■Speaker"

USE THE HEADPHONES INDEPENDENTLY WITH CELLPHONE & HEADPHONE INFO

Step 1: Ensure the transmitter is off.
Step 2: Enter the headphones into PAIRING MODE ■ from its OFF state, press and hold the ■ for 5 seconds until the LED flashes RED and BLUE alternately, and you hear "Pairing" ■ headphones.
Step 3: Turn on ■ Bluetooth on your ■ Bluetooth enabled devices, find & select "TW3" in pair and connect. The next time, you only ■ to use your headphones this way you will need to select "TW3" on your ■ Bluetooth enabled device to reconnect.

Specifications

Frequency Response: 20Hz-20KHz
Max Output Power: 40mW
Charging Time: ≤ 2H
Battery Voltage: 3.7V
Battery Capacity: 300 mAh
Battery Charging Voltage: DC5V±0.25V
Charging Time: ≤ 2H
Play Time: ≥ 8H
Sensitivity:93±3dB
Speaker Diameter: 40mm

Button instruction:

- "+" : Long press: Power on/Power off
  Short press: Pause/Play
  Triple click: Voice Assistant
- ■■: Short press for ■ to next song/ Long press for next track.
- ■■: Short press for ■ to previous song/ Long press for ■ track.
- ■: Short press to switch 3.5/BT or ■ Bluetooth mode.

Instruction of Incoming Call■:

- To answer: short press "+".
- To hang up: short press "+".
- To reject: Long press "+".
- To ■ from mode to ■ to "+".
- To voice assistant: Three ■ to "+".

Other Functions

- Warning: voice of maximum ■ one "+ble".
- AUX mode: In any mode, the AUX ■ to ■ headphone ■ power off automatically ■ and enters AUX■ mode.

CHARGING HEADPHONES

■Does charge the headphone if you hear the "Please Charge" voice prompt.
You may charge using a phone charger, a PC USB port, or TV USB port, or any other USB outputusing the USB cable provided in the box.
It takes about 2 hours to fully charge the headphone. The LED will turn RED while charging and turn light off when ■ are automatically ■ once the charging is complete.

CLEAR PAIRED HISTORY

Clear paired history of the headphones:
After turning on, press Power Button 4 times■ over the pairing history of the headphones has been cleared. It will enter pairing mode automatically with the LED flashing alternately RED and BLUE.

FCC STATEMENT

Changes or modifications not expressly approved by the partyresponsible for compliance could void the user's authority to operatethe equipment.
This equipment has been tested and found to comply with the limitsfor a Class B digital device, pursuant to Part 15 of the FCC Rules.These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipmentgenerates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is noguarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or televisionreception, which can be determined by turning the equipment off andon, the user is encouraged to try to correct the interference or by one ormore of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference,
(2)This device must accept any interference received, including interference that may cause undesired operation.