EN:In the box ZH:包装内容 DE:In der Box
ES:En la caja IT:Nella scatola Prodotto
FR:Dans la boite JP:製品の中に KO:상자에

EN:Product overview ZH:产品概述
DE:Produktübersicht ES:Descripción del producto
IT:Panoramica del Prodotto FR:Présentation du produit
JP:製品の概要 KO:제품 개요

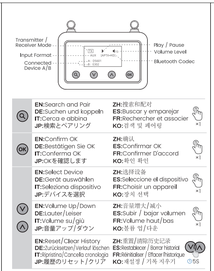
Transmitter / Receiver Mode
Input Format
Connected Device A/B
Play / Pause
Volume Level
Bluetooth Codec
TX
OFF
Bypass
RX
FS
LL HD
Q
W
A
D
S
Q EN:Search and Pair
DE:Suchen und koppeln
IT:Cerca e abbina
JP:検索とペアリング
W EN:Confirm
DE:Bestätigen Sie OK
IT:Conferma OK
JP:OKを確認します
A EN:Select Device
DE:Gerät auswählen
IT:Seleziona dispositivo
JP:デバイスを選択
D EN:Volume Up/Down
DE:Lauter/Leiser
IT:Volume su/giù
JP:音量アップ/ダウン
S EN:Reset/Clear History
DE:Zurücksetzen/Verlauf löschen
IT:Ripristina/Cancella cronologia
JP:履歴のリセット/クリア
ZH:搜索和配对
ES:Buscar y emparejar
FR:Rechercher et associer
KO:검색 및 페어링
ZH:确认
ES:Confirmar OK
FR:Confirmer l'accord
KO:확인 확인
ZH:选择设备
ES:Seleccione el dispositivo
FR:Choisir un appareil
KO:장치 선택
ZH:音量增大/减小
ES:Subir / bajar volumen
FR:Volume haut/bas
KO:볼륨 업/다운
ZH:重置/清除历史记录
ES:Restablecer / Borrar historial
FR:Réinitialiser / Effacer l'historique
KO:재설정 / 기록 지우기
Select Codec: Format (LL/FS/HD) by the Switch
选择编解码器格式切换器 (LL/FS/HD)
Wählen Sie das Codec-Format (LL/FS/HD) mit dem Schalter
Seleccione el formato de códec (LL / FS / HD) con el interruptor
Selezionare il formato codec (LL/FS/HD) con lo Switch
Sélectionnez le format de codec (LL/FS/HD) par le commutateur
スイッチでコーデック形式 (LL/FS/HD) を選択します
스위치로 코덱 형식(LL/FS/HD) 선택
1. Plug
2. Power on and choose mode
TV Power Cable
Audio Output
3. Pairing and connection
4. Enjoy
5. Switch
6. Connect mode
7. Connected
4. How to disconnect device
Listening
Idle
Connected
Disconnected
Connecting
Pairing
Disconnecting
Reconnecting
Connecting
Disconnected
Connected
Disconnecting
Reconnecting
Connecting
Disconnected
Connected
Disconnecting
Reconnecting
Connecting
Disconnected
Connected