porodo CHOOSE THE BEST

USER MANUAL

PD 120W LAPTOP POWER BANK

MODEL: PD-PBFCH023-BK

Please read the manual carefully before using the product and keep it safe.

Dear Customer

Thank you for purchasing this product. Please read the "User Manual" carefully before using this product and carefully consider and comply with the instructions.

Product Description

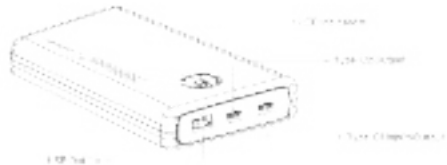

Specifications

Model	PD-PBFCH023-BK
Battery	5 x 21700
Capacity	25000mAh@3.7V 92.5Wh
Type-C1 Input	DC5-20V/3-5A(PD 100W Max)
Type-C1 Output	DC5-20V/3-5A(PD 100W Max)
Type-C2 Output	DC5V/3A, 9V/2A, 12V/1.67A(PD 20W Max)
USB-A Output	DC5V/3.6A, 9V/2A, 12V/1.5A
Product Size	182x68x28mm
N.W.	480g

Support [illegible] channel fast charging

Type-C1+Type-C2 max output: PD 127W Max

Type-C1+USB-A total max output: 127.5W Max

Instructions for use:

Power indication

Power indicator light	One	Two	Three	Four	Five	Six	Seven	Eight	Nine	Ten
Remaining Battery	<20%	>20%	>40%	>60%	>80%	>90%	>95%	>98%	>99%	>100%

Note: In the fast charging mode, the power indicator flashes in turn.

CHARGE THE POWER BANK

1. Choose an appropriate charging cable compatible to charge the device via Type-C input port.
2. The LED indicator flashes until fully charged during charging.
3. Please remember to pull out the cable when the indicator is fully charged.

USE THE POWER BANK TO CHARGE LAPTOP OR OTHER DIGITAL DEVICES

1. Charge digital devices via USB or Type-C output port. Type-C port can also charge compatible laptops.
2. The power bank will automatically begin to charge the laptop or digital device and the LED indicator will automatically turn on the charging mode.
3. Please unplug the cable from the laptop or other digital device in time when charging is completed.

Note: Fast charge output [illegible] Please refer to the product specification. [illegible] Type-C cable or USB-A to Type-C cable [illegible] charge [illegible] laptop [illegible] Type-C port [illegible] device [illegible] fast power.

Package Contents

- PD 120W Power Bank x 1
- User Manual x 1
- Type-C to Type-C Cable x 1

Precautions:

1. Before [illegible], please confirm the battery status of the power bank to ensure proper use.
2. For the first time, it is recommended that the power bank be fully charged.
3. To charge the power bank, it is recommended to use the original power adapter.
4. [illegible] a power bank to charge other devices, please choose [illegible] cable.
5. To charge other devices, if the power bank remaining capacity is low, please recharge it as soon as possible.
6. Please keep the power bank away from fire, do not use chemicals, soap, [illegible] to wipe the product.
7. [illegible] the power bank in a dry place away from fire, [illegible] and corrosive items.
8. After long-term storage, it [illegible] recommended to [illegible] charging cycle to ensure the best performance of the power bank.
9. The product is not [illegible] please [illegible] the [illegible] officer.
10. [illegible] remove the power bank charge [illegible] connection [illegible] immediately.
11. If there is a risk of electrolyte, do not contact the skin or eyes. If contact occurs, apply a large amount of water to flush the contact site and seek medical attention.
12. [illegible] properly dispose the power bank.

[illegible]

[illegible]

[illegible]

[illegible] 5