Walkie-talkie

User Manual

Product Description

Antenna

LED Flashlight

Lanyard hole

PTT (Push to Talk)

Display

Type-C charging port

Microphone

Call tone / Lock

Volume & Menu up

Flashlight / Scan

Volume & Menu down

Power ON/OFF & Menu

Speaker

Channel/Menu Indicator

Scan Indicator

VOX Indicator

CTCSS/DCS

Tx/Rx icon

Battery

Key lock Indicator

Volume
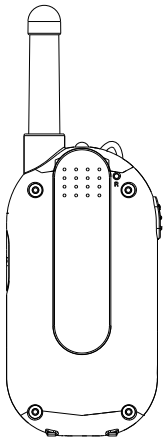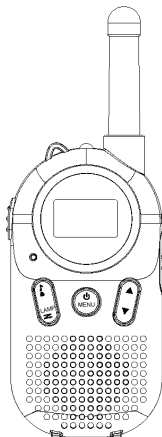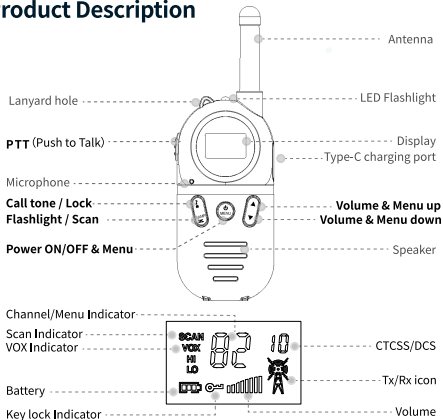
PTT (Push to Talk) : Push to Talk, release to listen;

Call tone/ Lock: Short press to call, long press to lock or unlock keyboard.

Flashlight/Scan: Short to turn on or off flashlight, long press to scan channels.

Power key: Short press to enter menu setting, long press to power on or off.

▲: In non-menu setting state, short press to turn up volume; In menu setting state, short press to set related functions.

▼: In non-menu setting state, short press to turn down volume; In menu setting state, short press to set related functions

Before Use

- Please charge it before using it for the first time, please use a 5V 1A charger.

- Please charge in time. When the battery icon flashes, it means that the battery is low. When fully charged, the battery icon will stop flashing.

How to Use

1. Power on or off：
Long press to power on or off.

2. Set the Channel：

- Channel: Short press one time, the channel starts to flash, press ▲/▼ to set the channels，after selected，press PTT to confirm;

- Sub-code：Short press 2 times, the sub-code starts to flash, press ▲/▼ to set the sub-code, you can set 01-99,OF means no code, 01-38 means CTCSS code,39-99 means DCS code, press PTT to confirm;

- To communicate, all walkie-talkies in the group must be set to the same channel and sub-code;

- Hold the walkie-talkies 2-3inches(5-7cm) away from your mouth and speak directly into the microphone. Don't cover the microphone when you're talking, and when you're finished, release the PTT (Push to Talk, release to listen).

Note:
You must set the sub-code to OF in order to communicate with other FRS radio stations that do not have the Interference cancellation code.

3. VOX (voice-operated exchange) ,You can talk into a walkie-talkie microphone instead of pressing a PTT button.

Set：Short press 🔘 3 times to enter VOX setting, default OF(off), press ▲/▼ to set the sensitivity level (Level 1,2,3,level 3 is the most sensitive) , press PTT to confirm.

4. Adjust the volume:

Press ▲/▼ to turn up or down the volume(level 1-8).

5. Channel scanning:

Long press 🔘 to scan the channel, short press PTT to stop scanning.

6. Call:

Short press 🔘 to call group.

7. Set the call tone:

Short press 🔘 4 times, screen will display "CA 01", and "01"will starts to flash, press ▲/▼ to select the tone(10 calling tones), press PTT to confirm.

8. End call tone:

- Short press 🔘 6 times, screen will display "CO on", press ▲/▼ to turn on or off.
- "ON" means there will be a tone when PTT is released, "OF" means there will be no tone.

9. Turn button sounds on and off:

Short press 🔘 5 times, screen will display "L0 on", "on" starts to flash, press ▲/▼ to turn on or off the button sounds.

10. Lock the keyboard:

- Long press 🔘 to lock or unlock the keyboard.

- When locked, only PTT/Call tone/ Flashlight is available, others is not available.

11. Flashlight:
Short press to turn on or off the flashlight.

C E FC RoHS

MADE IN CHINA