Lofree

TOUCH

小翘100三模机械键盘

Triple Mode Connection Mechanical Keyboard

产品规格

按　　键：100键，可插拔机械轴
多媒体键数量：12个
材　　质：主体ABS,键帽PBT
接　　口：Type-C
模　　式：2.4G蓝牙/有线模式
蓝牙名称：Touch100@Lofree
尺　　寸：367x129x54.5mm

产品图解

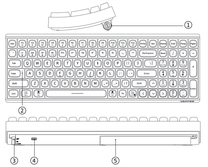

① 电量指示灯
•有线模式
电量指示灯白灯常亮
•蓝牙/2.4G接收器连接模式
电量低于20%，电量指示灯红慢闪
电量低于3%，电量指示灯红快闪至关机
② 状态指示灯(白灯)
•大写锁定指示
状态指示灯常亮，表示大写模式开启
状态指示灯熄灭，表示大写模式关闭
•蓝牙配对指示(白灯)
启动蓝牙配对时，状态指示灯呈闪烁状态
配对成功后此灯常亮3S，随后恢复此前对应状态
切换设备时，状态指示灯快闪3S后，恢复此前对应状态
•2.4G接收器配对指示
启动2.4G接收器配对时，状态指示灯快闪3S
配对成功后此灯常亮3S，随后恢复此前对应状态
③ 状态切换开关
2.4G/BT:2.4G和蓝牙模式 ON:有线模式　OFF:关闭
④ Type-C接口
有线连接端口
⑤ 电池仓盖

详细操作

2.4G 接收器连接模式：

❶ 向右推动,取下电池仓盖

❷ 取出 2.4G 接收器

❸ 将电池仓盖安装还原

❹ 将2.4G 接收器插入电脑 USB 接口中

注：Mac系统设备在2.4G、USB连接下不支持多媒体功能。

❺ 将状态切换开关切换到 2.4G/BT 档位

❻ 按住 Fn+4 键启动 2.4G 连接模式

❼ 状态指示灯呈持续快闪状态，直至配对成功

❽ 配对成功后，此灯常亮 3S，随后恢复此前对应状态

蓝牙连接模式：

❶ 将状态切换开关切换到 2.4G/BT 档位

❷ 长按 Fn+1/ Fn+2/ Fn+3 直至状态指示灯慢闪

❸ 打开设备蓝牙功能，并在蓝牙设备列表中查找并点击连接 "Touch100@Lofree"

❹ 状态指示灯常亮 3S 后熄灭，表示蓝牙模式连接成功

有线连接模式：

❶ 将状态切换开关切换到" ON"档位

❷ 取出本产品附带 Type-C 数据线将键盘与电脑进行连接，即可完成有线连接模式



系统切换

Fn　右下角 Fn+N 为触发 windows 对应系统功能键值
　　右下角 Fn+M 为触发 Mac 对应系统功能键值

多媒体键

Fn　右下角 Fn+F1……为触发多媒体键

多媒体标示	Mac	Windows
FN+F1		页面变宽减小
FN+F2		页面变宽增加
FN+F3		多屏显示
FN+F4	搜索	搜索
FN+F5	/	开启/Cortana
FN+F6	/	睡眠模式/开启
FN+F7	上一曲	上一曲
FN+F8	播放/暂停	播放/暂停
FN+F9	下一曲	下一曲
FN+F10	静音	静音
FN+F11	音量减小	音量减小
FN+F12	音量增加	音量增加
FN+Opt/Ctrl #	菜单键	菜单键

注：多媒体键FN+F5/FN+F6：Mac/IOS系统设备机型不支持该多媒体键触发。

数字键区

Windows状态下
NUM灯常亮为触发数字键区功能
NUM灯熄灭为关闭数字键区。
MAC状态下
默认为开启数字键区功能,NUM键功能及指示灯无效。

产品中有害物质的名称及含量

有害物质	零部件					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑胶 (不白件)	○	○	○	○	○	○
电路板组件	○	○	○	○	○	○
线缆 (不白件)	○	○	○	○	○	○
金属零件	○	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。
依据欧盟指令 2011/65/EU 及修订指令 2015/863/EU 进行判定。
O：表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 定的限量要求以下。
X：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572 规定的限量要求。

环保使用期限：

表示当周期（5 年），电子电器产品中含有的有害物质在正常使用的条件下不会发生外泄或突变，用户使用该电子电器产品不会对环境造成严重污染或对其人身，财产造成严重损害的期限。
根据中国电子行业标准 SJ/T 11364-2014 和相关的中国政府法规。本产品及其某些内部或外部组件上可能带有环保使用期限标识。取决于组件和组件制造商。产品及其组件上的使用期限标识可能有所不同。组件上的使用期限标识优先于产品上任何与之相冲突的或不同的环保使用标示。

警告：

- 如果电池更换不当，有可能存在泄露或爆炸及造成人身伤害的危害。
- 切勿在电池出现泄露、变色、变形或出现任何其他异常的情况下使用。
- 切勿让电池长时间处于接电或不使用状态。
- 切勿使产品短路。
- 电池角色随使用情况而异。已报废电池应依据当地法律进行弃置，或丢弃在用于回收电子设备的垃圾桶中。
- 若有任何液体不小心进入产品内时，请立即断开电源并移开此产品确保使用可能会引起起火或触电，请与联系代理商或最近的客服中心检查维修。

SPECIFICATIONS:

Number of Keys:100(hot-swappable Mechanical Switch)
Number of Multimedia Keys: 12
Materials: ABS Body, PBT Keycaps
Interface: Type-C
Mode: 2.4G & Bluetooth & Wired
Device Name:Touch100@Lofree
Dimensions:367mm*129mm*54.5mm

产品图解

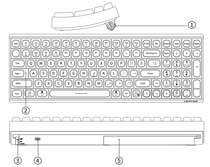

① Battery Indicator
•Wired Mode
The indicator light is steady white.
Bluetooth Mode/2.4G Wireless USB mode.
When the power is lower than 20%, the indicator light flashes slowly in red;
When the power is lower than 3%, the indicator light flashes quickly then automatically turn off;
② Status indicator (white light)
•Caps Lock Indicator
Solid LED light = The uppercase mode is turned on;
LED light off= The uppercase mode is turned off;
•Bluetooth Pairing Indicator(white light)
Flashing LED light = The device is in Bluetooth pairing mode;
When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again;
During each switch to a new device, the Pairing Indicator flashes quickly for 3 seconds, and then turns off again
•2.4G Wireless USB Pairing Indicator
When the 2.4G receiver is started for pairing, the Pairing indicator flashes quickly for 3 seconds
When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again
③ Status switch
2.4G/BT:
2.4G / Bluetooth mode / ON: Wired mode / OFF: Off
④ Type-C interface
Wired mode interface.

⑤ Battery cover

Detailed user guide

2.4G Wireless USB mode

❶ Swipe to the right to remove the battery cover



❷ Take out the 2.4G receiver

❸ Install the battery cover



❹ Insert the 2.4G receiver into the USB port of the computer

Note:MAC/IOS system devices do not support multimedia functions under 2.4G USB connection

❺ Switch the status to 2.4G/BT gear

❻ Press and hold Fn+4 to start 2.4G connection mode

❼ The status indicator flashes quickly for 3 seconds then paired successfully



❽ This light turns on for 3 seconds then turns off again



Bluetooth mode:

❶ Switch the status to 2.4G/BT gear

❷ Long press Fn+1/ Fn+2/ Fn+3 until the status indicator flashes slowly

❸ Turn on the Bluetooth function of your device, search for "Touch100@Lofree" and connect

❹ When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again

❺ Short press Fn+1/ Fn+2/ Fn+3 to switch Bluetooth connected devices

Wired mode

❶ Switch the status to the ON

❷ connect the keyboard to computer with Type-C cable to complete the wired connection

System Switch

Fn　Fn+N in the lower right corner is the key to trigger the corresponding system function of windows
Fn+M in the lower right corner is the key to trigger the corresponding system function of Mac

Multimedia keys

Fn　**Fn+1 in the upper left corner...= the multimedia keys**

Multimedia sign	Mac	Windows
FN+F1	Reduce brightness	Reduce brightness
FN+F2	Increase Brightness	Increase Brightness
FN+F3	Multi Screen	Multi Screen
FN+F4	Search	Search
FN+F5	/	ON/Cortana
FN+F6	/	Sleep Mode/ON
FN+F7	Previous Track	Previous Track
FN+F8	Play/Pause	Play/Pause
FN+F9	Next Track	Next Track
FN+10	Mute	Mute
FN+11	Volume Down	Volume Down
FN+12	Volume Up	Volume Up
FN+Opt/Ctrl #	Menu Button	Menu Button

Note: Multimedia key FN+5%/FN+6^: Some models of Mac system devices may not support the triggering of this multimedia key due to the problem of matching the connected device model and system version.

Numeric keypad

In Windows system
The numeric keypad function is enabled when NUM light is always on
The numeric keypad function is disabled when NUM light is off
In MAC system
The numeric keypad function is enabled by default, and the NUM key function and indicator light are invalid.

Fn　**Fn+1 in the upper left corner...= the multimedia keys**

Multimedia sign	Mac	Windows
FN+F1	Reduce brightness	Reduce brightness
FN+F2	Increase Brightness	Increase Brightness
FN+F3	Multi Screen	Multi Screen
FN+F4	Search	Search
FN+F5	/	ON/Cortana
FN+F6	/	Sleep Mode/ON
FN+F7	Previous Track	Previous Track
FN+F8	Play/Pause	Play/Pause
FN+F9	Next Track	Next Track
FN+10	Mute	Mute
FN+11	Volume Down	Volume Down
FN+12	Volume Up	Volume Up
FN+Opt/Ctrl #	Menu Button	Menu Button

NAME AND CONTENT OF HAZARDOUS SUBSTANCES IN PRODUCT:

Specific Elements	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr6+)	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Plastic Components	O	O	O	O	O	O
Circuit Board Assembly	O	O	O	O	O	O
Cooper Components	O	O	O	O	O	O
Spare Parts	O	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364.
The classification and marking of this product was performed in accordance with the EU directive 2011/65/EU and the revised directive 2015/863/EU.
O: Indicates that the said hazardous substance contained in all the homogeneous materials for this component is below the limit requirement in GB/T 26572.
X: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

ENVIRONMENTAL PROTECTION INSTRUCTIONS:

The hazardous substances contained in the electronic parts of this product will not leak or change under normal use conditions fora period often years. Duringthesame period, the electronic components of this product will not cause serious environmen-tal pollution orserious damage to human health or property while the products are being used by the consumer.

According to the Chinese electronic industry standard SJ/T 11364-2014 and related Chinese government regulations, this product and some of its internal or external components may have an environmentally friendly use period mark, depending on the component and component manufacturer, the mark illespan on the product and its components may vary. The expiration date on the component takes precedence over any conflicted or different UFUP labelson the product.

Warning

- If the battery is not replaced properly, there may be leakage or explosion and personal injury hazards• Do not use the battery when there is leakage, discoloration, deformation, or any other abnormality.
- Do not leave the battery in a discharged or unused state for a long time.
- Do not short-circuit the product
- Battery life varies with usage. Used batteries should be disposed of in accordance with local laws or thrown away in trash cans for recycling electronic devices.
- If any liquid accidentally enters the product, please immediately disconnect the power supply and remove the product. Continue to use the product may cause fire or electric shock. Please contact the agent or the nearest customer service center for inspection and maintenance.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Lofree
深圳市落落客文化有限公司
Shenzhen Lofree Culture Co.,Ltd
深圳市宝安区西乡街道宝源路1065号F518时间创意园F栋202
202-F8, F518 Idea Land, 1065 Bao Yuan Road, Shenzhen

Service Hotline/服务热线: 4006002083
www.lofree.com.cn　www.lofree.co
lofree.co　lofreeco　lofree.co