DAISO_TWS004_manual_002

K

紙厚 0.08mm

山折り

谷折り

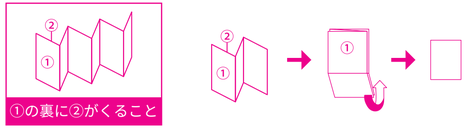

①

完全ワイヤレスイヤホン　取扱説明書

同梱物

※本品に充電ケーブルは付属していません。USB Type-Cに準拠した充電ケーブルをご用意ください。

各部名称

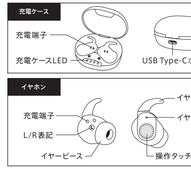

⚠ 使用上の注意

本品を安全にご使用いただくために、使用上の注意を必ずお読みになり内容をよく理解された上でご使用ください。ここに記載の警告・注意事項を守らない場合、お客さまや第三者の方々への危害（負傷・障害・死亡）、財産への損害（故障・破損・破壊・損失）を与えたり、その原因となる可能性があります。本来の用途以外、記載以外の方法での使用は絶対に行わないでください。本書に記載されているイラストはイメージです。

●自転車、オートバイ、または自動車などを運転中には絶対に使用しないでください。運転中に使用すると、交通事故の原因になります。●運転中以外でも、路切や駅のホーム、車道、工事現場など、周囲の音が聞こえない危険な場所では使用しないでください。●本品と接続する Bluetooth 機器の通信環境、周囲の状況（人が多い場所、駅のホーム や電車の中、通信機器が多い場所）によっては、雑音が入ったり、音声が途切れたりすることがあります。●耳を刺激するような大音量で長時間続けて使用すると、聴力が大きく損なわれる恐れがあります。●動きから目を離すと、思想的または危険な行為を働くおそれがあります。自転車などに乗りながらなどで使用してください。●自転車運転をよけて使用しないでください。●運転・運動など、周囲の状況に注意を払う必要がある場所、または、歩行中などでは、使用しないでください。●本品が触れる部分に、金属アレルギーを起こすおそれがあります。●使用中に違和感・痛みなどを感じたときは、ただちに使用を中止してください。●万一、本品の内部に水や異物などが入ったときは、ただちに使用を中止してください。●電源を切ってから、バッテリーの不具合を生じさせる可能性があります。●ラジオやなどを使用して聴かたり、ヒーターの前に置いて聴かったりしないでください。●充電ケースは防滑仕様ではありません。絶対に滑らないでください。故障の原因になります。

防滅性能について

本品のイヤホン本体は防滅仕様ですが、汗の付着や水濡れなどは、取り扱い状況、環境によって故障の原因となります。

●真水、水道水以外の液体は防滅対象外です。
●本品の充電を行う際、水滴と手が濡れていることを確認してください。
●完全防水ではありません。殺菌に水をかけたり、水没させたりしないでください。
●湿ったままお使いしないでください。スピーカーやバッテリーの不具合を生じさせる可能性があります。
●ラメイヤなどを使用して聴かたり、ヒーターの前に置いて聴かったりしないでください。
●充電ケースは防滅仕様ではありません。絶対に濡らさないでください。故障の原因になります。

電源の ON/OFF

電源をONにする

イヤホンを充電ケースに収納すると、電源が自動でONになります。
手動で電源をONにする場合は、電源がOFFの状態から、イヤホンの操作タッチセンサーを約3秒間長押ししてください。
イヤホンLEDが青く点灯し電源がONになります。

電源をOFFにする

イヤホンを充電ケースに収納すると、電源が自動でOFFになります。
手動で電源をOFFにする場合は、電源がONの状態から、イヤホンの操作タッチセンサーを約3秒間長押ししてください。
イヤホンLEDが赤く点灯し、電源がOFFになります。

取り出すと自動で ON
収納すると自動で OFF

お手入れ方法

柔らかい布で汚れを拭き取ってください。

本品をご使用になる前に、充電ケースとイヤホンの充電を行なってください。

充電する

充電ケースを充電する

充電ケースのUSB Type-Cポートに充電ケーブルを接続して充電してください。
充電中は充電ケースLEDが点滅し、完了すると点灯します。
※本品に充電ケーブルは付属していません。USB Type-Cに準拠した充電ケーブルをご用意ください。
充電ケースのLEDサイン（参考値は目安です。）

0%-25%	25%-50%	50%-75%	75%-100%	充電完了

イヤホンを充電する

充電が完了した充電ケースにイヤホンを収納してください。充電中、イヤホンLEDは赤く点灯し完了すると消灯します。

●イヤホンを収納した状態で充電ケースの充電がなくなると、イヤホンの電源が自動でONになりペアリングモードに移行する場合があります。イヤホンの電池残量がなくなると、電子音によるアナウンスがあります。
●接続先機器のイヤホン電池残量表示は、片側イヤホンの電池残量の表示です。
●イヤホン本体は電池が無くなったから先に電源がOFFになり、以降は片耳使用の操作になります。
●イヤーピースを所定の位置に装着しないと充電ケースと干渉するなどして充電できなくなる場合があります。また、強い衝撃を与えると充電ケースやイヤホン内の充電できなくなる場合があります。
●長期間使用しない場合はバッテリーの自己放電による劣化を防ぐため6ヶ月に一度を目安に充電してください。

充電ケースの電池残量

イヤホンを充電ケースに収納すると、充電ケースLEDの点灯が電池残量により変化します。
一番左側の充電ケースLEDが点滅した場合、充電ケースの電池残量が残りがない状態です。
充電ケースを充電してください。
充電ケースのLEDサイン（参考値は目安です。）

100%-75%	75%-50%	50%-25%	25%-5%	5%-0%

ペアリングして接続する（機器への初期登録）

①充電ケースからイヤホンを取り出す。
充電ケースから両側のイヤホンを取り出すと、自動でイヤホン同士のペアリングが完了し、親機側のイヤホンがペアリングモードになります。ペアリングモードでは親機側のイヤホンLEDが赤と青に交互に点滅します。

②接続先機器のBluetooth設定から、本品を検索、登録しペアリング完了。

●一度ペアリング設定をすると、次回以降は自動でペアリングを行います。
●別機器とペアリングしたい場合は、接続中の機器とのBluetooth接続を切り、再度①～②の手順でペアリングしてください。

ペアリングがうまくできない時

●接続先機器のBluetooth機能が使用可能な状態かを確認してください。
●接続先機器が本品のプロファイルに対応しているか確認してください。
●接続先機器のBluetooth設定から本品の登録情報を削除し、再度登録をはじめてください。
●周囲に強い電波源や発生させる電子機器類がある場合、ペアリングがうまくいかないことがあります。他の電子機器類から離れたり、電源を切ってから再度ペアリングをおこなってください。

動画説明はこちら

操作方法

本品はタッチコントロールタイプのイヤホンです。
イヤホンの操作タッチセンサーに軽く触れることで操作します。装着時など、操作以外で触れる場合、誤動作にご注意ください。

	Left 左側耳のタッチセンサー	Right 右側耳のタッチセンサー
楽曲の再生停止 ▶/II	1回 ●	
曲送り ▶▶I		1回 ●
曲戻し I◀◀	2回 ● ●	
音声アシスタント起動	2秒長押し	
電話着信時 受話・終話	1回 ●	
電話着信時 着信拒否	2秒長押し	

●片耳使用時は、曲戻し曲送りの動作はできません。
●接続機器、アプリによって可能な操作が異なります。
●上記の操作をして異なる動作をしたり、動作しない場合があります。

イヤホン装着推奨例

本品のイヤーフックを右図のように耳の窪みに掛けるように装着してください。耳への装着感が良くなります。

●接続機器とは通信が途切れ接続が解除されると、即電モードに移行します。即電モードのまま再接続されない場合、数分で自動的に電源がOFFになります。

お手入れ方法

柔らかい布で汚れを拭き取ってください。

②

True wireless earphone instruction manual

Supplied items

*Charging cable not included. Provide your own USB Type-C charging cable.

Names of parts

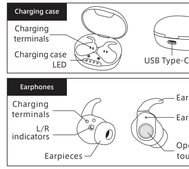

⚠ CAUTION

Make sure to read the usage precautions carefully to ensure safe use of the product.Failure to follow the warnings and precautions herein may result in injury (injury, disability or death) to yourself or a third party, or damage (malfunction, damage, destruction or loss) to property.Do not use this product for purposes other than its intended purposes or in any other way than described.Pictures herein are for illustrative purposes only.

●Never use while cycling or driving a car or motorcycle. This can result in a traffic accident. ●Do not use in places where it is dangerous not to hear your surroundings, such as at a train crossing, train platform, roadway or construction site. ●Noise may occur and audio may be interfered depending on the connected Bluetooth device or communication environment and depending on surrounding conditions (crowded places, train station platform, inside a train, places with large numbers of communication devices). ●Continuous use at a loud volume that stimulates the ears can significantly damage your hearing. ●Raising the volume too high initially can damage your hearing when a loud sound is suddenly output after being muted. Increase the volume gradually. ●Be careful not to make the incoming call volume too loud. ●Immediately discontinue use if the product becomes deformed or damaged.●Stop use immediately if an irritation occurs when in contact with the product. ●Do not disassemble or modify. ●Do not drop or subject the product to excessive impact. ●This product is not fully waterproof.Do not submerge in water or the ocean. ●Do not use in the bathtub, sauna or pool. ●The supplied charging case is not waterproof.●Do not let the product become wet or operate with wet hands. ●Do not let thinner, benzene, alcohol etc. remain on the product. ●Do not charge with a current exceeding 5V / 1A. Do not use with a high-speed charging adapter. ●Do not leave if charging is completed. ●For safety, do not start the engine of a car with a charging cable connected from a car charger to the charging port of the product. Always connect the charging cable after starting the engine. ●Do not use or store the product in the following places. Places where strong magnetic fields are generated. Places where static electricity or electrical noise are generated. Places where condensation forms. Places where there is a risk of short circuit or water leaks. Places subject to high temperature or high humidity. Places subject to direct sunlight. Around fires or places where hot air is trapped. Dusty places. ●Do not use in a hot environment such as covered by a blanket or bedding.●Keep away from fire and other sources of heat. ●Children must be supervised by a guardian when using the product. ●Do not dispose with regular garbage (noncombustible garbage). ●This product may only be used in countries where it complies with or is certified to comply with radio laws of the country. It cannot be used outside the country of sale. ●This product uses a frequency of 2.4GHz band. ●The audio may be interfered by devices using the same 2.4GHz band radio waves, such as Bluetooth devices, wireless LAN or Wifi devices, digital cordless phones and microwaves. ●Do not use in areas where radio waves are prohibited, such as hospitals. Use of this product may affect pacemakers and other medical devices and medical electronics. ●Check with your airline regarding the use of wireless devices on board the aircraft. ●Read the instruction manual of the connected device before use. ●While this product can be used to connect to a mobile phone or computer, the setup method and precautions vary depending on the connected device. ●The battery is a consumable product that deteriorates with normal use.Battery drain is a characteristic of the product and does not indicate a malfunction. Battery cannot be replaced.

Charge the charging case and earphones before using.

Charging

Charge the charging case

Connect the charging cable to the USB Type-C port on the charging case to charge.The charging case LED blinks while charging and lights when fully charged.
*Charging cable not included. Provide your own USB Type-C charging cable.

Charging case LED indicator (Values are approximate.)

0% to 25%	25% to 50%	50% to 75%	75% to 100%	Fully charged

Charge the earphones

Store the earphones in the charging case that has been fully charged. The earphone LED blinks red while charging and turns off when charging is completed.

●If the charging case runs out of power while the earphones are stored inside, the earphones may automatically turn on and enter pairing mode. When the remaining battery power of the earphones is low, an alert sounds.
●The remaining battery power indicator of the earphones on the connected device indicates the remaining battery power of one earphone.
●The earphone that loses power first will turn off and it will operate thereafter on one side.
●If the earpieces are not positioned correctly, this could interfere with the charging case, preventing charging. Also, strong shock can dislodge the earphones from the charging case, preventing charging.
●If not used for a prolonged period of time, make sure to charge once every 6 months to prevent deterioration due to self-discharge of the battery.

Remaining battery power of charging case:

When the earphones are stored in the charging case, the charging case LED light changes according to the remaining battery power. When the LED is blinking, the remaining battery power of the charging case is low. Charge the charging case.

Charging case LED indicator (Values are approximate.)

100% to 75%	75% to 50%	50% to 25%	25% to 5%	5% to 0%

Splash-proof performance

The earphone main unit of this product is splash-proof, but it may malfunction depending on how it is handled and the environment, such as when exposed to sweat or water.

●This product is not splash-proof against liquids other than fresh water and tap water.
●Do not charge the product while wet or with wet hands.
●Not completely waterproof. Do not intentionally splash or submerge in water.
●Do not leave the product damp.This can result in malfunction of the speaker or battery.
●Do not dry with a hair dryer or place in front of a heater to dry.
●The charging case is not waterproof.Do not let it become wet. May cause malfunction.

Turning on and off

The earphones turn on automatically when removed from the charging case and turn off when stored.

Turning on:

Remove the earphones from the charging case to turn them on automatically.To manually turn on the earphones, press and hold the operation touch sensor on the earpiece for 3 seconds while the power is off.The earphone LED lights blue and the power turns on.

Turning off:

Store the earphones in the charging case to turn them off automatically.To manually turn off the earphones, press and hold the operation touch sensor on the earphones for 5 seconds while the power is on.The earphone LED lights red and the power turns off.

●If communication with the connected device is interrupted and the earphones are unable to connect, the earphones enter power save mode.If the earphones are unable to reconnect in power save mode, the power turns off automatically in a few minutes.

How to Clean

Wipe clean with a soft cloth.

Pairing and connecting the earphones (registering them to a device for the first time)

1. Remove the earphones from the charging case.

When both earphones are removed from the charging case, the earphones pair automatically to each other, and the parent earphone enters pairing mode.In pairing mode, the parent earphone LED blinks alternately red and blue.

2. In the Bluetooth settings of the connecting device, select the earphones to complete pairing.

●Once paired, the earphones pair automatically the next time and thereafter.
●To pair to another device, disconnect Bluetooth from the connected device, and repeat steps 1 and 2 above to pair to the new device.

If pairing fails

How to Pairing Video

●Check that Bluetooth is enabled on the connecting device.
●Check that the connecting device supports the profile of this product.
●In the Bluetooth settings of the connecting device, delete the earphones and try pairing them again.
●Pairing may not work if there are nearby electronic devices that generate strong electromagnetic waves. Move away from other electronic devices or turn off the power and then try pairing again.

How to Use

These are touch control-type earphones.
Gently touch the operation touch sensor on the earphones to operate.Be careful of malfunctions when accidentally touching the earphones such as while wearing.

	Left left-side operation touch sensor	Right right-side operation touch sensor
Play and stop music ▶/II	1 press ●	
Next song ▶▶I		2 presses ● ●
Previous song I◀◀	2 presses ● ●	
Start voice assistant	Press and hold for 2 seconds	
Answer and end calls when receiving a call	1 press	
Decline a call when receiving a call	Press and hold for 2 seconds	

●Previous song and next song do not operate when using in one ear.
●Usable functions vary depending on the connected device and app.
●Even if the above operations are performed, a different operation may occur or the operation may not work.

Recommended Example of Attaching the Earphones

Attach the ear hook of the product so that it hangs on the hollow of your ear as shown on the right.
Provides a better fit on the ear.



DAISO Model: TWS004

Complies with IMDA Standards DA107974

FCC ID: 2BCCJ-DAISOTWS004

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/ TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.