Anderic RRU401.6

Notice: For additional help, you may contact us at anderic.com. To download a PDF version of this manual, please go to the link below. We recommend bookmarking below URL on your mobile device so you can quickly retrieve the instructions anytime you need it.

Anderic.com/rru401

Installing the Batteries, Screw and Cable attachment (Sold Separately)

See below diagram for help with installing the batteries, battery cover, screw, and cable attachment.

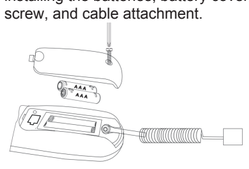

Programming – Code Input Method

This method allows for programming the remote using codes from the attached code list.

1. Turn on the device you want to control.
2. Find the corresponding brand code from attached code list, and write down.
3. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
4. Input the 4-digit code from codebook;

a. If valid - Mode key light will go out directly;
b. If invalid - Mode key will blink three times quickly and go out, please try

inputting the code again.

5. Check to see if most of the keys work to the control your device, if not, please try another code under the same brand & repeat all steps. You may also try “Auto code search method” or “One button search method” below.

Note: During the programming mode, not pressing any button for 20 seconds will cause remote to exit programming mode.

Programming - Auto Code Search Method

Allows for programming without codes by scanning through all codes in the database.

1. Turn on the device you want to control.
2. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
3. Press [CH+] or [CH-] key and release, it will search forward or backward.
4. When the device powers off (or video starts playing), press [POWER] key to save and exit (During searching, you can press key [CH+] or [CH-] to change searching direction, and if press any other key, it will exit from searching mode).

Programming - One Button Search Method

Allows for programming by only pressing a single key. Only works for TV and Cable/STB codes.

1. Power on the device you want to control.
2. Press & release the mode key you wish to program (e.g., TV).

3. Find your corresponding brand number from below list, press and hold corresponding number key until unit powers off. Once unit powers off, release the key.

Note: while holding the number key, after 3 seconds the mode light goes out, it will enter the searching mode for that brand; mode light will now be flashing about once every second.

4. Check other keys to see if most can work correctly. If not, repeat steps 1-4.

DIGIT	TV	DVD/VCR	AUDIO	CABLE/STB
0	Insignia/Dynex	Insignia/Dynex	Bose	RCA/GE/Proscan
1	LG/Zenith	LG/ Sylvania	Denon	Motorola
2	Panasnic/Mitsubishi	Panasonic	LG	DirecTV
3	Philips/Magnavox	Philips/Magnavox	Onkyo	Dish Network SystemsEchostar
4	Samsung	Pioneer	Panasonic	General Instruments
5	Sanyo	RCA	Philips	Hughes Network Systems
6	Sharp	Samsung	Pioneer	Scientific Atlanta/Cisco
7	Sony	Sharp	Samsung	Magnavox/Philips
8	Toshiba	Sony	Sony	Amino/ADB
9	Vizio	Toshiba	Yamaha	Panasonic

Code display

Use this method to display the code that is programmed.

1. Press and release the mode key you would like know code for (e.g., TV).
2. Press key “[MENU]” and “[1]”, the Mode key flash times indicate the first digit of the code.
3. Press key “[MENU]” and “[2]”, the mode key flash times indicate the second digit of the code.
4. Press key “[MENU]” and “[3]”, the mode key flash times indicate the third digit of the code.
5. Press key “[MENU]” and “[4]”, the mode key flash times indicate the fourth digit of the code.

NOTE: If the current digit is 0, the mode key will not flash.

Multi-mode Combine Power

When enabled, this feature allows for powering on/off multiple devices with a single press of the POWER button.

Enable - Multi-mode Combine Power

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code "9 9 8 0". Mode key remains lit.
3. Press all mode keys (i.e., TV, STB, DVD) you wish to enable multi-mode combine power.
4. Press [POWER] key to save and exit.

Disable - Multi-mode Combine

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code "9 9 8 0". Mode key remains lit.
3. Press [POWER] key to save and exit, Mode key blinks two times and goes out.

Device mode lock

When enabled, this feature allows for locking a device mode so that it cannot be re-programmed. It can is used as a safety feature for accidental programming. If enabled, device lock must be disabled first before mode can be programmed again.

1. Press and hold the mode key (e.g., STB) you wish to enable/disable device mode lock for, for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code “9 9 8 1”.

a. If enabled - The mode light goes out directly
b. If disabled - The mode light blinks two times

Channel Punch-through

When enabled, all channel keys: 0-9, [-], [RECALL],[CC], [SAP], [CH +]& [CH -] will always send the code of mode assigned, no matter what mode the remote currently resides.
Example: After programming channel punch-through to STB mode, if remote is presently in TV mode when pressing a channel key, remote will send the code for STB instead of TV.

1. Press and hold the mode key (e.g., STB) you wish to enable/disable channel punch-through for, for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code “9 9 8 2”.

a. If enabled - The mode light goes out directly.
b. If disabled - The mode light blinks two times.

Volume Punch-through

When enabled, all volume keys: [MUTE], [VOL+]&[VOL-] will always send the code of mode no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., TV) you wish to enable/disable volume punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 8 3".

a. If enabled - The mode light goes out directly.

b. If disabled - The mode light blinks two times.

Media Punch-through

When enabled, all media keys: [STOP], [RECORD], [<<], [|<<], [PAUSE], [>>|], [>>], [PLAY] will always send code of mode assigned, no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., DVD) you wish to enable/disable media punch-through for, for about 3 seconds until mode key lights and remains on, release the mode key.
2. Input code “9 9 8 4”.

a. If enabled - The mode light goes out directly.
b. If disabled - The mode light blinks two times.

Roku® Punch-through (+ D-Pad)

When enabled, all Roku related keys: [EXIT] (🡐), [<<], [PLAY],[PAUSE], [>>], [INFO](*), [HOME],[REPLAY], [NETFLIX], [UP], [DOWN], [LEFT], [RIGHT]&[OK] will always send code of mode assigned, no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., STB) you wish to enable/disable Roku punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 7 0".

a. If enabled - The mode light goes out directly.
b. If disabled - The mode light blinks two times.

Roku Punch-through (NO D-Pad)

When enabled, all Roku related keys: [EXIT] (🡐), [<<], [PLAY],[PAUSE],

[>>], [INFO](*), [HOME], [REPLAY], [NETFLIX]will always send code of mode assigned, no matter what mode the remote currently resides.

1. Press and hold the mode key (e.g., TV) you wish to enable/disable Roku punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 7 1".

a. If enabled - The mode light goes out directly.
b. If disabled - The mode light blinks two times.

All-Key Punch-through

When enabled, all keys will always send the code of mode assigned, no matter what mode the remote currently resides. Note: All-Key Punch-through has the lowest priority amongst all punch-through types. You may enable other punch-through modes to work alongside and they will have higher priority.

1. Press and hold the mode key (e.g., TV) you wish to enable/disable all-key punch-through for, for about 3 seconds until the mode key lights and remains on, release the mode key.
2. Input code "9 9 7 3".

a. If enabled - The mode light goes out directly.
b. If disabled - The mode light blinks two times.

Individual Key Punch-through

Individual Key Punch-through allows for individually assigning keys to “punch-through” to the mode of your choosing. After enabling punch-through to a given key, the key will

always send the code to the assigned device no matter what mode the remote currently resides.
Note: Individual Key Punch-through has the highest priority amongst all punch-through types.

Enable - Individual Key Punch-through

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the key.
2. Input code “9 8”,
3. Press the corresponding key you wish to enable punch-through for,
4. Press the mode key you want to assign it to (e.g., TV, STB, AUX); mode light goes out directly.

Note: To re-assign a key to a different mode, just repeat steps 1-4.

Disable - Individual Key Punch-through

1. Press and hold any mode key (e.g., TV) for about 3 seconds until mode key lights and remains on, release the key.
2. Input code “9 0 0”,
3. Press the key you want to disable the punch-through for; mode light blinks two times to confirm.

Learning function

Learning allows for programming of individual keys using your existing remote's codes.

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Press and release [MENU] key, the mode key blinks slowly, the remote is now in learning mode.
3. Press and release key you want to

be learned, mode light now remains on.

4. Align both remotes by pointing them at each other, with a distance of about 2 inches apart with IR LEDs directly aligned.
5. Press and hold the corresponding key on the target remote control until mode light blinks three times, then flashes slowly; means code learned successfully, continue to step 6.

a. If unsuccessful - mode light flashes two times quickly & exits from learning mode; this may indicate not enough memory space, please delete some learned keys. Please start over from step 1.

6. Repeat steps 3-5 to learn all your needed keys while model light blinks slowly, then
7. Press mode key (e.g., TV) to save and exit.

Delete individual learned key

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Press and release [MENU] key, the mode key blinks slowly, the remote is now in learning mode.
3. Press and hold the key you want to delete learned code from,

a. If successful - The mode light blinks three times, remote saves and exits.
b. If unsuccessful - The mode light flashes two times and exits.

4. Repeat steps 1-3 to delete other learned keys.

Delete all learned keys from a single device

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light

remains on, release the mode key.

2. Press and release [MENU] key, the mode key blinks slowly, the remote is now in learning mode.
3. Press and hold the mode key you want to delete all learned keys from (e.g., TV) until the mode light blinks three times and exits.

Delete all learned keys from all devices

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 8 8", mode light blinks two times slowly to confirm and exits.

Macro function

Macros allow for multiple keys to transmit with the pressing of one dedicated key. Example, with a single press of the assigned key, the remote could Power on TV, Change input, Volume Increase, Power on Cable Box & Input channel 530.

Setting a Macro Key while in a specific Mode only (Fixed Device)
What is Fixed Device? This setting allows for assigning a macro key to be used while in the designated mode only. Example, if “FAV” key is assigned to “TV” mode to send macros. “FAV” key will operate as normal if remote is in any other mode such as STB, DVD or AUDIO. “FAV” key will only send the assigned macro if remote is in “TV” mode when the key is depressed.

1. Press and hold the mode key (e.g., TV) you wish to program for about 3 seconds until the mode light remains on, release the mode key.

2. Input code "9 9 5",
3. Press key to assign macro function to, the LED flashes once and remains on;
4. Press the mode key (e.g., TV), then follow by pressing the keys in order in which you want the remote to transmit them. If you want to change modes during the sequence, press the corresponding mode key (e.g., DVD) in sequence and then continue with pressing remaining keys you wish.
5. When complete, Press and hold any Mode key (e.g., TV) for about 3 seconds to save and exit.

Setting a Macro Key that works while in any mode (Non-fixed device)
What is a non-fixed device? This setting allows for always sending the function of the macro key no matter what mode (i.e., TV, DVD, STB, AUDIO) the remote resides.

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 6",
3. Press key to assign macro function to, the LED flashes once and remains on;
4. Press the mode key (e.g., TV), then follow by pressing the keys in order in which you want the remote to transmit them. If you want to change modes during the sequence, press the corresponding mode key (e.g., DVD) in sequence and then continue with pressing remaining keys you wish.
5. When complete, Press and hold any Mode key (e.g., TV) for about 3 seconds to save and exit.

Example: Assigning “FAV” key to Power on TV, Change input, Increase volume by 1, Power on Cable Box, Input channel 530. Press the following keys in sequence:

Hold [TV] for 3 seconds, [9], [9], [6], [FAV], [TV], [POWER], [INPUT], [VOL +], [CBL], [POWER], [5], [3], [0] & finally, press and hold [TV] for 3 seconds to save.

Delete programmed macro key:
Simply skip step 4 from above procedure.

Macro functionality notes:

- This remote allows up to 5 keys having macro functionality.
- This remote can program a maximum of 15 steps per each macro.
- If programming a macro over a previously assigned macro, it will replace it.

Backlight adjustments

Toggle backlighting on/off

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 8 5".

Toggle backlighting length of time; 3 - 10 seconds

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 8 6".

Toggle backlighting brightness: 100/75/50/25%

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.

2. Input code "9 9 8 7".

Reset to Factory Default Status

1. Press and hold any mode key (e.g., TV) for about 3 seconds until the mode light remains on, release the mode key.
2. Input code "9 9 9 9"; all mode lights will light and stay lit for about 3 seconds then go out to confirm successful reset.

FOR ADDITIONAL HELP AND SUPPORTVISIT ANDERIC.COM.
ANDERIC® IS A REGISTERED TRADEMARK OF DAN'S ELECTRONICS ETC. INCORPORATED.
ALL RIGHTS RESERVED.

Code List

Most popular code

Roku Enhanced TV

Haier	2783
Hisense	2722 2782 2804
Hitchi	2803 2806 2814 2815 2816 2818 2819 2821 2822 2826 2833
Insignia	2723 2724 2752 2805 2807 2808
LG	2726
RCA	2785
Roku	2730
Sharp	2725 2733 2780 2781 2809
TCL	2654 2802
Wsetinghouse	2846

TV

A_Nity	2428 2438 2439 2445
Accurian	2252
Acer	2144
Action	2078
Admiral	2493 2608 2504 2505 2523 2624 2012 2024
Advent	2042 2058 2186 2048 2057 2282
Advertura	2481
Aiko	2011 2553
Aiwa	2465 2460 2154
Akai	2465 2570 2577 2578 2609 2054 2035 2215 2044 2157 2266 2284 2002 2030 2109 2216 2220 2332 2478

Akio	2525 2513 2611
Alaron	2488
Albatron	2034 2063
Aleron	2465
Ambassador	2486
America Action	2020
Ampro	2458
Anam	2020
Anderic	2566 2567 2568 2570 2571 2572 2573 2574
Aoc	2002 2096 2155 2191 2192 2308 2314 2362 2372 2387 2609
Aomni	2199
Apex Digital	2361 2041 2044 2086 2111 2083 2046 2302 2453 2541
Apple Tv	2692
Ascent	2481
Astar	2181 2226
Asus	2413
Audiovox	2184 2380 2263 2124 2023 2020 2011 2404 2363 2320 2293 2286 2260 2252 2244 2241 2079 2065 2051 2027 2466 2294 2126 2506 2513 2541
Auria	2314 2337
Aventura	2018
Axion	2286
Bell&Howell	2493 2493 2015
Benq	2136 2089 2461
Belcor	2609
Bloomingdale	2640
Bell & Howell	2507 2608
Blue Light	2483 2484
Bradford	2020
Brillian	2087
Brockwood	2609
Broksonic	2473 2024 2271 2284 2287 2021 2268 2280 2510 2512 2513 2516 2608 2610 2613 2653
Byd:Sign	2134
C & M	2034
Candle	2481 2501 2002 2609 2525
Carnivale	2002
Carver	2007
Casio	2108
Cce	2027
Celera	2044
Celebrity	2000 2491
Champion	2154
Changhong	2044 2502
Chimei	2498
Citizen	2002 2003 2008 2011 2213 2214 2279 2284 2481 2611 2539 2608 2609
Cisco	2776
Clairtone	2467
Clarion	2020
Claris	2442
Coby	2182 2202 2339 2341 2342 2344 2346 2347 2348 2349

Futuretech	2123 2267 2299
Gateway	2020
Ge	2234 2235 2483 2480 2465 2166 2019 2004 2005 2023 2044 2148 2183 2269 2273 2504 2541 2505 2512 2513 2516 2523 2528 2609 2612 2625
Gfm	2259 2264 2018 2211 2299 2325 2566
Gibralter	2001 2002 2505 2609
Go Video	2256 2475
Goldstar	2464 2019 2002 2003 2277 2533 2539 2609
Gpx	2386 2410
Gradiente	2501 2499
Grundig	2032
Grunpty	2488 2020
Haier	2783 2416 2233 2232 2231 2338 2340 2411 2090 2047 2374 2579 2581 2594 2595 2596 2605 2186 2823
Hall Mark	2019 2609
Hanns.G	2247
Hannspree	2149 2150 2397 2229 2247
Harley Davidson	2488 2267
Harman Kardon	2007
Harvad	2020
Havermy	2012
Hci	2565
Helios	2474 2073
Hello Kitty	2023
Hewlett Packard	2205 2096 2174 2095 2097
Hisense	2690 2691 2722 2782 2544 2326 2041 2135 2209 2316 2424 2356 2366 2543 2606 2792 2804 2847 2848
Hitachi	2685 2677 2680 2608 2609 2493 2462 2463 2462 2206 2101 2013 2031 2147 2267 2395 2003 2049 2165 2455 2500 2507 2586 2593 2539 2554 2803 2806 2814 2815 2816 2818 2819 2821 2822 2826 2833 2835 2836 2847 2849
Hp	2174 2095 2097
Hyundai	2418 2066 2112 2130 2506 2507 2537 2547 2605
I-Inc	2230
Ilo	2158 2171 2127 2197 2211 2217 2301
In_Nity	2007
Initial	2197 2301
Insignia	2723 2724 2752 2758 2761 2771 2772 2773 2254 2597 2309 2164 2204 2184 2248 2018 2024 2157 2176 2139 2107 2209 2265 2299 2327 2364 2365 2368 2394 2412 2315 2305 2791 2805 2807 2808 2844
Inteq	2001 2505

Iris	2329
Isymphony	2406 2416 2405
Ix	2081
Janeil	2481
Jbl	2007
Jcb	2491 2000
Jcm	2334 2329
Jc Penney	2502 2504 2539 2609 2611 2625
Jensen	2042 2058 2139 2382 2411 2057 2132 2282
Jvc	2699 2701 2700 2703 2702 2757 2501 2245 2195 2336 2343 2028 2335 2024 2006 2116 2212 2274 2443 2444 2040 2512 2820 2834 2835 2836 2849
Kds	2175 2219
Kec	2020
Kenwood	2002 2609
Klh	2044 2046
Kimin	2633 2634 2635
Kloss	2481
Kinka	2461
Kolin	2502 2503 2567 2568 2569
Konka	2157 2038 2530
Kost	2120 2173
Kreisen	2080
Ktv	2467 2020 2002 2003 2539 2610
Lg	2667 2668 2669 2670 2671 2672 2673 2674 2675 2676 2698 2726 2738 2739 2740 2762 2477 2164 2357 2367 2019 2001 2122 2417 2034 2070 2104 2138 2243 2283 2303 2504 2477 2474 2482 2485 2505 2508 2608 2609 2398 2790 2797 2840
Lg Bed1	2629
Lg Bed2	2630
Lg Bed3	2631
Lg Bed4	2632
Liteon	2095
Lloyd`S	2267
Lodgenet	2493
Logik	2493 2547 2548 2608
Lodgingstar	2407
Luce	2088
Luxmax	2609
Lxi	2016 2007 2019 2004 2015 2502 2504 2505 2507 2523 2609
Mag	2175 2219
Magnasonic	2682 2272 2279
Magnavox	2769 2609 2617 2525 2539 2459 2459 2488 2262 2167 2168 2261 2385 2359 2234 2007 2018 2005 2437 2400 2301 2299 2289 2281 2272 2267 2155 2051 2002 2037 2180 2117 2105 2837
Magnin	2269

Majestic	2493 2493 2609
Marantz	2167 2007 2036 2159 2002 2068 2069 2224 2370
Matsushita	2457 2022 2028
Maxent	2234 2236 2043 2110 2224
Mb Quart	2263
Megapower	2034
Megatron	2456 2019 2013
Mei	2467
Memorex	2493 2488 2248 2278 2275 2019 2015 2024 2014 2186 2211 2212 2265 2266 2271 2287 2081 2277 2507 2608 2609 2611
Mga	2456 2019 2014 2002 2269 2609
Midland	2465 2004 2001 2005 2003 2504 2505 2539
Midsouth T1/Tv2/Tv3	2641 2642 2643
Millrock	2564
Mintek	2197 2301
Minutz	2480
Mitsubishi	2657 2745 2767 2520 2523 2456 2465 2115 2012 2019 2014 2250 2062 2503 2517 2603 2609
Mittsui	2509 2506 2546 2621 2622
Monivision	2034 2063
Montgomery Ward	2493
Motorola	2012 2523 2612
Mtc	2467 2008 2002 2539 2609 2611
Multi Tech	2020
Nad	2016 2103 2019 2074 2502 2609 2623
Naxa	2416 2318 2392 2408
Nec	2482 2479 2036 2159 2221 2250 2338 2002 2080 2505 2616 2532 2609 2612 2620
Nettv	2234 2043 2462
Nexus Electronics	2326
Nikko	2019 2011 2002 2502 2505 2507 2609
Niko	2190
Noblex	2507 2522 2529 2540 2549 2552 2653 2555 2557
Norcent	2191 2041 2096 2155 2192 2061 2193 2229 2317 2486 2506
Norwood Micro	2127 2131
Ntc	2011
Nuvision	2324 2208
?Levia	2662 2100 2113 2143 2487 2567 2568 2569 2618 2198
Olevia(Lcd)	2618
Olivia	2662
ONN	2825 2830 2848 2850
Onwa	2020
Optimus	2457 2022 2028 2278 2275 2015 2272 20172507 2623
Optique	2329
Optoma	2149
Optonica	2484 2476 2012 2523 2620

	2401 2333 2328 2326 2416 2012 2004 2005 2210 2407 2428 2399 2439 2449 2297 2296 2295 2263 2246 2183 2157 2148 2031 2010 2305 2273 2269 2114 2102 2092 2504 2541 2609 2612 2513 2523 2623 2627 2628 2633 2634 2635 2393 2166 2786 2793 2801 2845 2849
RCA BED 1	2706
RCA BED 2	2710
RCA BED 3	2711
Rca Com. R130d1	2717 2718 2719 2720 2721 2648 2649 2650 2651 2652
Rca Com. R230d2	2707 2713 2714 2715 2716 2508 2644 2645 2646 2647
Rca Km38r01/02	2695 2696
Rca Led Bed1	2704 2706 2633
Rca Led Bed 2	2705 2710 2634
Rca Led Bed3	2711 2712 2635
Realistic	2019 2015 2020 2002 2003 2507 2539 2609 2620 2624
RcaOncorp Bed1	2708 2709
Rca R130j1	2729
Rca R130k1	2727
Rca R130k2	2728
Rca R230d1	2693
Rca R230d2	2694
Revolutionhd	2199
Rhapsody	2467
Roomcox	2626
Roku	2851
Roku Player	2730
Rrvr2p	2664
Runco	2493 2482 2001 2159 2002
Sampo	2234 2002 2003 2043 2509
Sanyo	2658 2763
Samsung	2661 2735 2750 2753 2754 2755 2760 2778 2611 2614 2465 2465 2310 2054 2201 2035 2028 2019 2008 2045 2056 2093 2266 2297 2390 2002 2003 2026 2187 2522 2527 2539 2609 2784 2788 2796
Samsux	2003
Sansui	2018 2024 2171 2161 2212 2265 2267 2271 2284 2287 2843 2414 2425 2280 2542 2545 2607
Sanyo	2485 2099 2007 2015 2009 2050 2154 2269 2495 2510 2507 2521 2524 2526 2535 2538 2558 2601 2602 2615 2658 2763 2795
Sceptre	2381 2345 2082 2111 2152 2378 2194
Scotch	2019
Scott	2473 2488 2019 2020 2222 2021 2539 2609
Sears	2488 2016 2007 2018 2019 2004 2015 2087 2267 2277

Techwood	2005 2609
Teco	2091
Teknika	2493 2456 2488 2007 2008 2020 2014 2011 2003 2539 2608 2609 2611
Telefunken	2465 2035
Telerent	2493
Thomas America	2267
Tmk	2486 2019 2609
Tnci	2001
Toshiba	2686 2678 2681 2665 2751 2775 2611 2616 2507 2604 2008 2015 2016 2028 2060 2064 2103 2118 2122 2138 2146 2151 2156 2179 2207 2221 2284 2285 2290 2297 2307 2391 2457 2465 2470 2478 2490 2575 2502 2514 2842 2518 2523 2556 2585 2794
Tosonic	2467
Totevision	2003
Trical	2456
Trutech	2211 2225 2312 2562 2563
Tvs	2024
Univerasl	2483
Us Logic	2127
Vea	2493
Vector Research	2002
Venturer	2260 2263
Veos	2087
Victor	2501 2006
Vidikron	2007 2159
Vidtech	2019 2609
Viewsonic	2309 2234 2184 2314 2072 2084 2142 2155 2189 2200 2203 2227 2308 2337 2435 2049 2071 2471 2472 2514 2515 2516 2593
Viking	2481
Viore	2406 2416 2217 2318 2355 2405 2109 2255 2494
Visionquest	2415
Vistron	2321
Vivitek	2156
Vizio	2659 2666 2741 2742 2768 2072 2084 2235 2237 2379 2389 2396 2441 2497 2455 2569 2560 2561
Vuon	2418
Wards	2000 2001 2002 2004 2005 2007 2008 2015 2016 2019 2020 2074 2102 2103 2148 2459 2480 2483 2484 2488 2493 2502 2608 2609 2620 2623 2624 2625
Waycon	2016
Westing House	2663 2734 2779 2023 2084 2085 2086 2111 2125 2133 2188 2223 2330 2338 2361 2377 2405 2416 2420 2429 2448 2582 2838 2839 2846 2849

	5050 5052 5015 5053 5073 5074 5076 5077 5078
Director	5266 5027 5001
Dish	5246 5318
Dish Network System	5083 5037 5057 5245 5248 5249
Dishpro	5083 5037
Echostar	5083 5037 5057
Epson	5085
Expressvu	5037
Fortec Star	5152 5096
Fosgate	5023
Funai	5072
Gateway	5062
Ge	5293 5018 5228 5026 5031
General Instrument	5266 5270 5263 5255 5302 5027 5039 5023 5011 5001 5043
Gibralter	5011
Gmi	5045
Goi	5037
Goldstar	5259 5018
Hamlin	5257 5262 5013 5022
Hewlett Packard	5062 5061
Hitachi	5299 5011 5012 5013 5035 5040
Houston	5037
Howard Computers	5062
Hp	5062 5061
Hts	5037
Hughes Network Systems	5297 5306 5316 5317 5056 5035 5092 5076 5077 5078
Humax	5093
Hush	5062
I3 Micro	5086
Ibuypower	5062
Innova	5015
Insight	5027 5039
Insignia	5075
Iptv Cisco	5148
Jerrold	5266 5270 5263 5255 5302 5027 5039 5023 5011 5001 5043
Jvc	5037 5057
Koolconnect	5080
Lg	5243 5244 5317 5059 5074 5075
Linksys	5062 5070
Magnavox	5296 5034
Media Center Pc	5062
Memorex	5254 5010
Mcintosh	5043
Microsoft	5062 5103
Mind	5062
Mitsubishi	5011 5035
Motorola	5260 5266 5270 5263 5274 5275 5301 5302 5068 5101 5071 5027 5039 5023 5058 5051 5100 5000 5001 5003 5043 5042
Multitech	5045
Myrio	5086 5097
Neosat 2-Pro 2000	5166

Thomson	5132 5060 5026 5031
Tivo	5306 5311 5056 5076 5077 5078
Torx	5255 5011
Toshiba	5254 5298 5308 5316 5062 5010 5035 5092 5038 5064
Touch	5062
Tristar	5045
Ultimatetv	5310 5314 5073 5088
Ultrasat	5094
Uniden	5034
United Cable	5023 5011
Us Electronics	5023 5011 5012
Videoway	5045
Viewmaster	5320
Viewsat	5010
Viewsonic	5045
Vision	5170 5170 5182
Vizio	5055
Voodoo	5062
Voom	5062 5043
Vortex View	5302 5043
Vudu	5045
Xbox	5107
Zenith	5280 5103 5254 5268 5272 5010 5029 5046 5098 5075
Zt Group	5062
Others	5218 5213 5207 5206 5217 5226 5208 5223 5220 5211 5222 5221 5219 5214 5216 5227 5210 5215 5212 5209 5225 5224 5243 5244

Audio Devices

Adc	4008
Aiwa	4003 4005 4001 4018 4083 4057 4052
Alco	4055
Altec Lansing	4161 4177
Amc	4017
Amphion Media Works	4074
Amw	4074
Anam	4079
Anderic	4238 4239 4240 4241 4242 4243 4245 4246
Anthem	4215
Apex Digital	4027 4059 4092
Apple	4019
Arcam	4023 4005
Audiosource	4235
Audiotronic	4023
Audiovox	4055
Bose	4108 4081 4024 4046 4100 4009
Boston Acoustics	4122
Capetronic	4008
Carver	4023 4005 4001 4018
Coby	4054 4174 4180 4206 4117
Curtis	4054
Daewoo	4025

Pioneer	4254 4109 4014 4020 4053 4142 4166 4008 4010
Polk	4253
Polk Audio	4253 4005 4035 4133 4225 4013
Pro_Cient	4234
Proscan	4026
Rca	4165 4167 4176 4079 4014 4026 4020 4055 4112 4141 4212 4216 4008 4066 4010 4265 4266
Regent	4076
Rio	4103
Samsung	4245 4246 4250 4168 4102 4181 4037 4201 4119 4039 4065 4186 4163 4276 4327 4348 4375 4376 4396 4259
Sansui	4005 4018
Sanyo	4095
Sharp	4197
Sherwood	4017 4068 4075 4084 4107 4123 4200
Sherwood Newcastle	4075 4123
Sonic Blue	4103
Sony	4243 4244 4164 4080 4089 4088 4124 4098 4155 4159 4016 4060 4028 4101 4003 4085 4127 4073 4170 4184 4208 4221 4226 4256 4257 4258
Speakercraft	4234
Stereophonics	4014
Sun_Re	4042
Teac	4007 4055 4070
Technics	4082 4041 4069
Thorens	4023
Toshiba	4020 4093 4232
Venturer	4055
Vizio	4240 4241 4249 4148 4173 4264
Wards	4003 4005
Yamada	4006
Yamaha	4113 4152 4006 4192 4004 4097 4033 4045 4050 4051 4153 4209 4210 4218 4231 4160 4022 4062 4149 4162 4094 4150 4110
Zenith	4126 4036 4103
Zvox	4139 4140 4436 4437

PROJECTOR

3M	4273 4314 4386 4420
A+K	4282
ACER	4290 4409
ASK	4284 4291
Benq	4410 4421 4422
Boxlight	4273 4283 4289 4308 4314 4332 4333 4350 4360 4361
Canon	4277 4434
Casio	4272
Compaq	4309
Dell	4278 4398 4399
Dukane	4273 4314 4