760 USER MANUAL

Mechanical Keyboard

English / Français / Deutsch / Español
Русский / 한국어 / Türkçe / ภาษาไทย

CONTENTS

English 1-7
Français 8-13
Deutsch 14-19
Español 20-25
Русский 26-31
한국어 32-37
Türkçe 38-43
ภาษาไทย 44-49

* The product does not support flash drive mode.

Type-C cable

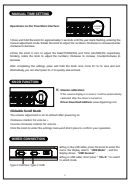

Keyboard Mode Switching

Hold Fn and press the corresponding key to switch the keyboard mode. Default is Windows mode.

Mode	Combination
Windows mode	Fn + Windows
Mac mode	Fn + Mac

Backlight Adjustment

Hold Fn and press the corresponding key to adjust the backlight brightness. Default is 50%.

Brightness	Combination
0%	Fn + Backspace
25%	Fn + Insert
50%	Fn + Home
75%	Fn + Page Up
100%	Fn + Page Down

Backlight Speed Adjustment

Hold Fn and press the corresponding key to adjust the backlight speed. Default is 3.

Speed	Combination
Speed 1	Fn + ↑
Speed 2	Fn + ↓
Speed 3	Fn + ←
Speed 4	Fn + →
Speed 5	Fn + End

Backlight Color Switching

Hold Fn and press the corresponding key to switch the backlight color. Default is white.

Color	Combination
White	Fn + \
Red	Fn +]
Orange	Fn + [
Yellow	Fn + P
Green	Fn + O
Cyan	Fn + I
Blue	Fn + U
Purple	Fn + Y

Backlight Switching

Hold Fn and press the corresponding key to switch the backlight on or off. Default is on.

Function	Combination
Backlight on	Fn + T
Backlight off	Fn + R

Media Control Function

Hold Fn and press the corresponding key to control media playback.

Function	Combination
Mute	Fn + F5
Play/Pause	Fn + F6
Previous	Fn + F7
Next	Fn + F8
Volume -	Fn + F9
Volume +	Fn + F10

Windows Lock Function

Hold Fn and press the corresponding key to lock the Windows system. Default is unlocked.

Function	Combination
Lock Windows	Fn + Right Win
Unlock Windows	Fn + Right Win

Factory Reset

Hold Fn and press the corresponding key to reset the keyboard to factory settings.

Function	Combination
Factory reset	Fn + Esc

Connecting Cable

Connect the keyboard to your computer using the Type-C cable.

Bluetooth Pairing Mode

Switch the keyboard to Bluetooth mode and enter pairing mode.

Function	Combination
Bluetooth 1	Fn + 1
Bluetooth 2	Fn + 2
Bluetooth 3	Fn + 3

Bluetooth Connection

Turn on Bluetooth on your device and search for available devices. Select the keyboard name to connect.

2.4G Wireless Connection

Plug the 2.4G receiver into your computer. Switch the keyboard to 2.4G mode and wait for automatic connection.

Wired Mode

Connect the keyboard to your computer using the Type-C cable. Switch to wired mode.

Battery Indicator

Press Fn + Caps Lock to check the battery level.

Battery Level	Indicator
100% - 21%	Green
20% - 11%	Yellow
10% - 0%	Red

Charging

Connect the keyboard to your computer using the Type-C cable. The indicator turns red while charging and turns off when fully charged.

Sleep Mode

The keyboard enters sleep mode automatically after 10 minutes of inactivity. Press any key to wake it up.

Auto Shutdown

The keyboard shuts down automatically after 30 minutes of inactivity. Press any key to wake it up.

Specifications

Model	760
Keyboard Layout	75%
Number of Keys	84
Switch	Gateron Pro Yellow Threaded
Keycap Material	PBT Double-shot
Keycap Profile	Cherry
Backlight	RGB
Connection	Type-C / 2.4G / Bluetooth
Battery	4000mAh
Dimensions	315 x 127 x 38 mm
Weight	1.1 kg

Troubleshooting

Keyboard not responding
Check if the Type-C cable is properly connected. Try a different USB port. Switch to the correct mode.

Bluetooth not connecting
Make sure Bluetooth is enabled on your device. Remove the keyboard from your device's Bluetooth list and pair again.

2.4G receiver not working
Unplug and replug the receiver. Make sure the keyboard is in 2.4G mode. Keep the receiver within 10 meters.

Backlight not working
Check if backlight is turned on. Press Fn + Backspace to adjust brightness.

Keys typing wrong characters
Check if the keyboard layout matches your system. Switch between Windows and Mac mode.

Safety Information

- Use only the supplied Type-C cable.
- Do not expose the keyboard to water or moisture.
- Do not disassemble or modify the keyboard.
- Keep away from children.
- Clean with a dry cloth only.

Warranty

This product is covered by a 12-month limited warranty from the date of purchase. The warranty does not cover damage caused by misuse, accidents, or unauthorized repairs.

Contact Us

For support, please contact us at support@example.com.

Français 8-13
Deutsch 14-19
Español 20-25
Русский 26-31
한국어 32-37
Türkçe 38-43
ภาษาไทย 44-49