Bluetooth smart fish

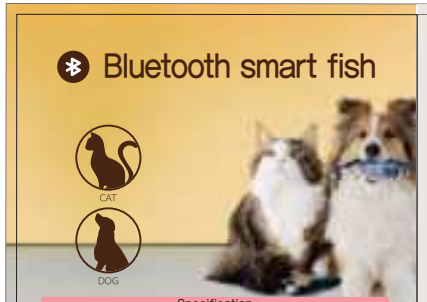

CAT

DOG

Specification	
• Working hour	Up to 12hour (continually working is 40min)
• Complete charging hour	2hour
• Material	Outer: Polar fleece +nylon 100% Inner: ABS
• Duration of after service	After one-year from the date of purchase

제품구성 Package included 製品構成

점핑볼(커버인형 + 본품), USB 충전케이블, 사용 설명서

Fish (doll of cover+ main product), USB cable, User manual

ジャンピングボール(カバーぬいぐるみ＋本品)、USB充電ケーブル、取扱説明書

피쉬(커버인형+본품)	USB 충전케이블	사용 설명서
Fish (doll of cover+ main product)	USB cable	User manual
フィッシュ(カバーぬいぐるみ＋本品)	USB充電ケーブル	取扱説明書

How to use 'Bluetooth smart fish'

- Open the set of Bluetooth and the application
- Turn on when you press the button of turn on/off with the voice "Normal mode Power On".
- If you press the power button for 3 times continually and see. "Waiting for connection" please press → HAMIL BALL → "connected"
- It works with ▶ → stop with ■
- → Select mode → Save → Press power button 3 times → Normal Mode (Bluetooth disconnected) → The fish will now operate in the set mode upon impact.
- After the playing, if you press the power button and hold on, you can hear "Power off" then the power will be off.

※ All the movement will continue with 10 seconds working and 20 seconds pausing. It will works with 3 different rhythms (slow~ middle~ fast).

※ If you turn off and on the power, the setting will be reset.

※ It could cause disconnection due to the Bluetooth connection error.

※ If you cannot search or connect with the device, please reset the setting.

How to use 'smart fish' (normal version)

- There is sound "Normal Mode Power on" if you open the Velcro and press the power button for 3 seconds.
- If you touch Fish, It will work with 3 different rhythms for 5minutes and 90 minutes waiting mode will repeat. During it works for 5 minutes, it will work 10 seconds and pause for 20 seconds with 3 different rhythms (slow ~ middle ~ fast).
- If you touch the main product during the waiting mode, it will restart for 5 minutes.
- After playing, If you press the power button for 3 seconds then you can hear. The sound "Power off" and it will be power off.

How to charge

- There is charge port next to the power button
- It will be easier to recharge with USB charging cable
- You can see the red LED light (processing charging → no LED light (completed charging)
- It takes approximately 2 hours to recharge

Note

- Due to the sounds of the toy and the automatic movement, your pets might need times to get used to get familiar.
- To get familiar, please turn off the power and put treats or catnip for cats in the pocket, Your pet can be familiar easier with nose activity.
- If your pets are used to use this toy, please turn the power on to interact with your pet.
- Please keep the charging cable away from your pet while charging the battery.
- If you separate the cover and the main product on the floor, it can be out of order.
- Cover can be washable however the main product is not waterproof.

HA:MIL

Address 19, Yeonan-ro 58beonga-gil, Dongnae-gu, Busan, Republic of Korea
Customer service 070-5121-2780
E-mail cs@hamilpet.co.kr
Web-site www.hamilpet.co.kr

「Bluetoothスマートフィッシュ」使用方法

- 携帯の 設定→アプリを実行してください。
- 電源ボタンを長く押して「Normal Mode Power On」音声が出たら電源がついた状態です。
- 電源ボタンを3回連続押し「Waiting For Connection」→ アプリで →「connected」→ HAMIL BALL アクセスが完了された状態です。
- ▶ 押すと作動 → ■ 押すと止まります。
- → モード選択 → Save → 電源ボタンを3回連続で押す → "Normal Mode"(ブルートゥース接続解除) → フィッシュルールに衝撃を与えると設定したモードで作動します。
- 遊びが終わった後、電源ボタンを長く押すと「Power Off」音声案内が出て電源が消えます。→ フィッシュルールに衝撃を与えると設定したモードで作動します。

※全ての作動は3つのリズム(低速-中速-高速)で(10秒作動→20秒待機)となっています。

※ 電源を切ってからつけると、ブルートゥースで設定しておいたモードは初期化されます。

※ ブルートゥースアクセス履歴エラーでアクセスできない現象が発生することがあります。

※ 機器検索ができないか、アクセスできない場合、設定を初期化した後、進めてみてください。

「スマートジャンピングボール」使用方法(ノーマルバージョン)

- ファスナーを開け、電源ボタンを「3秒」程度長く押すと、「Normal Mode Power On」の音声案内が出ます。
- フィッシュに触れると、3つのリズム(低速-中速-高速)で(10秒作動→20秒待機)「5分作動後、90分間待機モード」が繰り返されます。
- 待機モードで衝撃を加えると、再び5分間作動します。
- 遊びが終わった後、電源ボタンを「3秒」程度押して「Power Off」音声案内が出ると電源が消えます。

バッテリー充電方法

- 電子ボタンの横に充電端子があります。
- USB充電ケーブルをつなげ、簡単に充電できます。
- 充電表示は赤いLED(充電中) → 消灯(充電完了)で確認できます。
- 充電時間はおよそ2時間かかります。

注意事項

- ノイズを発生したり、自動で動くため、ペットの性格や周りの環境により慣れるのに時間が必要な場合があります。
- 電源を切った状態で、ポケットにおやつやイヌハッカを入れて使用してください。嗅覚を使用したおやつを探す遊びをしながら早く慣れることができます。
- 慣れると電源をつけ、ペットと共感できるようにしてください。
- 充電時、ケーブルにかみつかないようにペットの届かない場所で安全に充電してください。
- カバーを外し、本品を床において使用する場合、故障の原因となります。
- カバーだけ単独で洗濯でき、本体には水が入らないようにしてください。

HA:MIL

住所 19, Yeonan-ro 58beonga-gil, Dongnae-gu, Busan, Republic of Korea
お客様センター 070-5121-2780
E-mail cs@hamilpet.co.kr
ホームページ www.hamilpet.co.kr

'블루투스 스마트 피쉬' 사용 방법

- 핸드폰 설정 → 앱을 실행해주세요.
- 전원버튼을 길게 눌러 "Normal Mode Power On" 음성이 나오면 전원이 켜진 상태입니다.
- 전원버튼을 3번 연속 눌러"Waiting For Connection"→ 앱에서→ → HAMIL BALL → "connected" →연결이 완료된 상태입니다.
- ▶ 누르면 작동 → ■ 누르면 멈춥니다.
- → 원하는 모드선택 → Save → 전원버튼 3번 연속 누르기 → "Normal Mode" (블루투스 연결 해제) → 피쉬에 충격을 주면 설정한 모드로작동합니다.
- 놀이가 끝난 후 전원버튼을 길게 누르면 "Power off" 음성 안내가 나오며 전원이 꺼집니다.
- 데시벨을 발생시키고 자동으로 움직이기 때문에 댕냥이의 성격이나 주변 환경에 따라 간혹 적응기간이 필요할 수 있습니다.

※ 모든 작동은 3가지 리듬(저속~중속~고속)으로 (10초 작동 → 20초 대기)로 되어있습니다.

※ 전원을 껐다 켜면 블루투스에서 설정해둔 모드는 초기화 됩니다.

※ 블루투스 연결 이력 오류로 연결되지 않는 현상이 발생할 수 있습니다.

※ 기기 검색이 안되거나, 연결이 안될 경우 설정을 초기화 후 진행해 보시기 바랍니다.

'스마트 피쉬' 사용 방법(일반버전)

- 벨크로(찍찍이)를 열어 전원버튼을 '3초' 정도 길게 누르면 "Normal Mode Power On" 음성 안내가 나옵니다.
- 피쉬를 건드려 주면 3가지 리듬(저속 ~ 중속 ~ 고속)으로 (10초 작동 → 20초 대기) "5분 작동 후 90분간 대기모드" 가 반복됩니다.
- 대기모드에서 건드리면 다시 5분간 작동합니다.
- 놀이가 끝난 후 전원버튼을 길게 누르면 "Power off" 음성 안내가 나오며 전원이 꺼집니다.

배터리 충전 방법

- 전원버튼 옆에 충전 단자가 있습니다.
- USB 충전 케이블을 연결하여 간편하게 충전할 수 있습니다.
- 충전 표시는 빨간LED(충전 중) → 소등(충전 완료)로 확인할 수 있습니다.
- 충전 시간은 대략 2시간 소요됩니다.

참고해 주세요

- 데시벨을 발생시키고 자동으로 움직이기 때문에 댕냥이의 성격이나 주변 환경에 따라 간혹 적응기간이 필요할 수 있습니다.
- 전원을 끈 상태에서 포켓에 간식이나 캣닙(캣닙)을넣어노즈워크불로사용해 주세요. 후각 활동을 통해간식을 찾는 놀이를 하며 더욱 빠르게 적응 시킬 수 있습니다.
- 적응이 되면 전원을 켜서 댕냥이와 교감할 수 있도록 해주세요.
- 충전 시 케이블을 물어뜯지 않게 댕냥이들이 닿지 않는 곳에서 안전하게 충전해 주세요.
- 커버를 분리하여 본품을 바닥에 두고 사용할 경우 고장의 원인이 될 수 있습니다.
- 커버만 단독으로 세탁이 가능하며 본제에는 물이 들어가지 않도록 해주세요.

HA:MIL

주 소 부산 동래구 연안로 58번가길 19
고객센터 070-5121-2780
E-MAIL cs@hamilpet.co.kr
홈페이지 www.hamilpet.co.kr

Part 15 statements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.