MAULTI Smart Plug Switch Smart Plug WiFi Camera Instruction Manual

MAULTI Smart Plug Switch Smart Plug WiFi Camera

Contents

Product Overview

Smart Plug Switch Indicator

Reset Button   Power Switch

Vents

Product Specifications

Smart WiFi Plug
Model: K200
Input:100-240V 60Hz 10A
Output:100-240 60Hz 10A
FCC ID:2A4LV-MDC-XP04
Made in China

L   N   FC ⌂ ▯
250V~   RoHS

Smart Plug Switch

Wi-Fi indicator

SD card slot

User Guide For APP Installation

For iOS Devices:

a. Scan below QR Code for iOS operating system to download and install "Camama" APP with iPhone or iPad devices.
b. Search "Camama" in App Store with your iOS devices, download and install App.
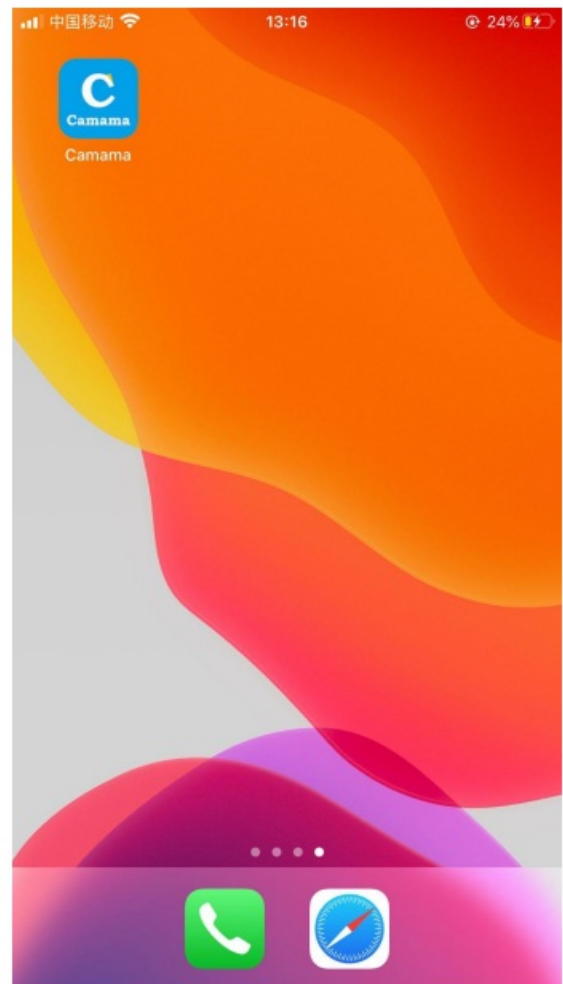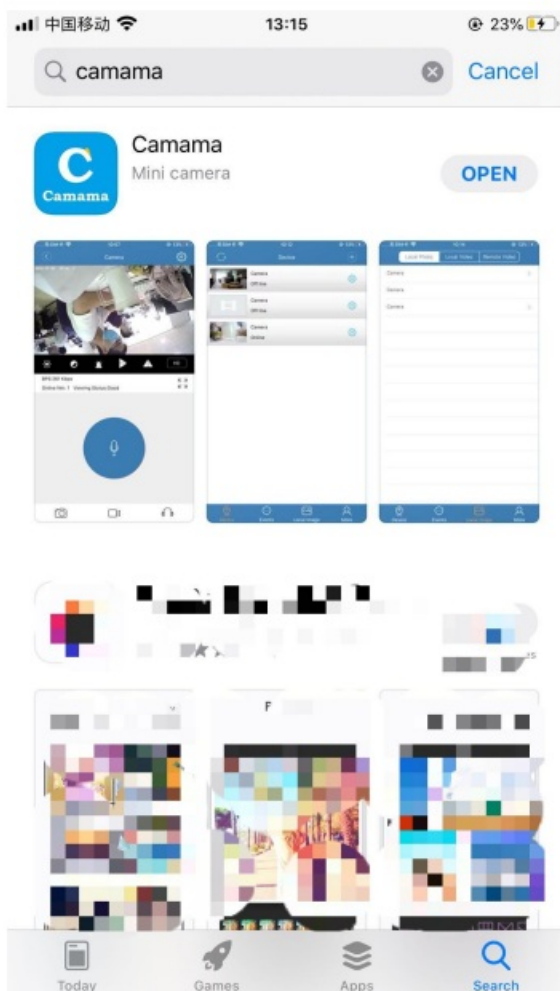
For Android Devices:
a. Scan below QR Code for Android operating system to download and install "Camama" App with Mobile or tablet devices.
b. Search "Camama" in Google Play with your iOS devices, download and install App.

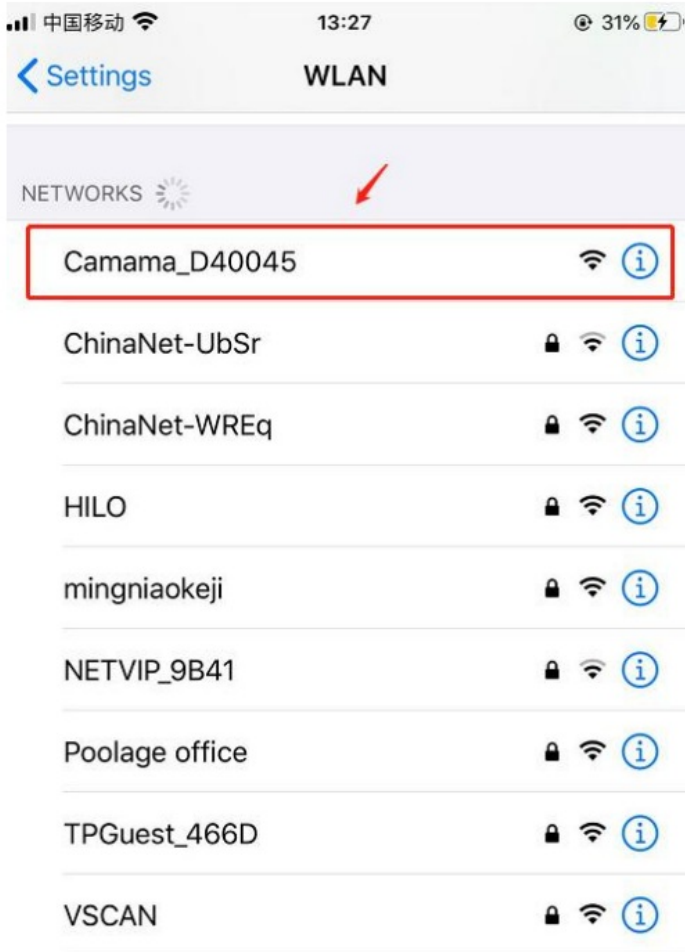|	
 iOS Device QR Code	 Android Device QR Code

Adding New Camera Device

A. Connected the power supply and tum on the device by ON/OFF switch. The green light will flashing and the camera are waiting to be connected.
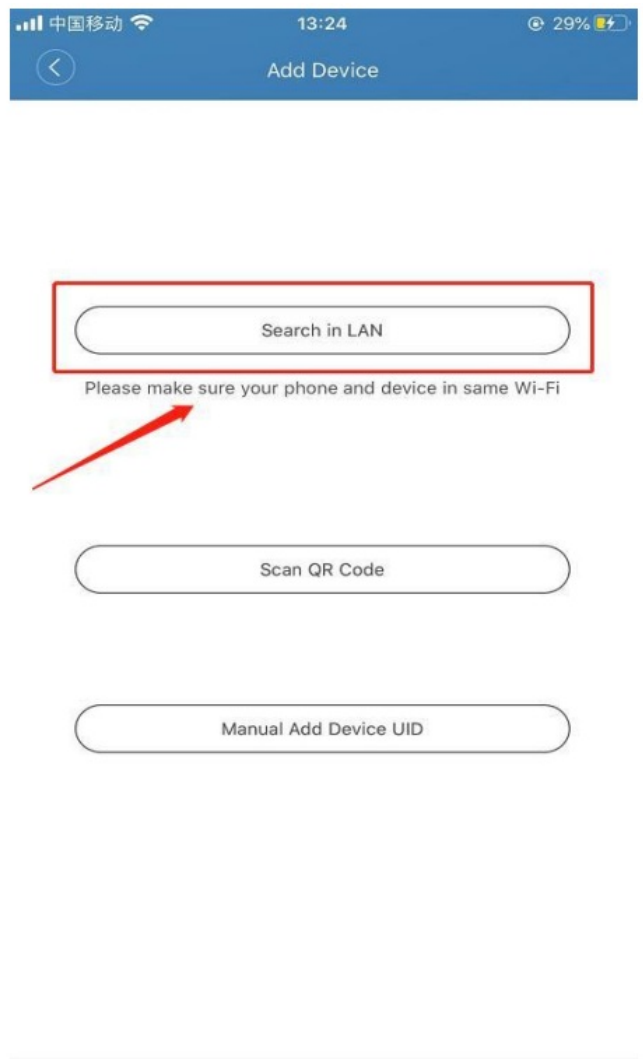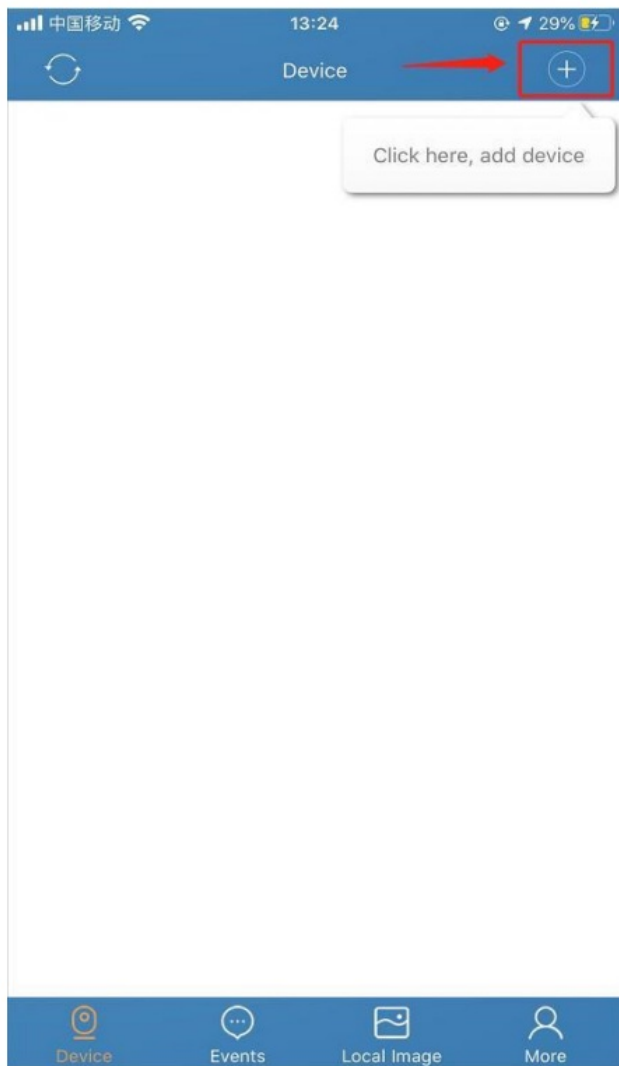
B. Enter your phone "settings"-> choose "WLAN" -> find the camera's hot-spot signal (the name of the signal is"Camama_XXXXX"),connects the camera's hot spots.

Important Note!

If you can not find the camera's hotspot signal or can't connect, please reboot the device by press the reset button about Ss until listening a sound of "Ding", after that, the hot spot signal will come up again and you can connect it for next steps.

C. Load the APP (Camama) and click the button ⊕ to add new device->choose "Search in LAN"->Click the device ID and Saved. After this step Finished, the camera has been added to the App and you can watch the video via hotspots at distance of 10-lSm range(Point-Point Mode).

Device

Click here, add device

Device Events Local Image More

Add Device

Search in LAN

Please make sure your phone and device in same Wi-Fi

Scan QR Code

Manual Add Device UID
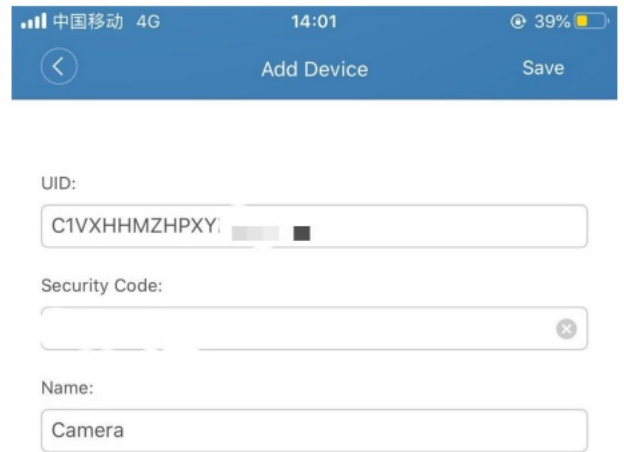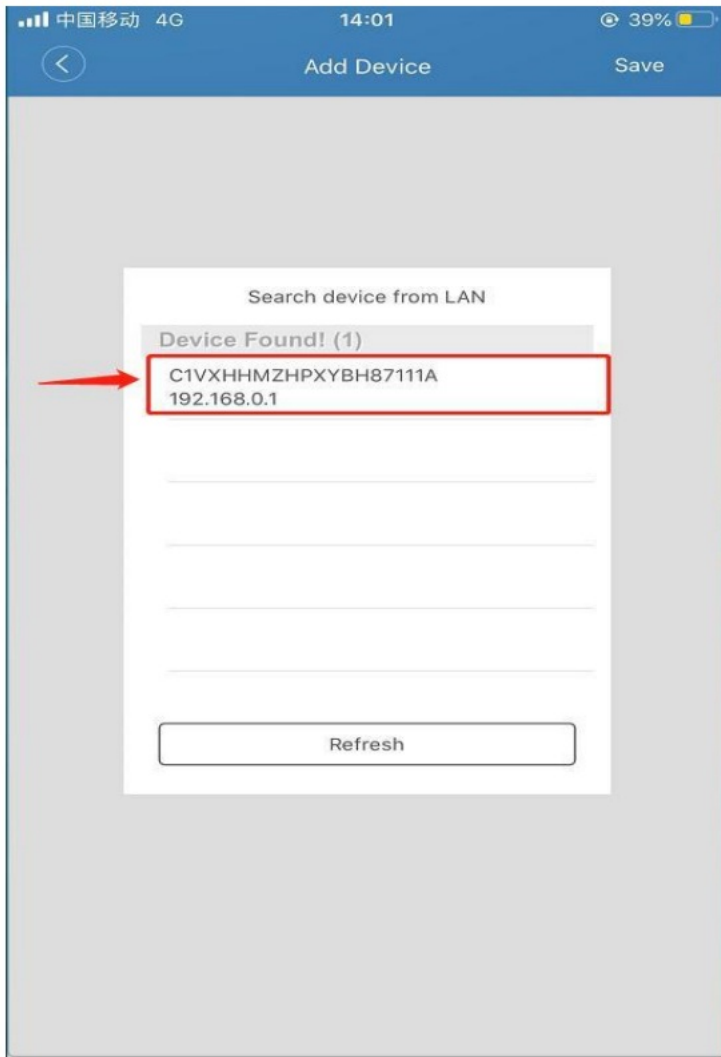
Please noted: On the above step, some of IPhone user can't :fmd the device, how to resolve it?

If you're using IOS14.0 or above, when you connect the device at the first time, please shut-off the cellular data of your phone, then go back to app and refresh it, then you'll find the device come up, after connection was done, you can turn on the cellular data of your phone.
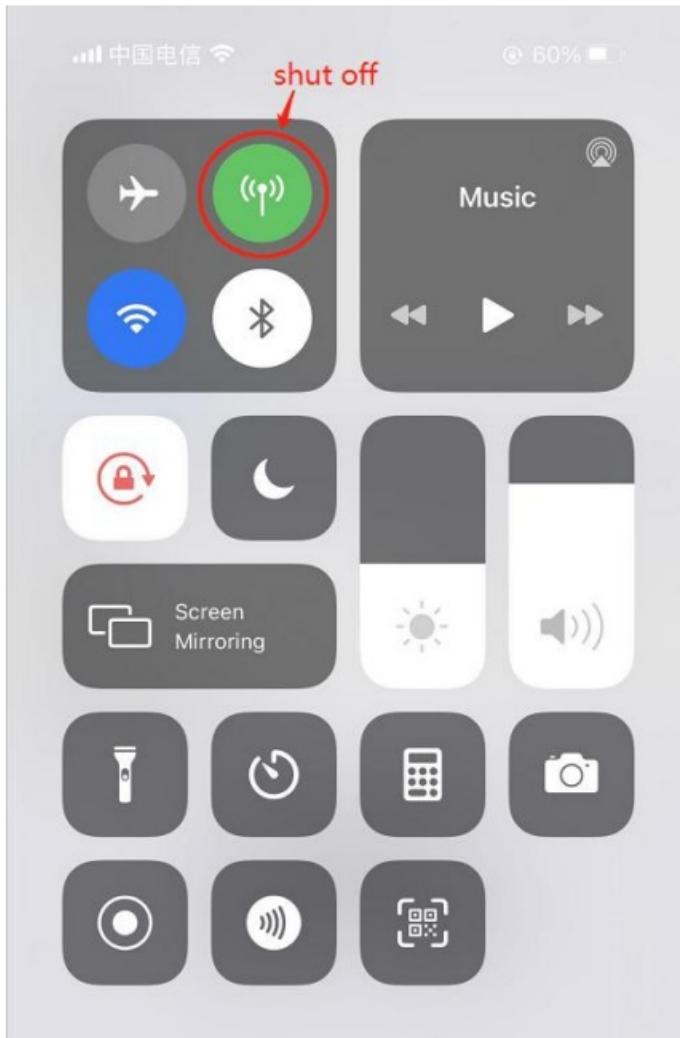
WIFI Setting For Remote Control (Remote Mode)

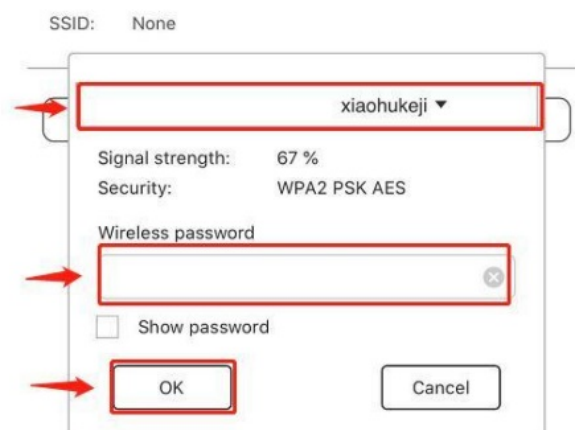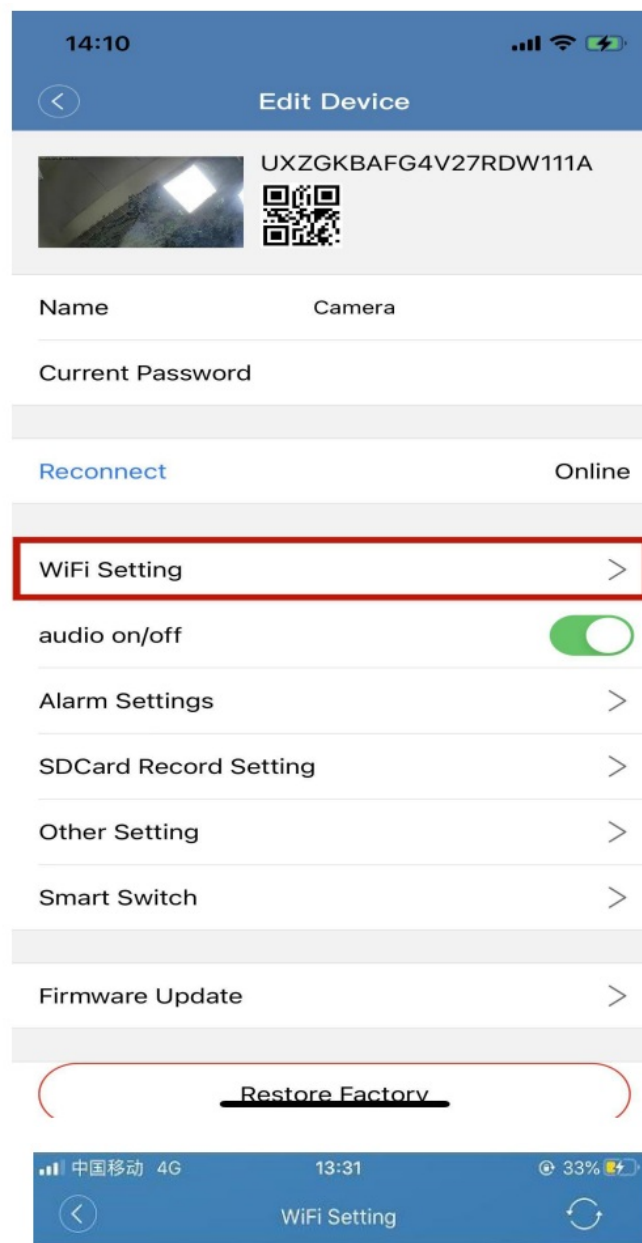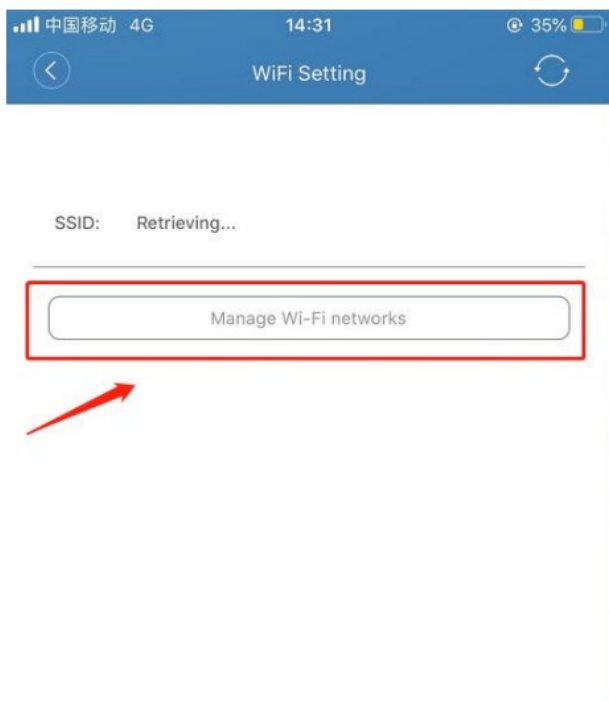Click the setting button->Choose the "WIFI Setting" ->Click the " Manage Wi-Fi networks". Please wait for a few seconds until the SSID shows "None" and then choose your home wifi and input your passwords, click the OK button, wait for about 5-10 second. When it shows "on1ine" again, it means the wifi setting is successful.

After this step was done, the second green light will not flashing, it means the camera has been connected to router successfully, then you can watch your home and access the live feed at any anytime from anywhere by your mobile phone (Remote Control)

Note:

1. After input your wifi passwords and config the connection, the device will restart automatically and wait for the camera to restart, which will be completed in about 20-40 seconds. During the connection process, please do not shut-off the device manually.
2. When connecting to WiFi, please make sure input the correct WiFi password. If the passwords is wrong, the camera will be offline, then you need to reboot the device and re-pair it.

Camera
Online

⚙

14:10　📶 🔋
‹　**Edit Device**

UXZGKBAFG4V27RDW111A

Name　Camera

Current Password

Reconnect　Online

WiFi Setting　>

audio on/off　●

Alarm Settings　>

SDCard Record Setting　>

Other Setting　>

Smart Switch　>

Firmware Update　>

Restore Factory

Device　Events　Local Image　More

中国移动 4G　14:31　35%
‹　WiFi Setting　↻

SSID:　Retrieving...

Manage Wi-Fi networks

中国移动 4G　13:31　33%
‹　WiFi Setting　↻

SSID:　None

xiaohukeji ▾

Signal strength:　67 %
Security:　WPA2 PSK AES

Wireless password

☐ Show password

OK　Cancel

Live Feed and Remote Viewing

(Live Stream and Remote 7/24 Monitoring from anywhere)
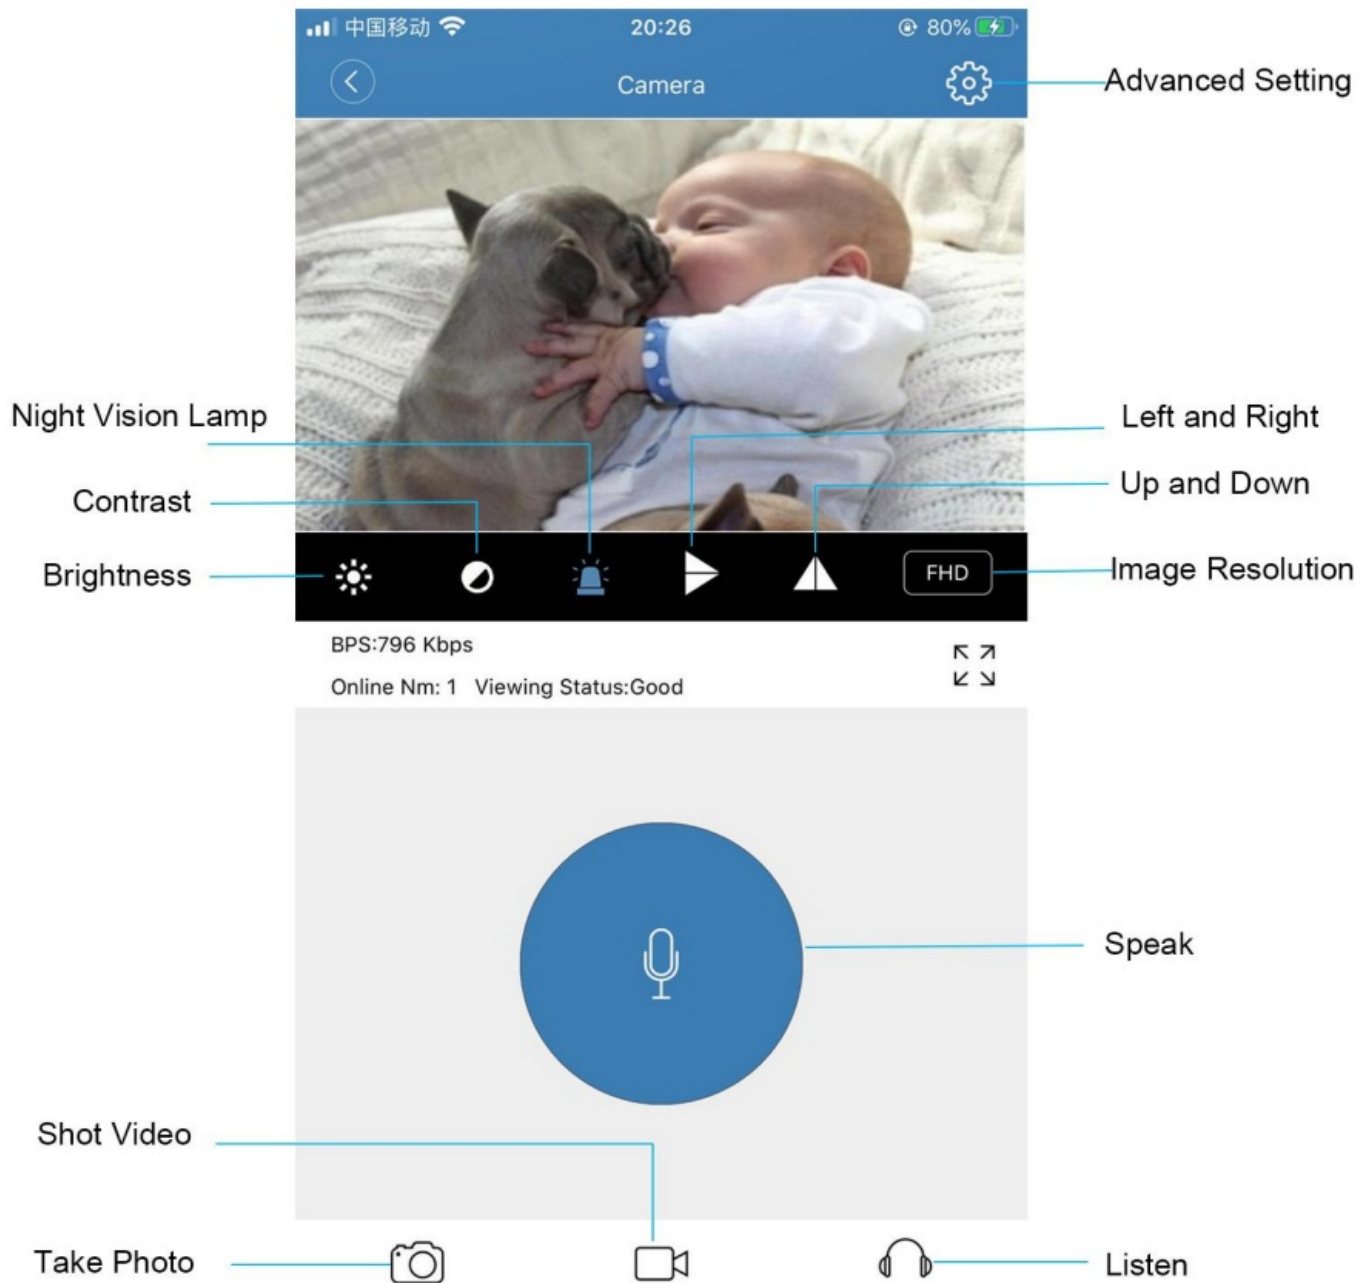
Motion Detection Settings
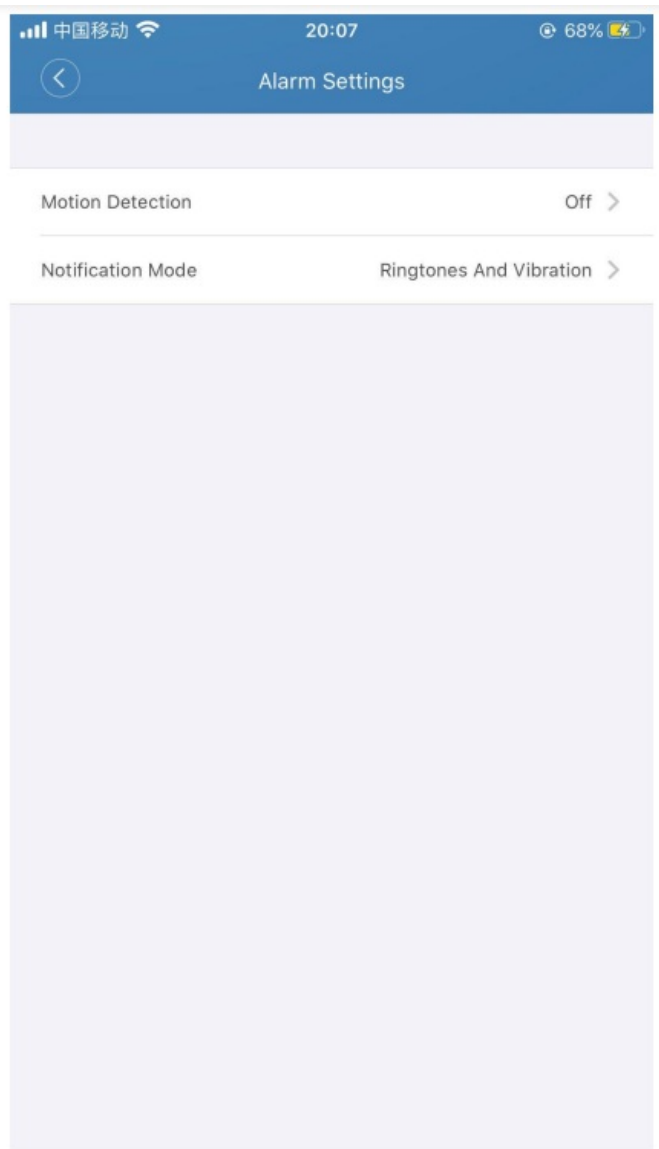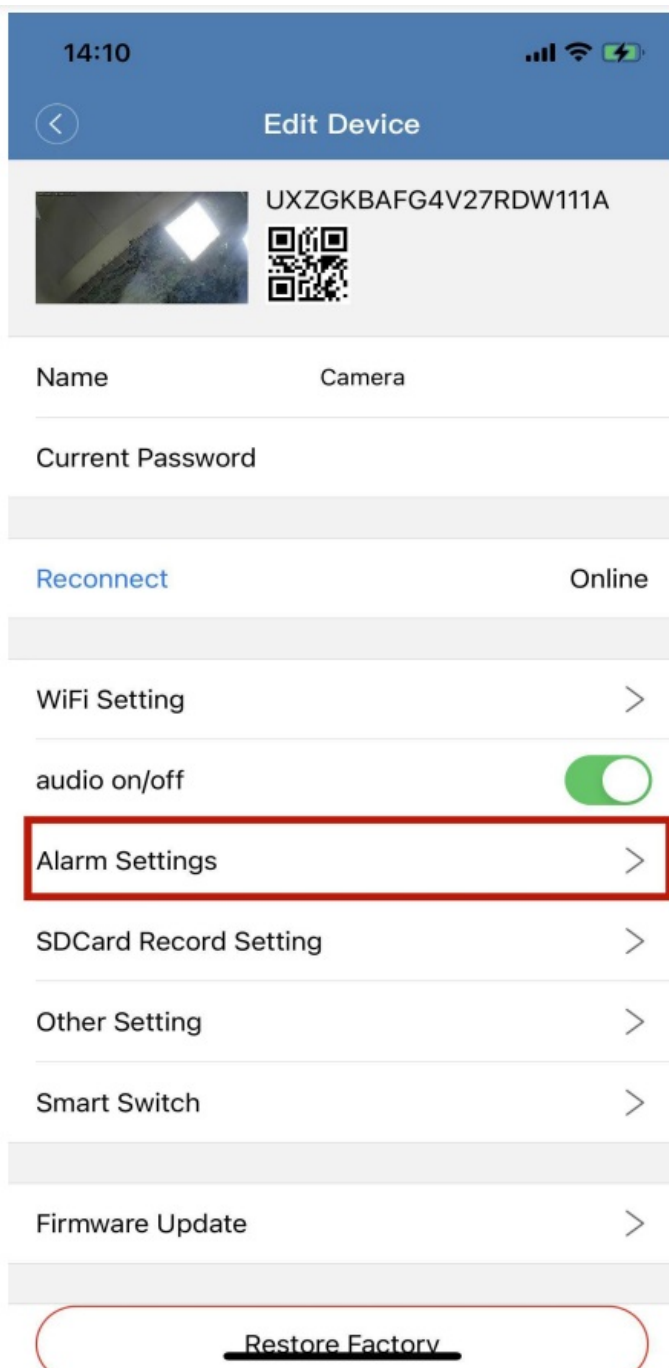
Click the setting button->Choose the "Alarm Setting" to set motion detection.
You can active the motion mode here and choose the levels of motion detection. It has 4 levels of motion(Low, Medium, High, Max)

Please note: After activated the alarm function, If you still can not receive the alerts by phones, please go to your phone setting – find the notification management – Tap the App: Camama -Allow the App to push notification.

SD Card Recording Settings

Click the setting button->Choose the "SD Card Record Setting" to set SD Card. You can active the SD card recording while insert a Micro SD card, you have 4 recording modes to choose (Off, Full time recording, Alarm. recording and Timing Record)

Notes:

This camera support both recording with/without SD card.
A. If without SD card, it shoot videos and saved to your mobile phone.
B. If with SD card, the device recording automatically and save the videos to SD card, and it also saved the recordings to your mobile phone as well.
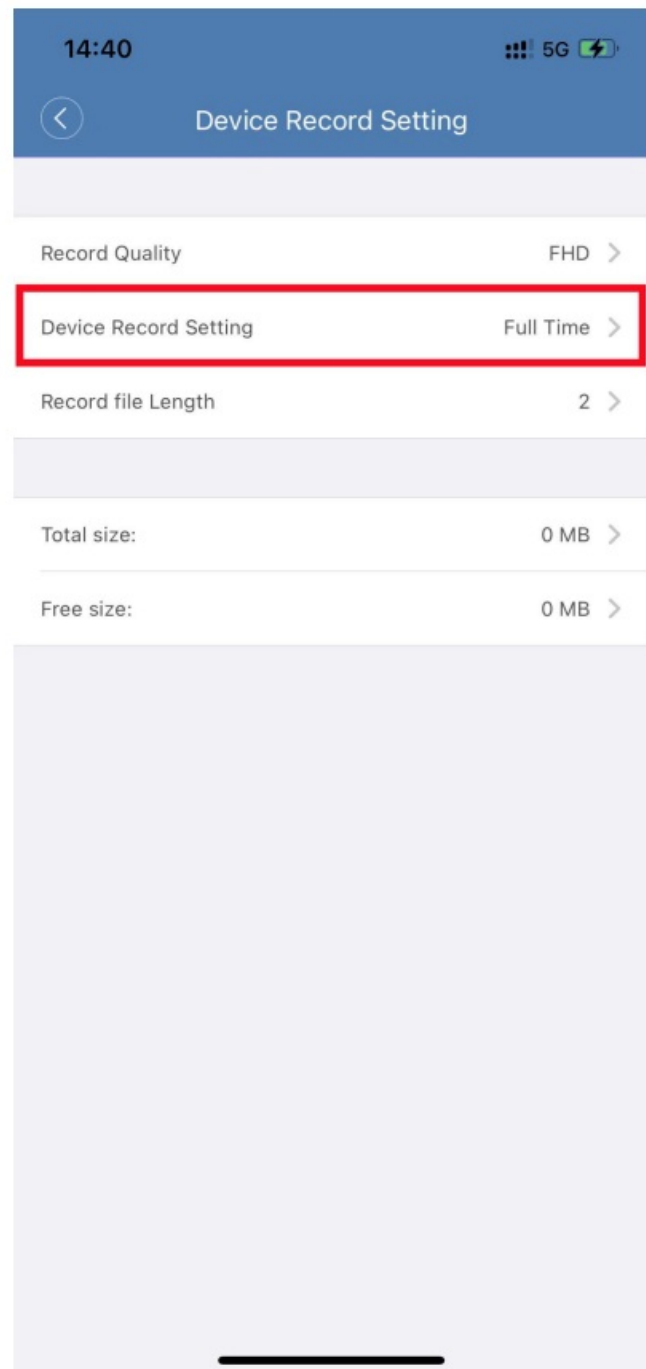
Smart Plug Camera Related Parameters

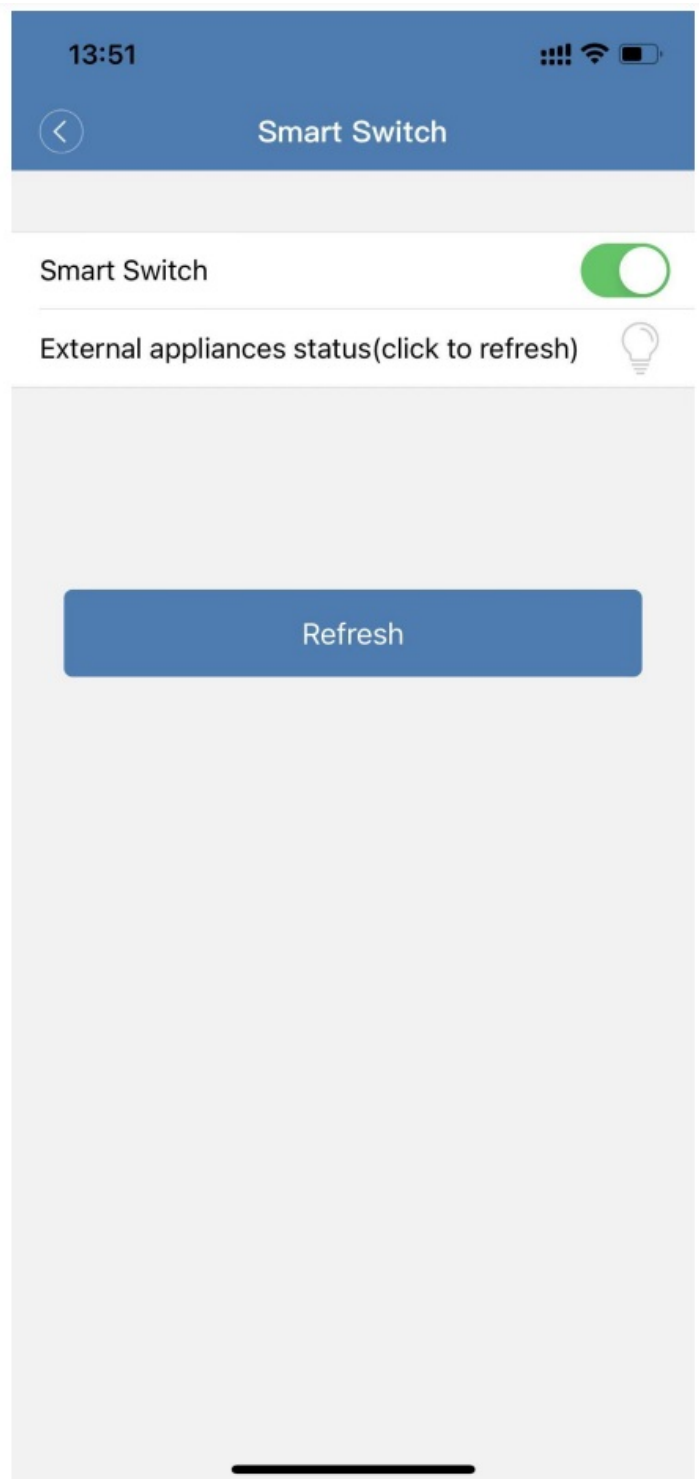|	
Resolution Ratio	4K/2K/1080P
!Video Format	MP4
Frame Number	30
Visual Angle	150 degree
Motion Detection Camera ~hooting	Straight line 6 meters
Compressed Format	H.264
Night Version	s~sM
Recording Range	20 m'
Input	100~24ov, 60HZ, 10A
Output	100~24ov, 60HZ, 10A
!Storage Temperature	-20-80 degree centigrade
Operating Temperature	-10-60 degree centigrade
Operation Humidity	15-85%RH
Memory Card Type	TF card
Player Software	Mainstream player
Mobile Phone Operating System	Android/iOS

Smart Plug Setting

UXZGKBAFG4V27RDW111A

Name	Camera
Current Password	

Reconnect — Online

WiFi Setting >

audio on/off

Alarm Settings >

SDCard Record Setting >

Other Setting >

Smart Switch >

Firmware Update >

Restore Factory

Smart Switch

External appliances status(click to refresh)

Refresh
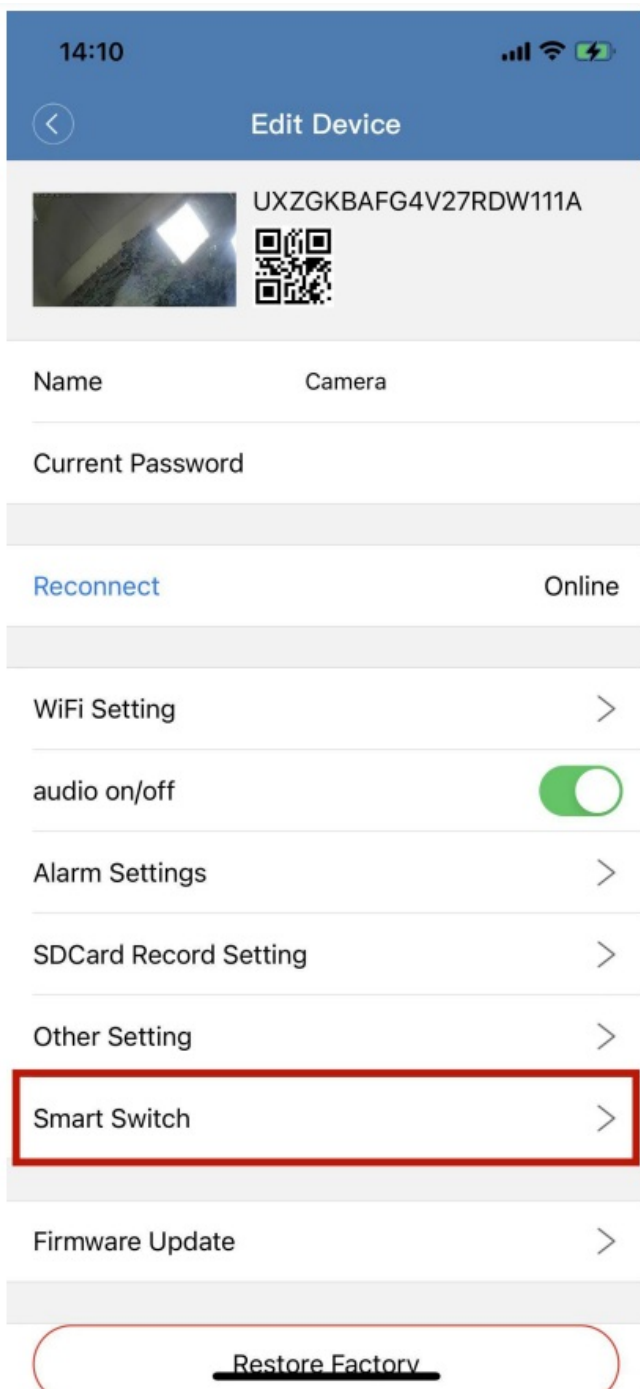
Click the setting button->Smart Switch on APP or press the Smart Plug button on smart plug to tum on/off it. When you turn on the martplug, the smart plug switch indicator will be on.
External appliance status -when a machine is working or using power,the lighting will be tum on green

Please note: The Smart Plug can't carry high-power appliances (No more than 10A), such as air conditioner, Washing machine, water heater and so on.

introduction of Settings Page

1. It is UID number and you can share your device to others base on that.
2. This your current password and you can change it on that directly.
3. Display the current connection status of the camera, offline or online.

4. It is for your Wi-Fi setting, you can find how to connect the Wi-Fi on above instruction.

5. Control the audio during recording and live view.

6. It is for your Alarm setting(Motion Detection), you can find how to do on above instruction.

7. It is for your SD card record setting, you can find how to set your SD card on above instruction.

8. It is other setting of the device. As you see in second picture, it has 5 setting options as below.

   a: Control the LED light, not suitable for this device (1bis APP used for several devices).

   b: Control the security password, you can change your password on it.

   C: Control the timezone, it has all time zones to choose from.

   d: You can format the SD card directly base on it.

   e: You can find the model and version of your device whether it is the latest.

9. It is Smart switch, control the smart plug to turn on or off.
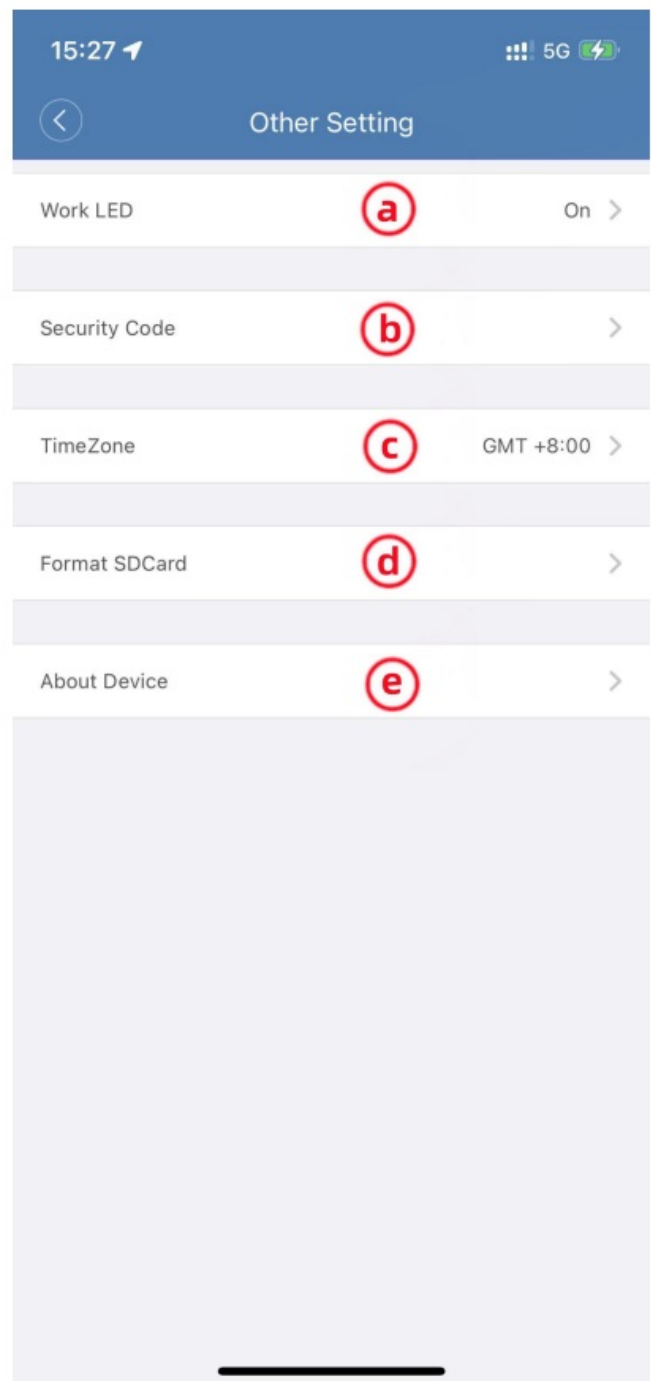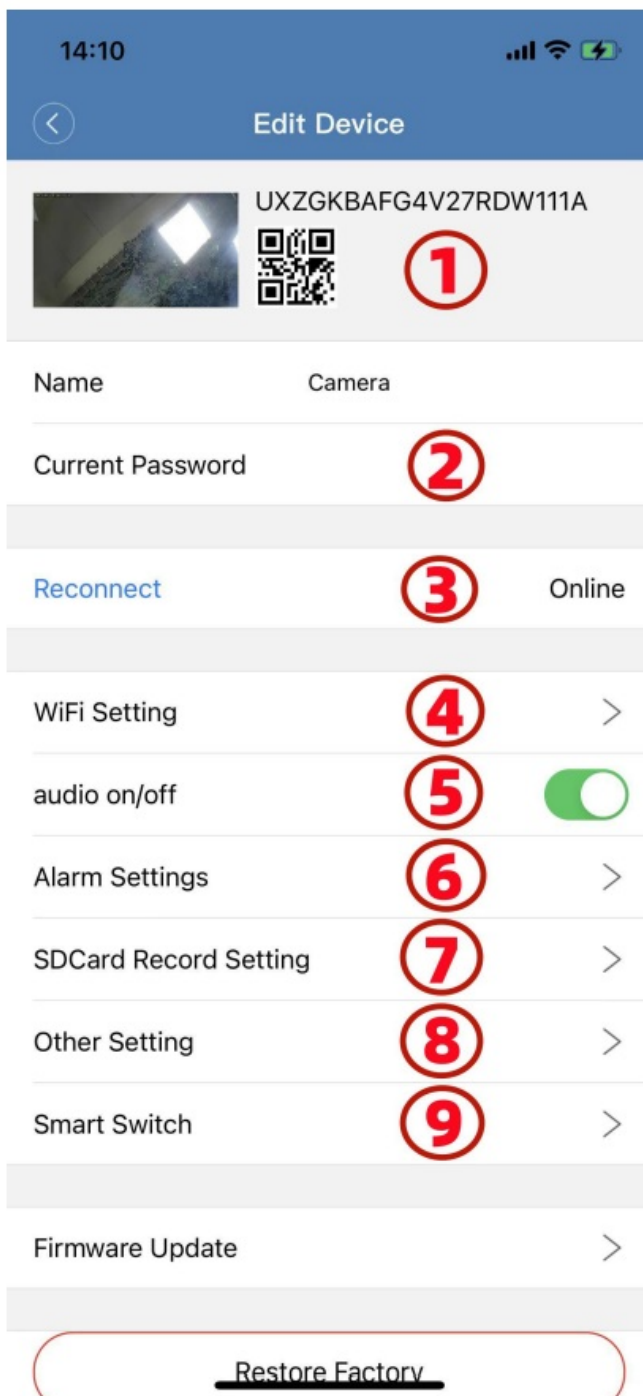
Frequently Question & Answers

What can i do if the camera offline, shut-down or it cannot working?
Please reboot the device to factory settings, then connect the hot-spot signal and do the Wi-Fi configuration again.

What kind of micro SD card is required for recording?
The camera supports 8G-128GB micro SD card. Please use high speed class 10 FAT formatted memory card.

Why can't use my micro SD Card for recording?
You should format the microSD through the App before using. If SD card is not recognized,just remove the card and reinsert it.

Why can't the camera go online?

1. No power connect

2. Check if your router is working properly or not.

3. Weak.WiFi signal

4. Wrong Password while WiFi setting.

Why is remote monitoring not smooth ?
You should choose a suitable resolution to watch according to your internet speed.

Why I can't save to my SD card ?
Please make sure you have tum-on the SD card recording function in App, and the SD card must be formatted at the first time to use it.

If i forgot my password ?
Press the reboot button for 1 Os to restore the device to factory setting, then you have to reconnect the wifi and can set the new passwords.

The Camera makes a clicking noise when it switches from day to night mode, is there any possible to close it?
This device is provided AI CUT technology which can switch night vision function automatically, and increases the distance and definition of night vision. This sound is just caused from the baffie when switching. In fact, this sound is very small and no one would realize that is generated by a cam.era.

Reminder:

The initial password for the camera is **123456**. Please change your own passwords to ensure the security of your camera

If the device cannot be connected, restore factory Settings, Long Press the R key for 10 seconds, and then reconfigure the device.

If any further questions about the device, please send email to below address, we will try our best to fix that.
Mingniao2022@l63.com

MAULTI

Documents / Resources

MAULTI Smart Plug WiFi Camera USER MANUAL	**[MAULTI Smart Plug Switch Smart Plug WiFi Camera](#)** [pdf] Instruction Manual Smart Plug Switch Smart Plug WiFi Camera, Smart, Plug Switch Smart Plug WiFi Camera, Smart Plug WiFi Camera, Plug WiFi Camera, WiFi Camera, Camera

References

- **[User Manual](#)**