Manuals+ — User Manuals Simplified.

MEKO ME20PB Blink Mechanical Keyboard User Manual

Contents

MEKO ME20PB Blink Mechanical Keyboard

Welcome to your meko Blink. Please charge before first use.
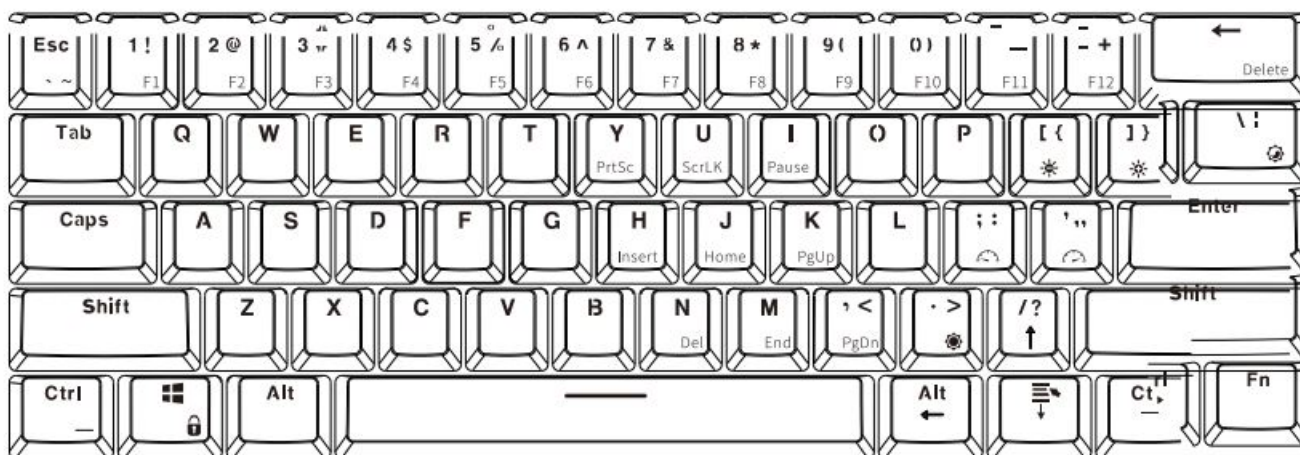
Specification

Dimensions	289 x 103 x 39mm	**Supported Systems**	
Keycaps	61 ABS Double Shot	Windows XP - 10	
Backlighting	SMD RGB LED	Mac OS	
USB	Type C	Linux	
Hotswap	Yes	iOS / Android	
Wireless / BT	Yes		

Backlight Settings

Fn + \ cycle through 17 backlight effects
Fn + . cycle backlight colors (RGB version only)
Fn + [increase backlight brightness
Fn +] decrease backlight brightness
Fn + ; descrease backlight speed
Fn + ' increase backlight speed

Special key functions

Fn + A switch to Windows OS mode
Fn + S switch to Mac OS mode

Fn + Esc	`~	Fn + 6	F6	Fn + =	F12	Fn + j	Home
Fn + 1	F1	Fn + 7	F7	Fn + backspace	Del	Fn + k	PgUp
Fn + 2	F2	Fn + 8	F8	Fn + y	Prtsc	Fn + n	Del
Fn + 3	F3	Fn + 9	F9	Fn + u	Scrlk	Fn + m	End
Fn + 4	F4	Fn + 0	F10	Fn + i	Pause	Fn + ,	PgDn
Fn + 5	F5	Fn + -	F11	Fn + h	Ins		

Example   [1! F1] =1   [Fn] + [1! F1] =F1   [Shift] + [1! F1] =!

Fn + Enter turn on/off arrow key function
Fn + Window lock/unlock windows key

Multimedia functions for Mac
Mac OS only. F1 – F12 must be first function. See Function Locking

1! F1	2 @ F2	3 # F3	4 $ F4	7 & F7	8 * F8	9 (F9	0) F10	‾_ F11	= + F12
☼	☀	⊟☐	⠿	◄◄	►❙❙	►►	◄	◄⟩	◄⟩⟩

Function Locking

Fn + Ctrl (left) (1st time) activate secondary function of combination keys (excludes arrow keys).
Fn + Ctrl (left) (2nd time) return y/u/i/h/j/k/n/m/, to primary function.
Fn + Ctrl (left) (3rd time) return all keys to primary function.

Bluetooth / USB
To use in wired mode
Set switch on the bottom of Blink to OFF position & connect the USB cable.

To use in wireless mode
Set switch on the bottom of Blink to ON position & disconnect the USB cable. Remember to pair your Blink before normal wireless use.
Your Blink can store up to 3 Bluetooth devices at a time.

Switch BT Device quickly press FN + Q / W / E
Pair BT Device quickly press FN + Q / W / E hold FN + Q / W / E

Connecting Bluetooth devices

1. Make sure switch on the bottom of keyboard is set to ON.
2. Press and hold FN + your choice of Q, W, or E for 3 seconds. The key you selected will flicker continuously signalling it has entered pairing mode.
3. Open your device's BT search mode to connect the device.
4. The key will stop flickering upon a successful connection.

Charging

1. The space bar will flash 3 times when plugged first plugged in.
2. When the space bar flashes 5 times continuously, the battery is full.
3. If there is no operation for 3 minutes, your Blink will turn off automatically to save power. Press any key to wake it up.

Documents / Resources

MEKO ME20PB Blink Mechanical Keyboard [pdf] User Manual
ME20PB, Blink Mechanical Keyboard