Neat Bar Collaboration Bar Designed for Zoom with Neat Pad User Manual

Contents

1 Neat Bar Collaboration Bar Designed for Zoom with Neat Pad
2 Simple setup
3 Neat Bar
4 Neat Pad
5 Mounting & releasing
6 Size & weight
7 Setup & connectivity
8 Documents / Resources
8.1 References
9 Related Posts

Neat Bar Collaboration Bar Designed for Zoom with Neat Pad

Simple setup

All you need is in the box, including mounts, cables, and clear instructions. So it’s easy for anyone to install and set up, above or below one or two screens.

Wall mount

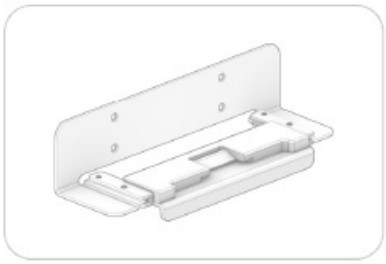

Screen mount

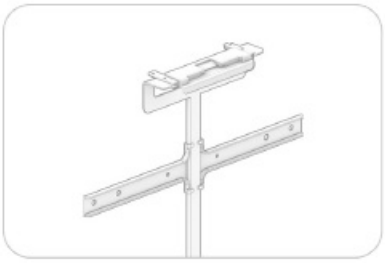

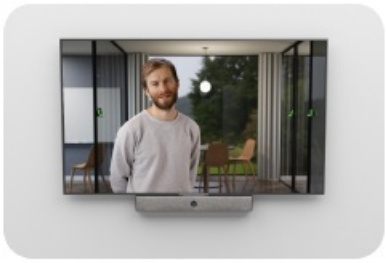

Table stand

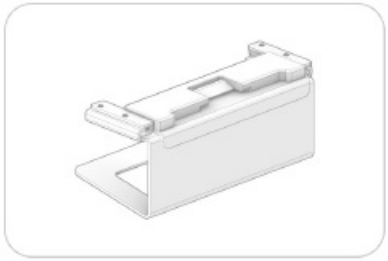

Neat Bar

Neat Bar comes with everything you need to get started, including cables, wall mount, screen mount and table stand.

In the box

- Neat Bar: All-in-one audio: 1 × 2 mm hex key for the mount adapter
- and video device: 4 × Mf screw (0.94 in / 24 mm) for VESA mount
- HDMI cable: 6.5ft (2m): 4 × Mf screw (0.94 in / 24 mm) for VESA mount
- Ethernet cable: 9.8ft (3m) Power cord: 9.8ft (3m): 2 × spacer to secure parallel TV mount
- Mount adapter, wall mount, screen mount, and table stand: 1 × 5 mm hex key for the screen mount

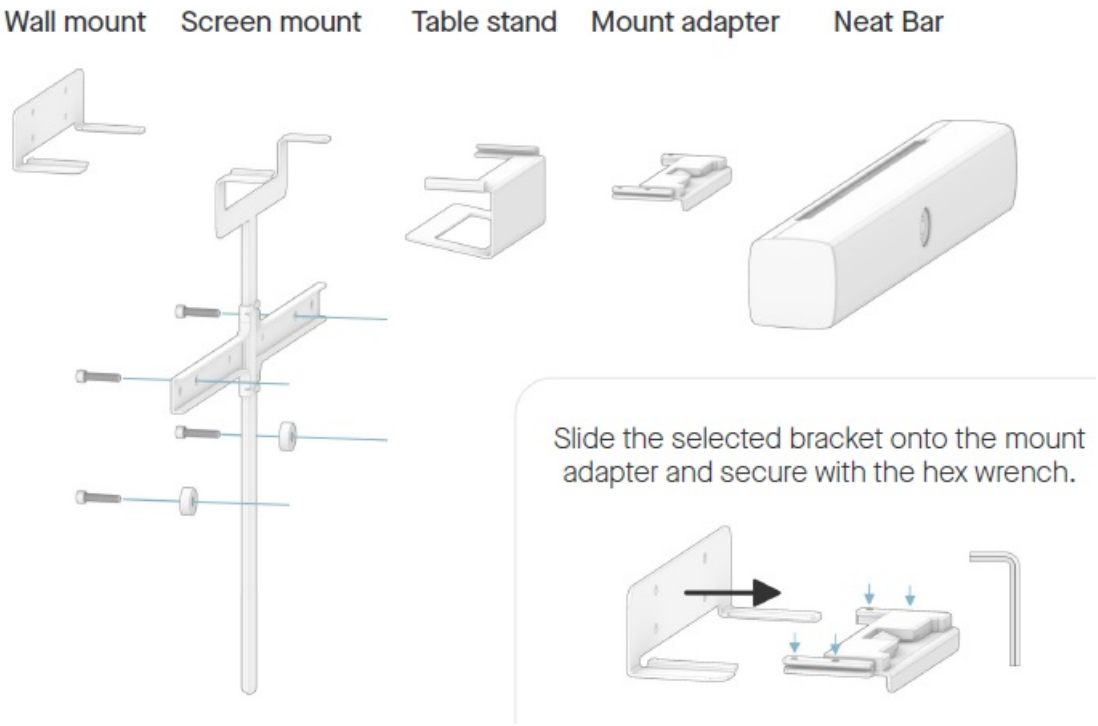

Screws for mounting to the wall are not included. Mounting on a wall should only be performed by qualified personnel in line with applicable facility and state regulations. The wall and the mounting equipment must safely withstand the load of the product.

Neat Pad

Neat Pad works as a Controller for Neat Bar and can also be configured as a Scheduling Display for the Meeting Room. It comes with everything you need to get started, including cables and mounting options.

In the box

- Neat Pad: 8-inch touch screen: 4 × M% screw (0.30 in / 7.5 mm) for the wall mount
- 2 × Ethernet cable: 9.8!t (3m) + 16.4!t (5m): 3 × M% screw (0.19 in / 4.7 mm) for the side mount
- PoE power adapter: 1 × 2.5 mm hex key for the adapters
- Mount adapter, side mount and wall mount: 1 × 2 mm hex key to secure Neat Pad o the wall mount

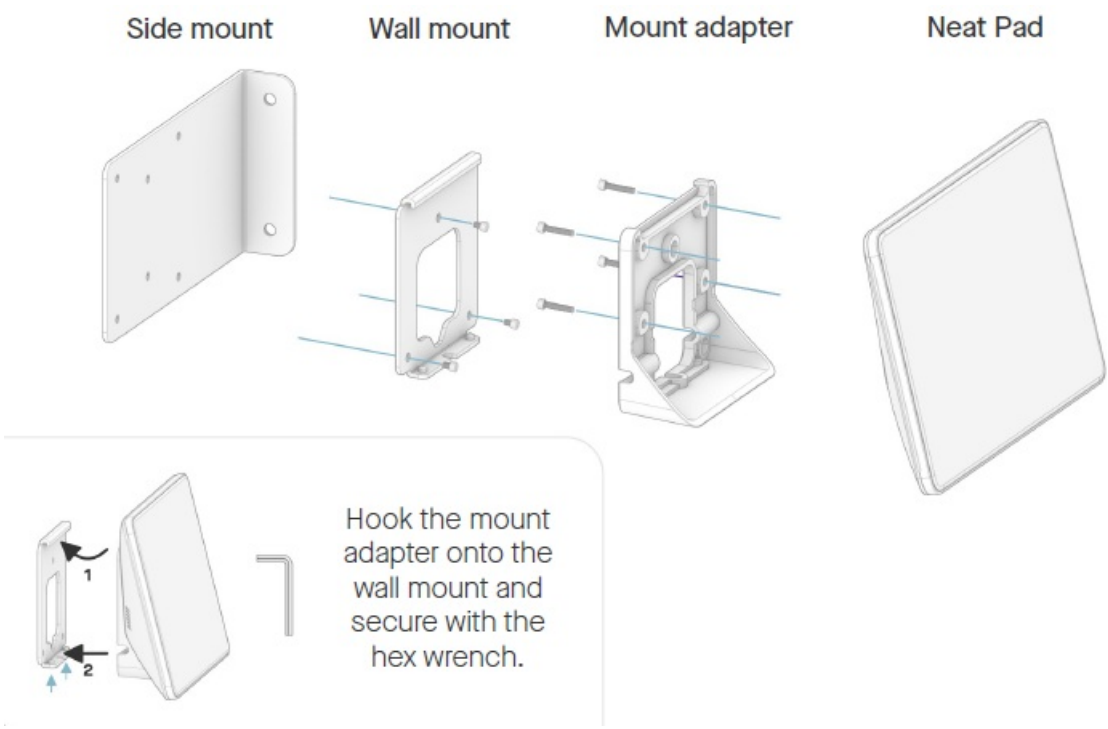

Screws for mounting to the wall are not included. Mounting on a wall should only be performed by qualified personnel in line with applicable facility and state regulations. The wall and the mounting equipment must safely withstand the load of the product.

Mounting & releasing

Mounting

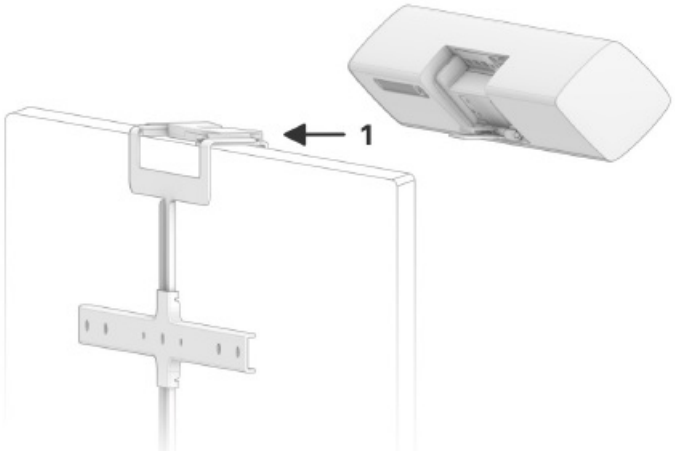

Slide Neat Bar onto the selected mounting option (1). When fully inserted tilt Neat Bar back to horizontal and check if it is secure by carefully pulling it towards you.

Releasing

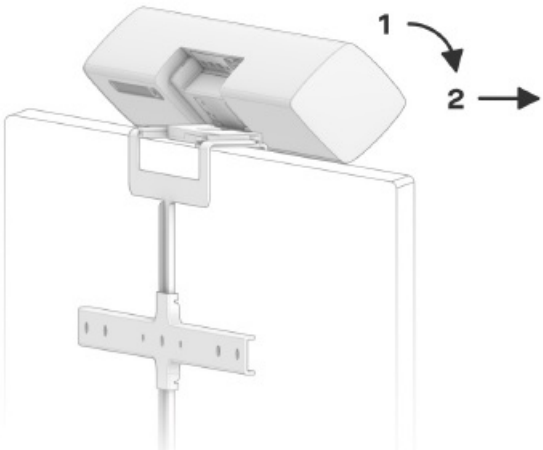

To release Neat Bar from the selected mounting option, tilt the unit to maximum tilt (1) and carefully slide the unit towards you (2).

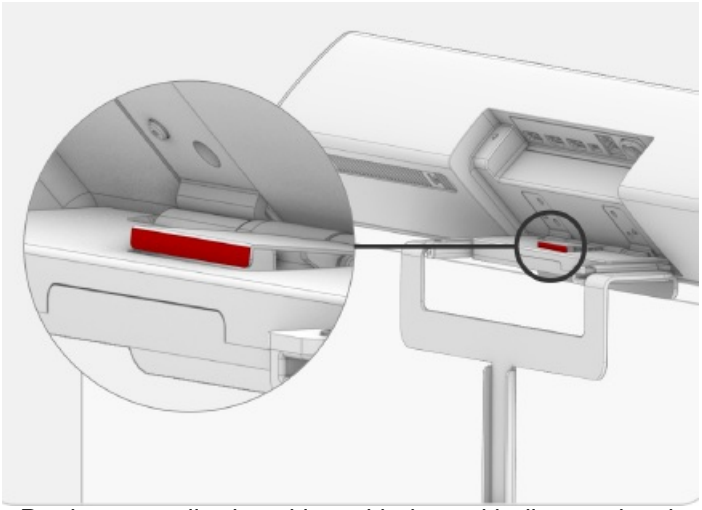

Warning: Do not leave Neat Bar in a max tilted position with the red indicator showing as it is not secured by the lock spring.

Size & weight

Neat Bar

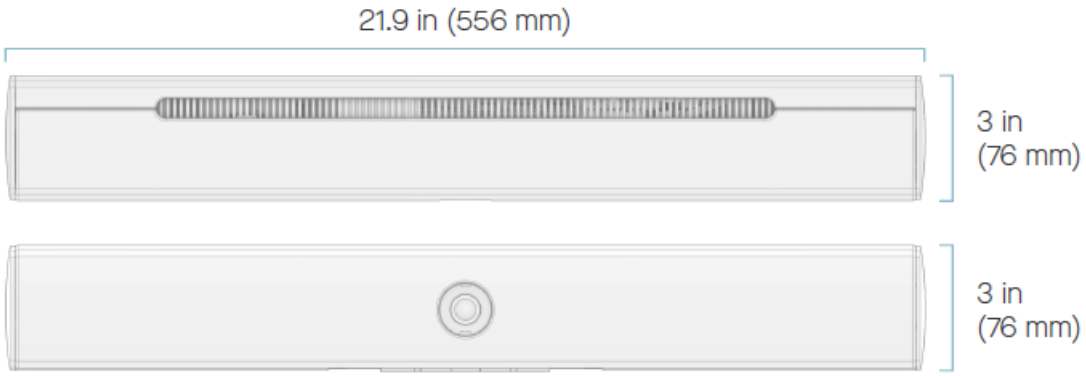

- Width: 21.9 in (556 mm)
- Height: 3 in (76 mm)
- Depth: 3 in (76 mm)
- Weight: 3.75 pounds (1.7 kg)

Neat Pad

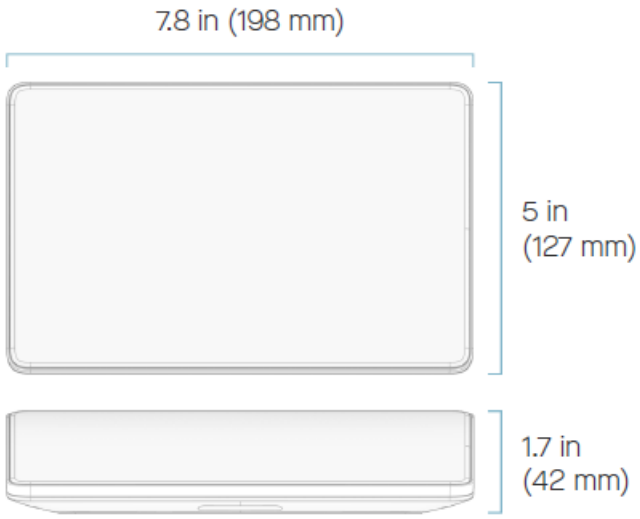

- Width: 7.8 in (198 mm)
- Height: 1.7 in (42 mm)
- Depth: 5 in (127 mm)
- Weight: 1.15 pounds (520 g)

Setup & connectivity

Setup
Use the provided cables to set up Neat Bar.
Connect the cables according to the illustration. Cables marked are included. Cables marked are optional and not required for basic use of the system.

Requirements for a complete setup
Display Internet connection Video service

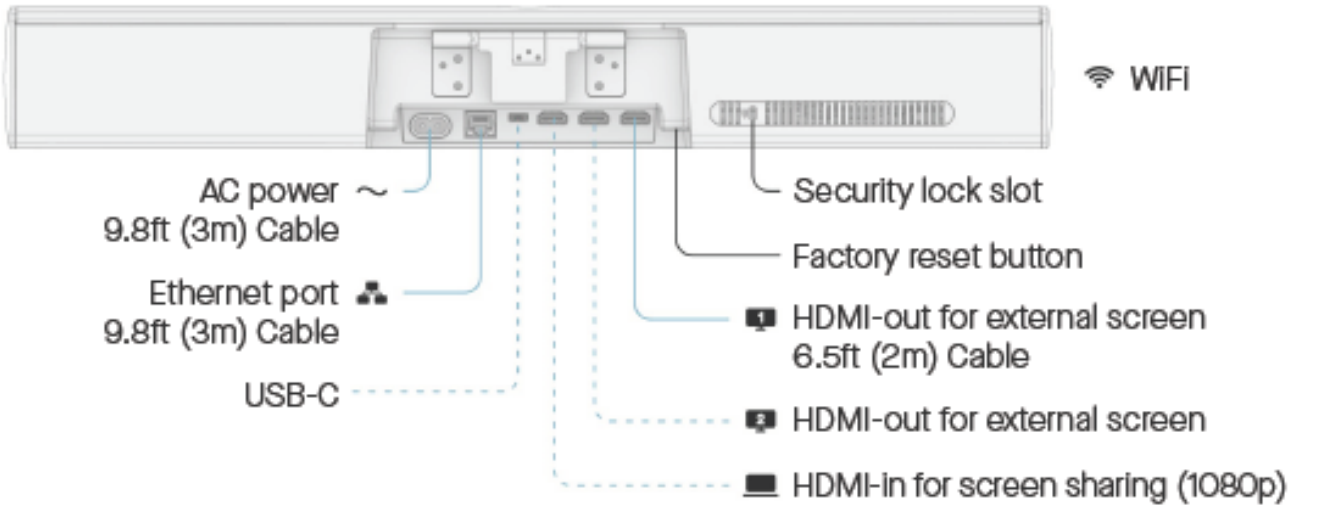

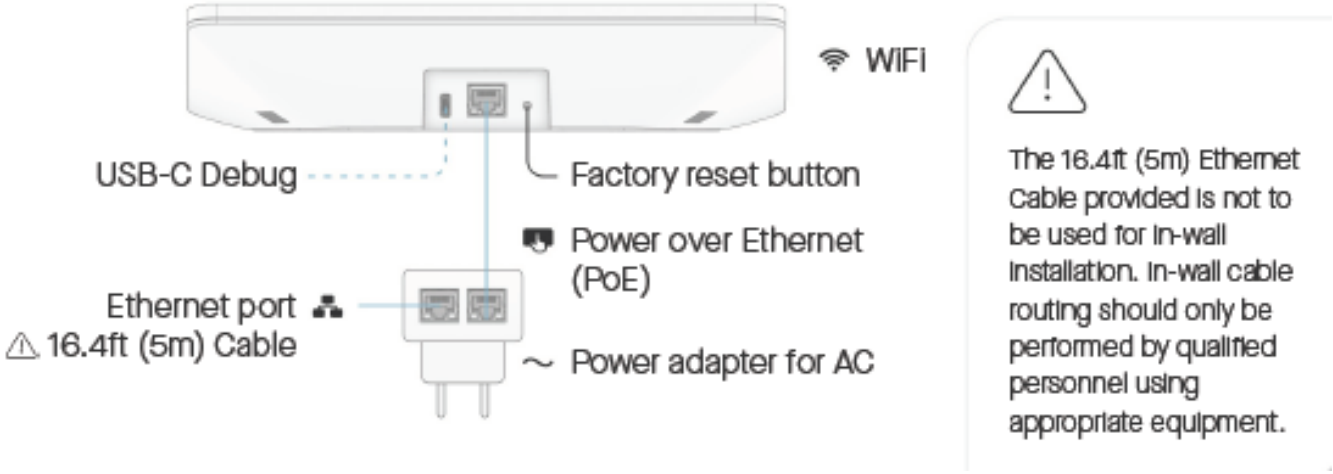

Environmental Requirements
Ambient operating temperature:
32° to 95° F (0° – 35° C)
Storage temperature: 5° – 149° F (-15° – 65° C) Relative humidity: 20% to 80%

Additional Product Information
https://neat.no/bar
Neat Bar and Neat Pad – User Manual rev10

Documents / Resources

	neat Neat Bar Collaboration Bar Designed for Zoom with Neat Pad [pdf] User Manual Neat Bar, Collaboration Bar Designed for Zoom with Neat Pad, Neat Bar Collaboration Bar Designed for Zoom with Neat Pad

References

- Neat Bar - Neat