REXING V5 Dash Cam User Guide

REXING V5 Dash Cam

Contents

Overview

Thank you for choosing REXING! We hope you love your new product as much as we do.
If you need assistance, or have any suggestions to improve it, please contact us. You can reach us via **care@rexingusa.com** or call us at (877) 740-8004. Our support team will respond you as soon as possible.

Always a surprise in Rexing. Check us out here.
https://www.facebook.com/rexingusa/
https://www.instagram.com/rexingdashcam/
https://www.rexingusa.com/support/registration/
https://www.rexingusa.com/support/product-support/

What's in the box

1. Rexing VS Dashboard
   Camera
2. Car Power Connector
   (12ft)
3. M Adhesive Mount
4. USB Cable
5. User Manual
6. Safety Guide
7. Cable Management Tool

1.

2.

3.

4.

7.

5.

REXING®

V5
Quick Start Guide

- 🇬🇧
- 🇫🇷 Guide de démarrage rapide de la
- 🇮🇹 Guida di avvio rapido
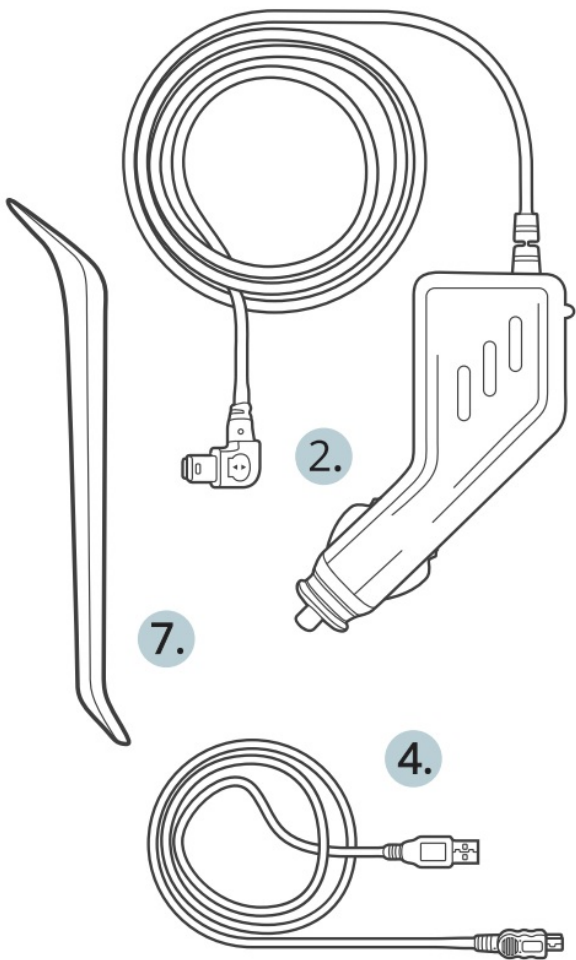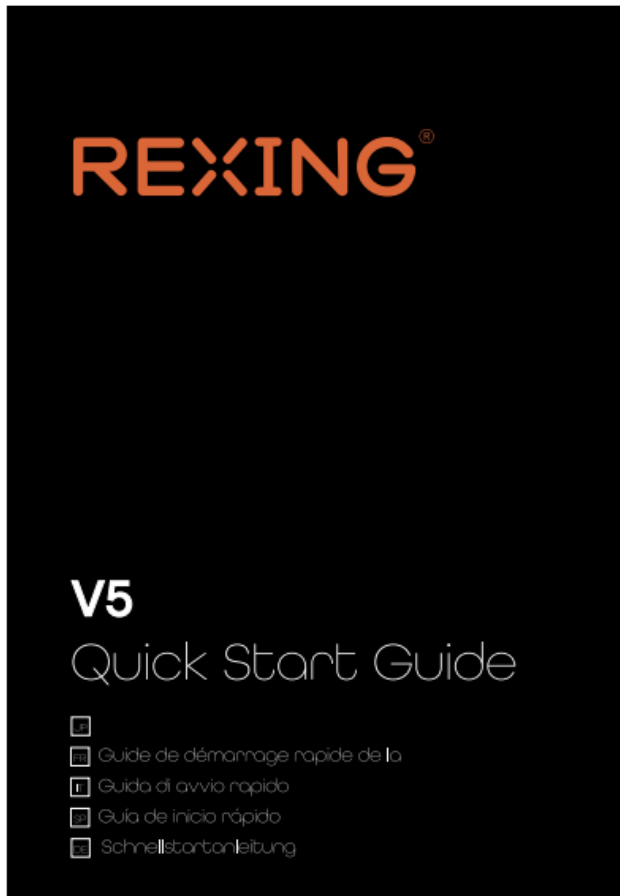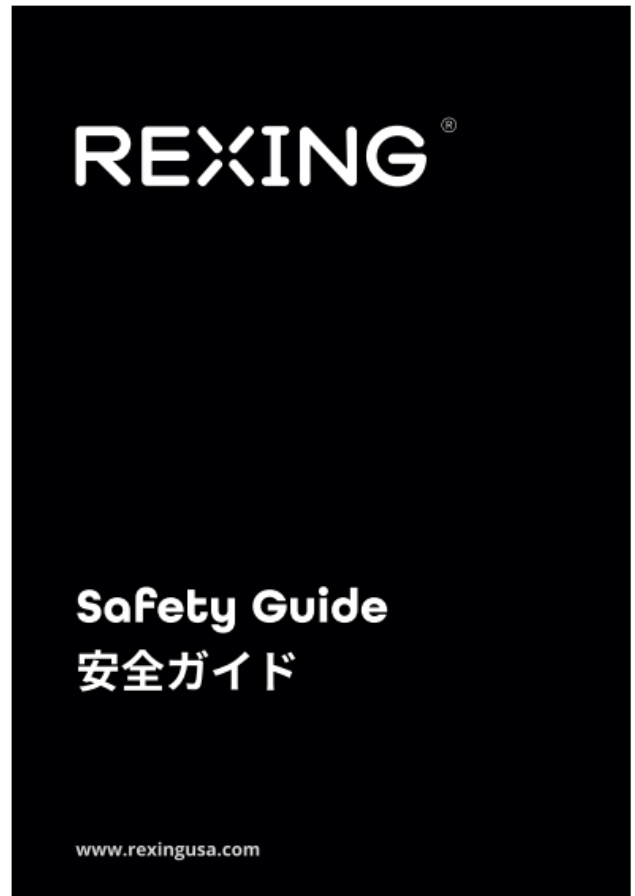- 🇪🇸 Guía de inicio rápido
- 🇩🇪 Schnellstartanleitung

6.

REXING®

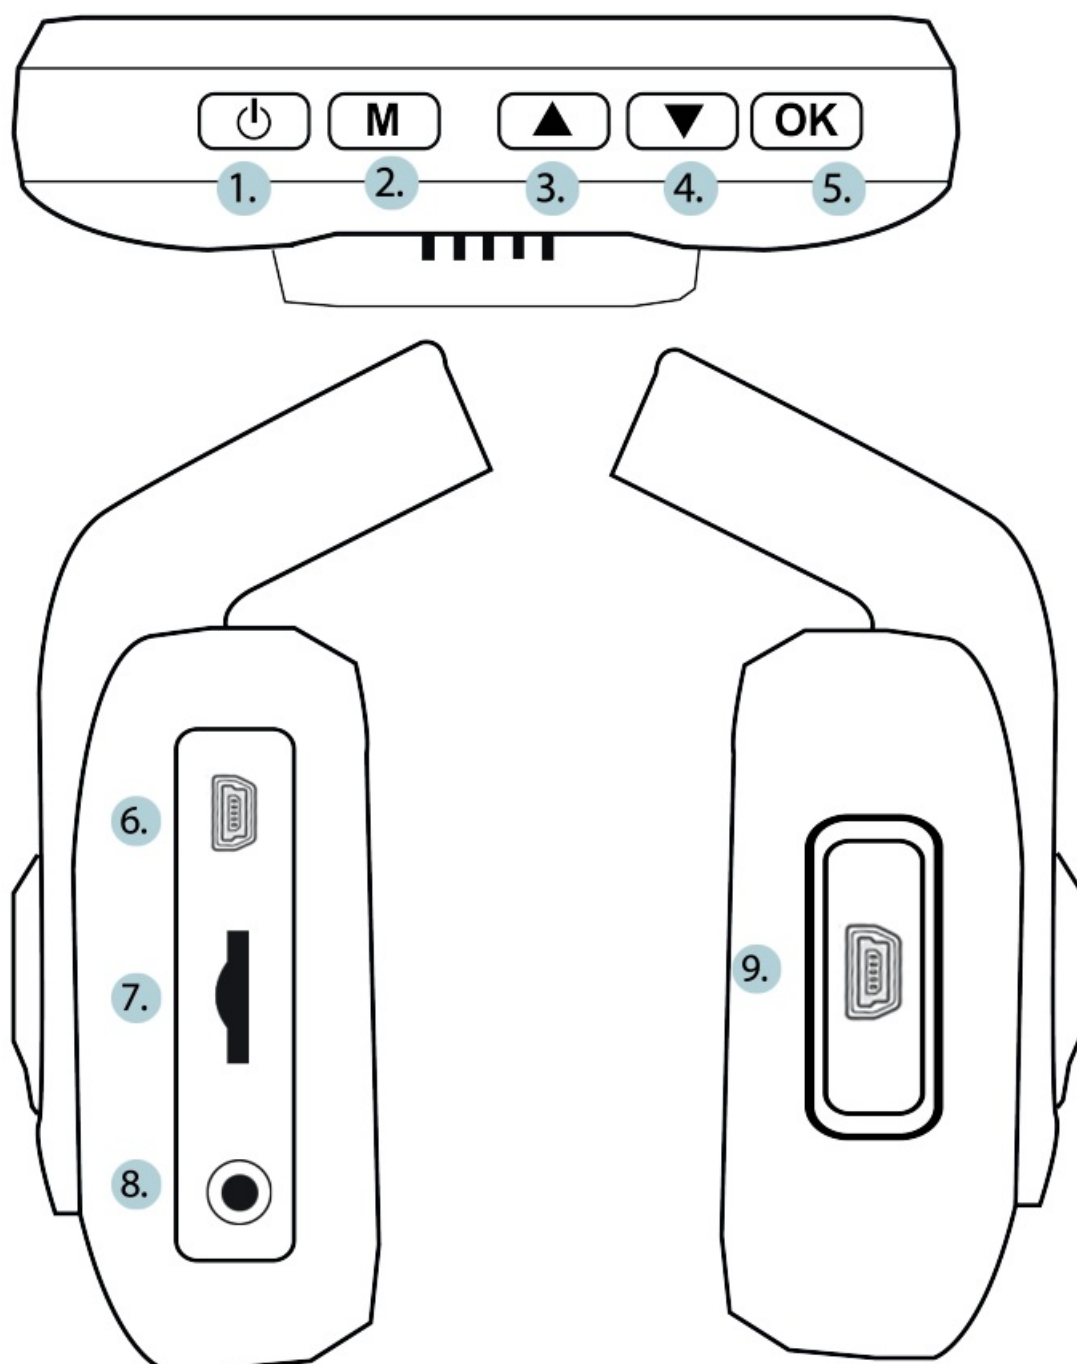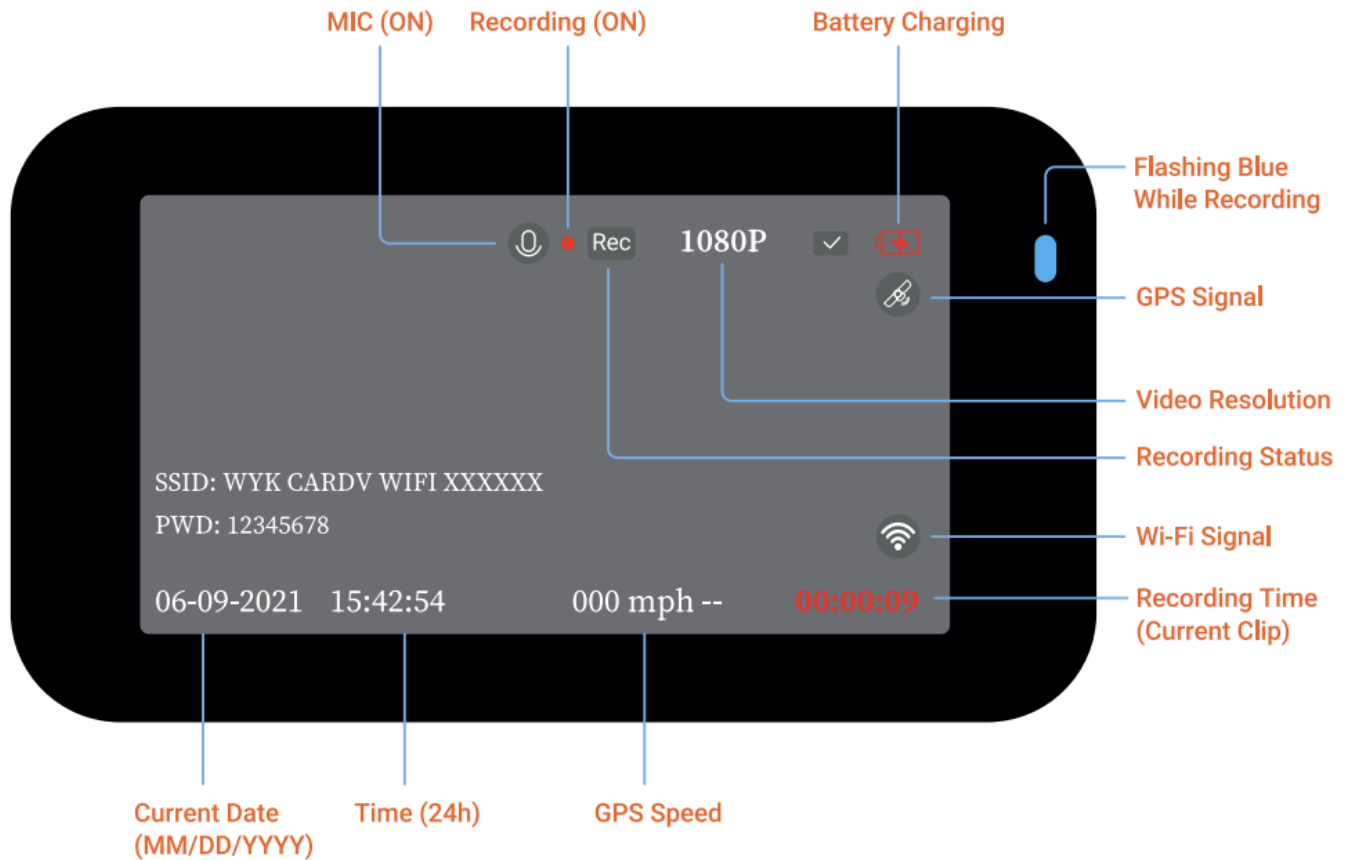Safety Guide
安全ガイド

www.rexingusa.com
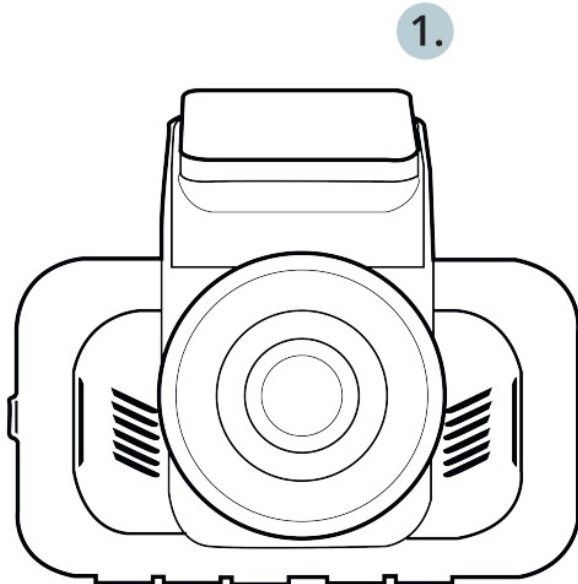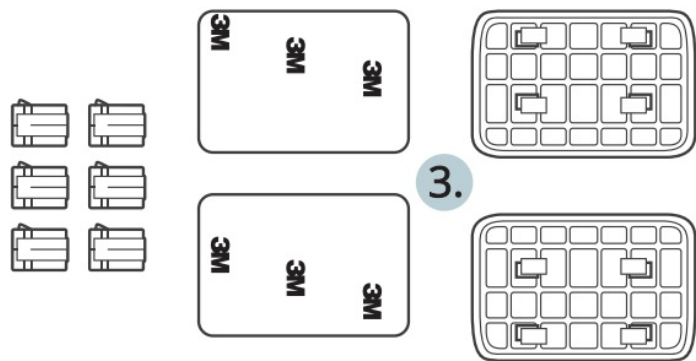
Camera Overview

1. Power Button/ Screen Toggle Button
2. Menu Button/ Mode Button
3. Up Navigation Button/ Emergency Lock Button
4. Down Navigation Button
5. OK (Confirm) Button / Record Button
6. USB Charging Port
7. Micro SD Card Slot
8. Rear Camera Port (rear camera sold separately)
9. Cabin Camera Port (cabin camera sold separately)

Screen Icons

MIC (ON) Recording (ON) Battery Charging

Flashing Blue While Recording

GPS Signal

Video Resolution

Recording Status

Wi-Fi Signal

Recording Time (Current Clip)

SSID: WYK CARDV WIFI XXXXXX
PWD: 12345678

06-09-2021   15:42:54   000 mph --   00:00:09

1080P

Rec

Current Date (MM/DD/YYYY)

Time (24h)

GPS Speed

Installation

Step 1 Install the Dash Cam

Place the 3M tape on the included mount and properly orient the Mount square to the roof and hood line of the vehicle. Important! Ensure the T-interlock on the Mount is oriented in the correct direction.
Firmly press the Mount onto the windshield. Wait at least 20 minutes before mounting the camera.
On the illustration orient the mount as shown.
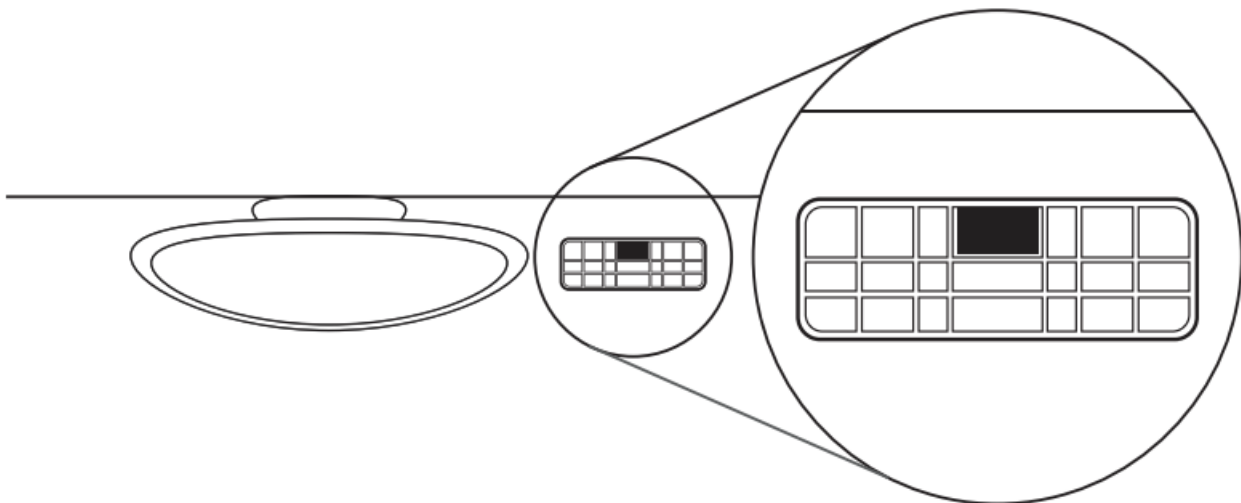
Step 2: Insert the memory Cord

The Rexing VS accepts [Class 1 0/UHS-1 or higher] Micro SD memory cards up to 256GB. You will need to insert a memory card before you can begin recording. Before inserting or removing a memory card, first ensure you've powered down the device. Gently push the memory card in until you hear a click, and allow the spring release to push the card out.
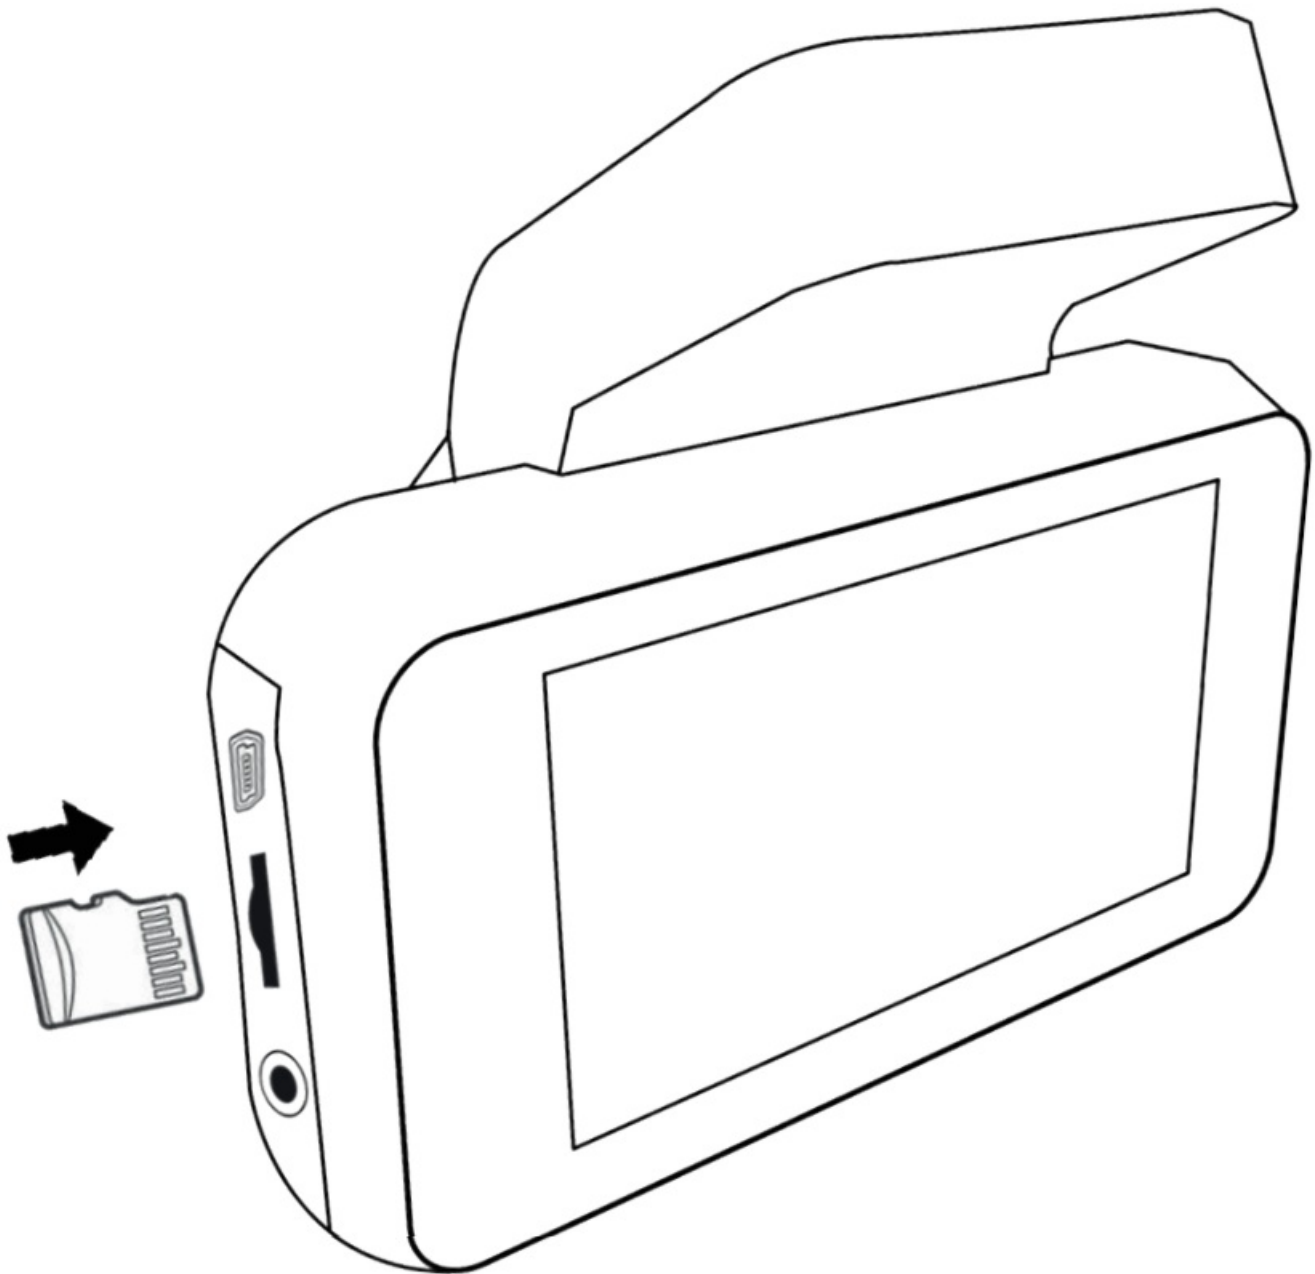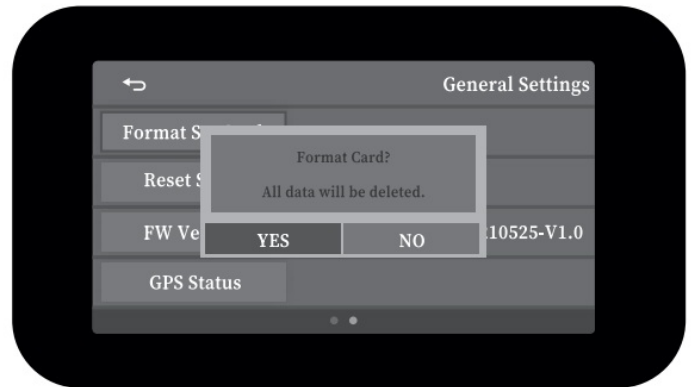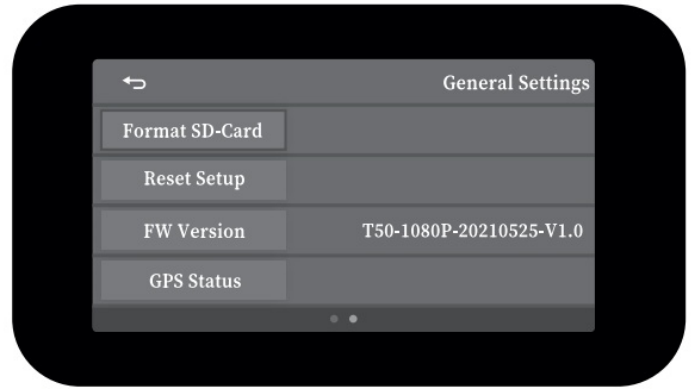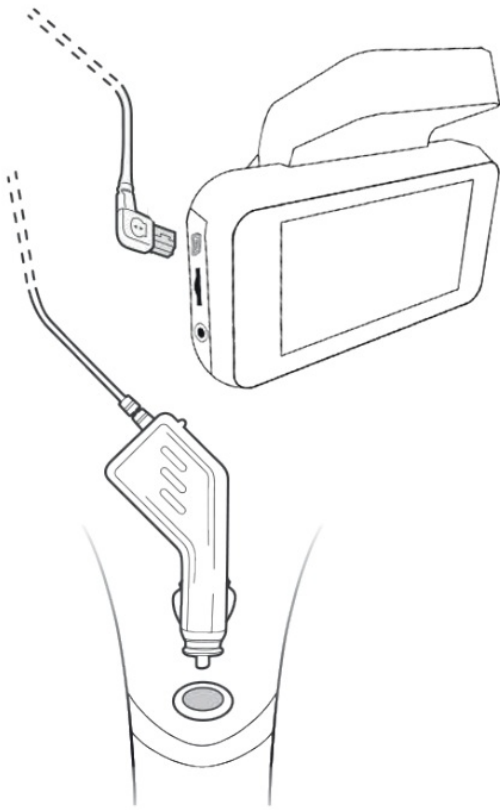
Step 3: Power the Camera and Format the memory Card

Power the camera by connecting the charger to the car cigarette lighter and camera. To ensure the VS records to your memory card properly and without error. Before you start using a new memory card, you must format the card within the camera using the format function. Always backup important data stored on the memory card before formatting.

To format the memory card, make sure you have inserted your memory card, then turn on the device by connecting to a power source. Press OK to stop recording. Then press the MENU button twice to enter the

System Setup Menu. Use the ▲ and ▼ buttons and go to the Format setting. Press the OK button to confirm the selection.

You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin recording automatically the next time it is powered on.

General Settings

Format SD-Card	
Reset Setup	
FW Version	T50-1080P-20210525-V1.0
GPS Status	

• •

General Settings

Format S...	
Reset S...	Format Card?
	All data will be deleted.
FW Ve...	10525-V1.0
	YES NO
GPS Status	

• •

Step 4 : mount the Rear Camera / Cabin Camera

⚠ Rear camera or Cabin camera need to purchase separately.

Mount the rear camera/cabin camera as shown below. Use the provided rear camera cable to connect the rear camera to the front camera.
You can attached the cabin camera to front camera directly. You can connect all three channels together.
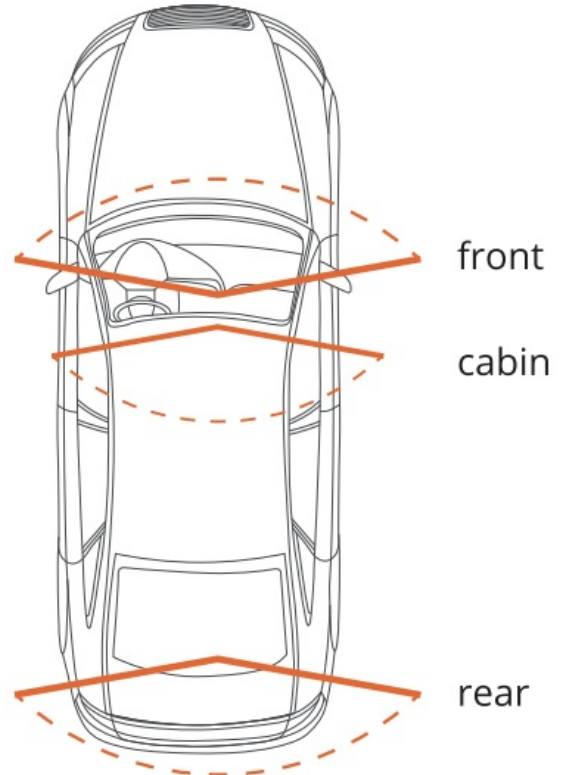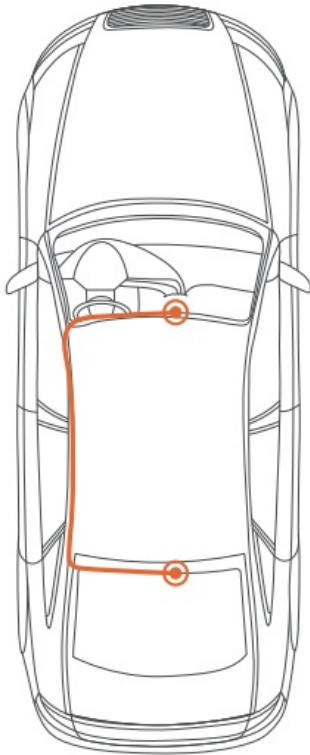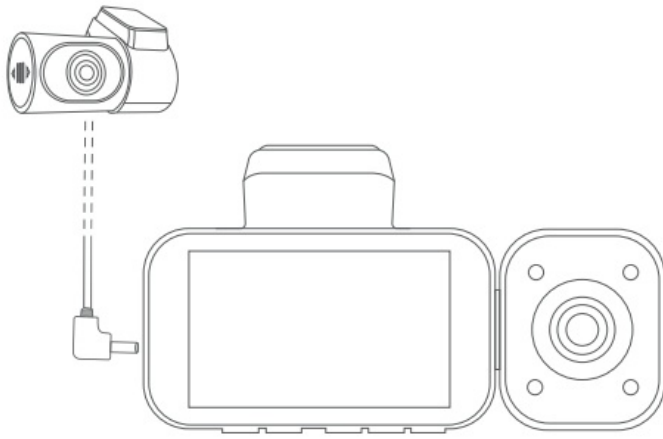
Step 5: Installing the Camera onto the Windshield

Place the camera on the mount and carefully route the power cable around the windscreen and tuck in under the trim. Plug the Car Charger Cable into a 12V DC power outlet or the car cigarette lighter.
Connect car charger to the camera. The camera will auto-start recording once powered on.
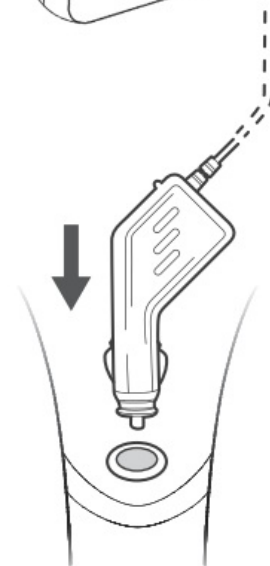
Route power cable to the Dashcam
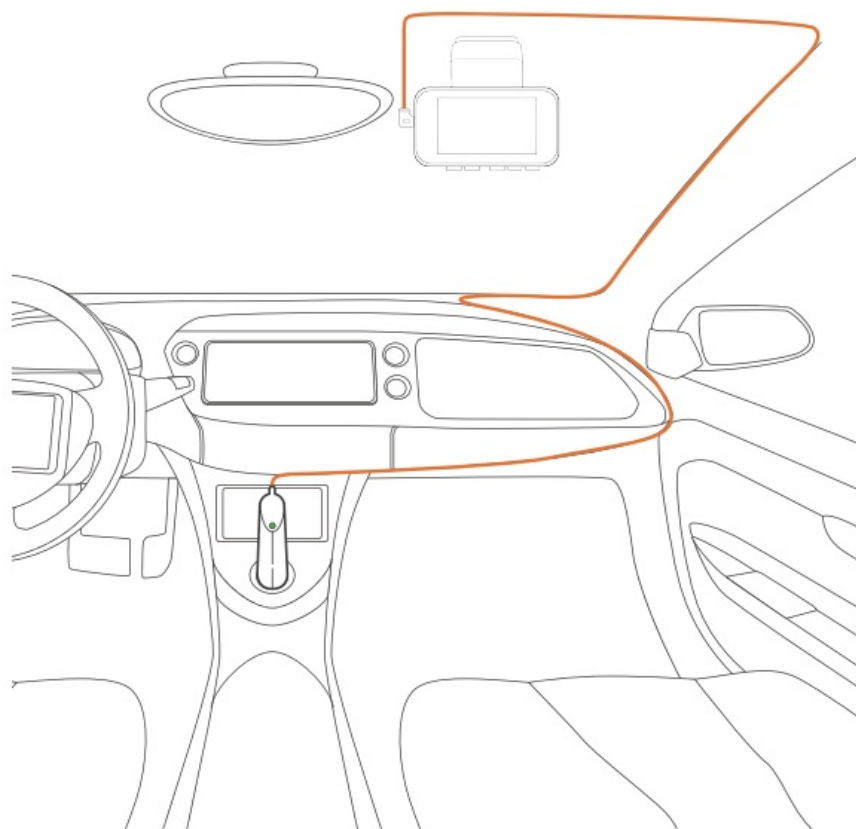
Plug Mini USB Connector to the Dashcam
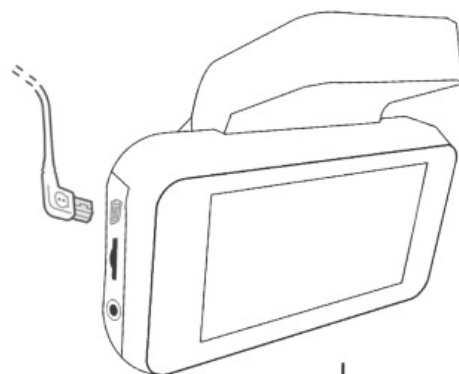
Plug charger into power outlet or cigarette lighter

Basic Operation

Device Power

The device is automatically powered on when plugged into a 12V accessory socket or cigarette lighter and received a charge (i.e.: the vehicle is started).
To turn the device on manually, press and hold the Power button until the welcome screen appears.
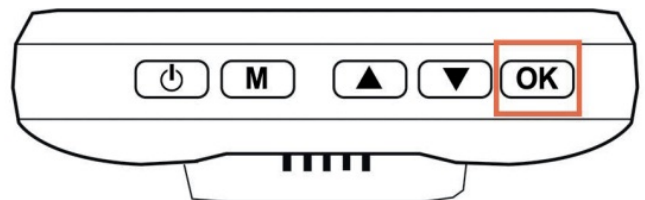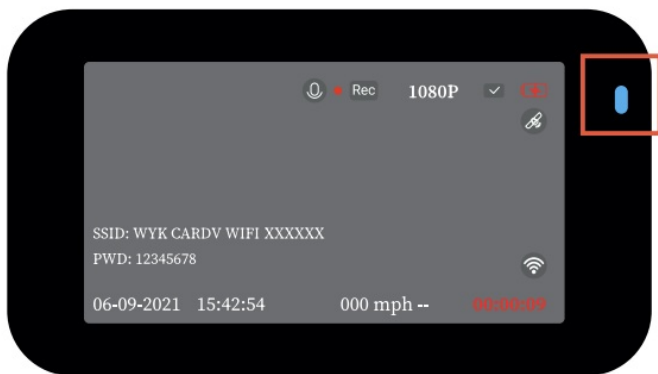The camera will automatically start recording when power on.
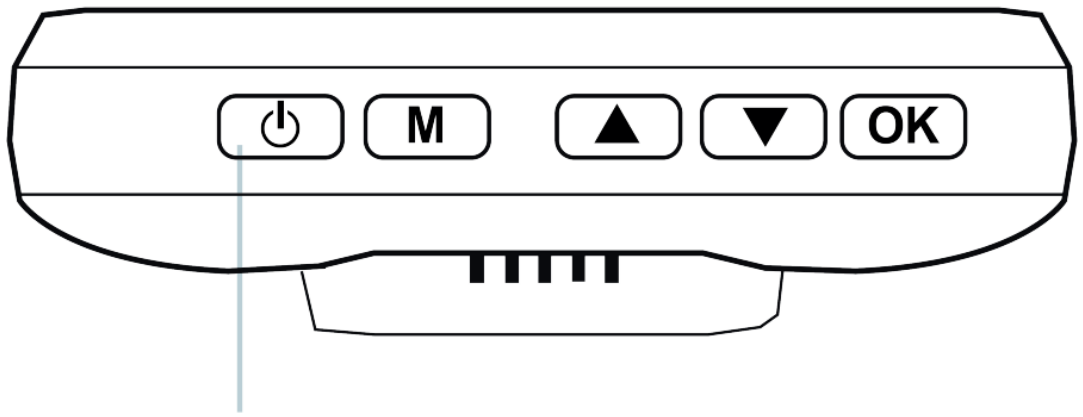
Press and hold the Power
button to turn the device on
manually

menu Settings

Power the camera On. If the camera is recording, press the OK button to stop recording.
Press the MENU button once to enter the Video Settings.
Press the MENU button twice to enter the System Settings (Set up).

Video Recording

The camera will automatically start recording when the device receives charge. The LED lights and red dot will blink device when recording. Press the OK button to stop recording .

The camera automatically
starts recording when
powered on

EMR mode

To use the Emergency Record Mode, hold the ▲ button to manually record a 20 second video that is automatically saved and locked.
View EMR recordings by pressing the menu/playback button.
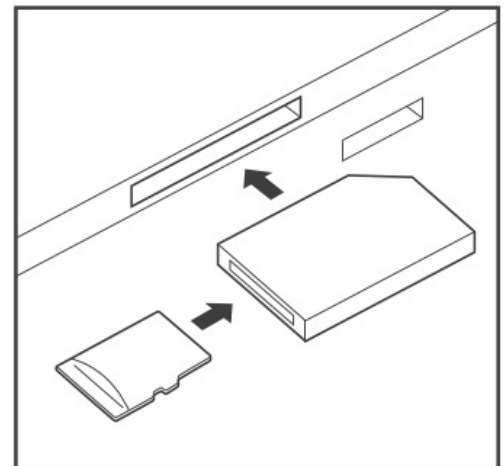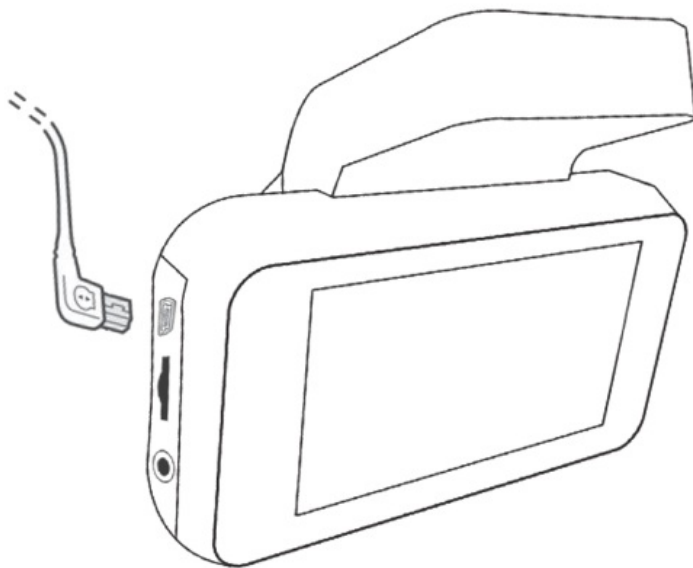
Video Playback

Playback of videos can be done on the device or a computer.

To playback a video on the device, hold the ▼ button to enter Playback mode. Use the ▲ and ▼ buttons to toggle to the desired video. Press the OK button to play.

During playback use the OK (pause), ▲ (rewind) and ▼ (fast forward) buttons to control the video playback.

To playback a video on the computer either use an SD card adapter or connect the device to the computer directly using the USB cable.
To playback a video using on SD cord adopter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer.

Mass Storage

Select Mass Storage
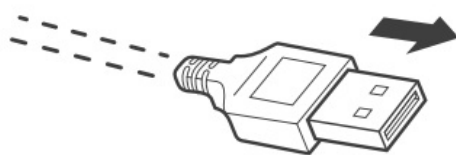
Connect USB connector to computer

To playback a video using USB coble, connect the USB Cable to the device and the computer. After the device powers up, press the OK Button to select Mass Storage.
On the computer, navigate to device drive. The videos are stored at: \CARDV\MOVI E. Select the video to playback.

Wi-Fi Connect

Download "Rexing Connect" app from the App Store/Google Play Store.

Download on the App Store

GET IT ON Google Play

1. To access and exit the app, hold down OK Button

2. Open Wi-Fi settings on your phone, find "SSID" from the list, tap to connect. (Default password: 12345678)

3. Open the Rexing Connect app, tap "Connect" to enter the realtime video streaming page.
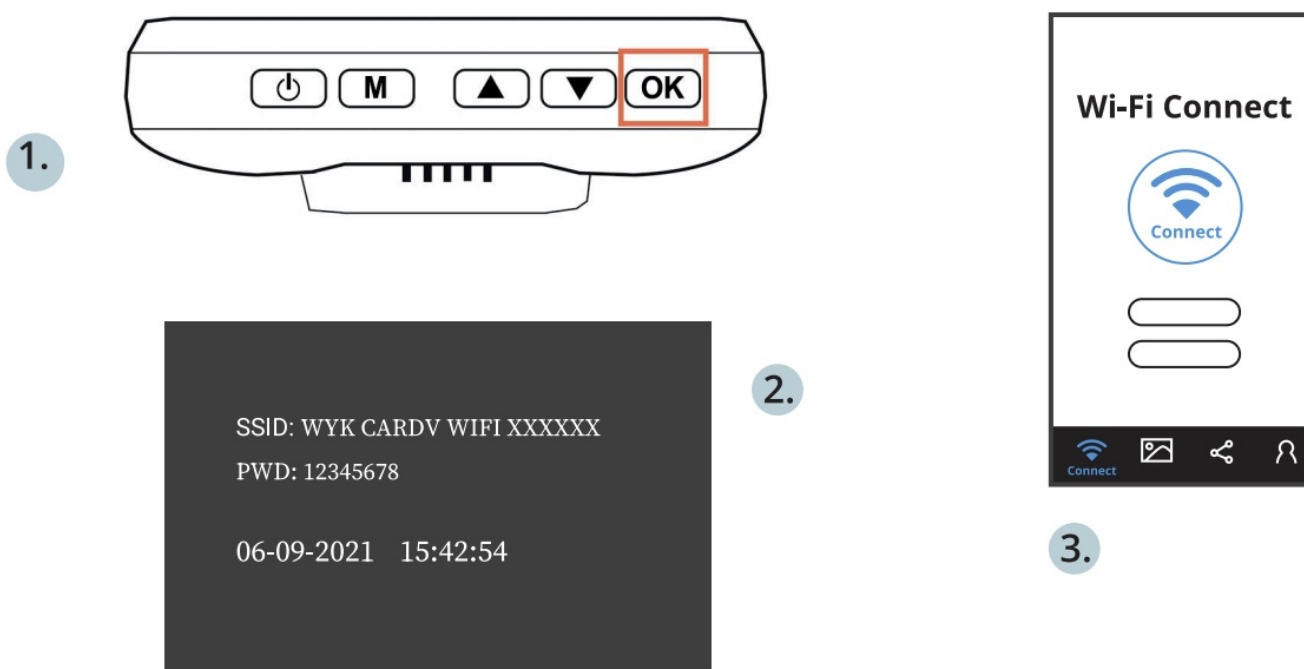
4. Once connected, the dash cam screen will switch to the camera view and will display 'WiFi Connected" message. Using the Rexing Connect app, you can view a live preview of the dash cam screen, start/ stop recording, as well as view and save your captures with your mobile device.

   For further instruction regarding the Wi-Fi Connect feature, please visit **www.rexingusa.com/wifi-connect/**.

GPS Logger

You can then access this information while playing back your recordings using the GPS Video player (For windows and Mac, available at **rexingusa.com**).
The dash cam will automatically search for the GPS signal once it's connected to the power source. Press the MENU button twice and go to System Settings. Toggle the GPS Speed Unit setting, and select your favorite speed unit.
After a GPS signal is found, the screen icon will turn from red to green as per the below icons. It will record the speed and location of your vehicle as you drive.

O.OOkm/h   GPS function active
O.OOkm/h   GPS Signal (not connected)

Parking monitor

Connect the dash cam to the Smart Hardwire Kit (need to purchase separately) to activate the parking monitor function. Please visit **support.rexingusa.com** to watch a video tutorial.

Toking Photos

To take a photo, stop video recording and hold down the ▼ button.
To view a photo, stop video recording and hold on MENU button to the Playback Mode.

Press the ▲ and ▼ Buttons to toggle through your photos.

To delete a photo, stop video recording and toggle to the Playback Mode and toggle through the videos and photos to the one you want to delete.
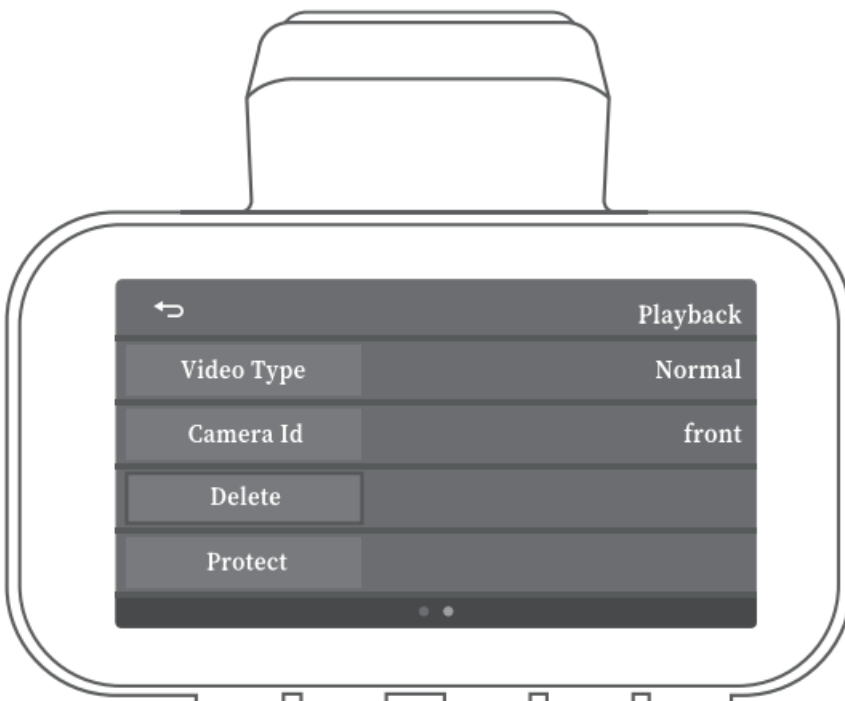Press the MENU to toggle the Delete option.
Press the OK Button and select Delete Current or Delete All.

Toggle to the Playback mode and select a photo to view

Toggle to the Delete option

Choose the desired option

Documents / Resources

	REXING V5 Dash Cam [pdf] User Guide V5 Dash Cam, V5, Dash Cam, Dash Camera

Manuals+, **home**   **privacy**