Saginaw Control SCE-NEXD12-SS Series External Disconnect Installation Guide

Contents

1 Saginaw Control SCE-NEXD12-SS Series External Disconnect Installation Guide
2 Documents / Resources
2.1 References
3 Related Posts

Saginaw Control SCE-NEXD12-SS Series External Disconnect Installation Guide

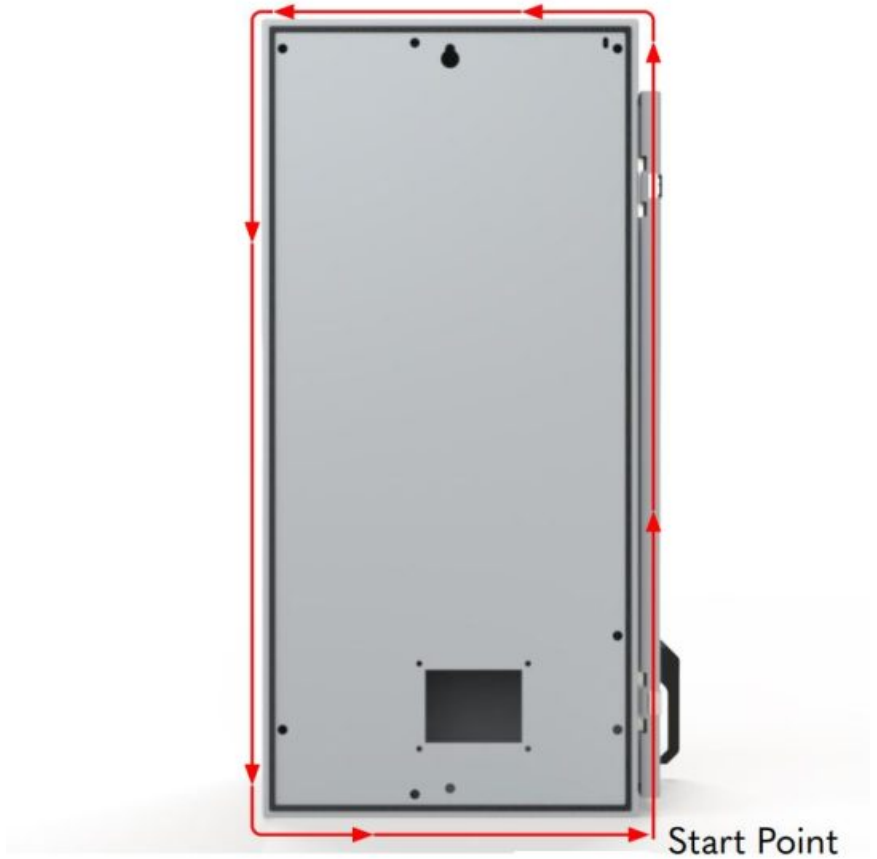
Start Point

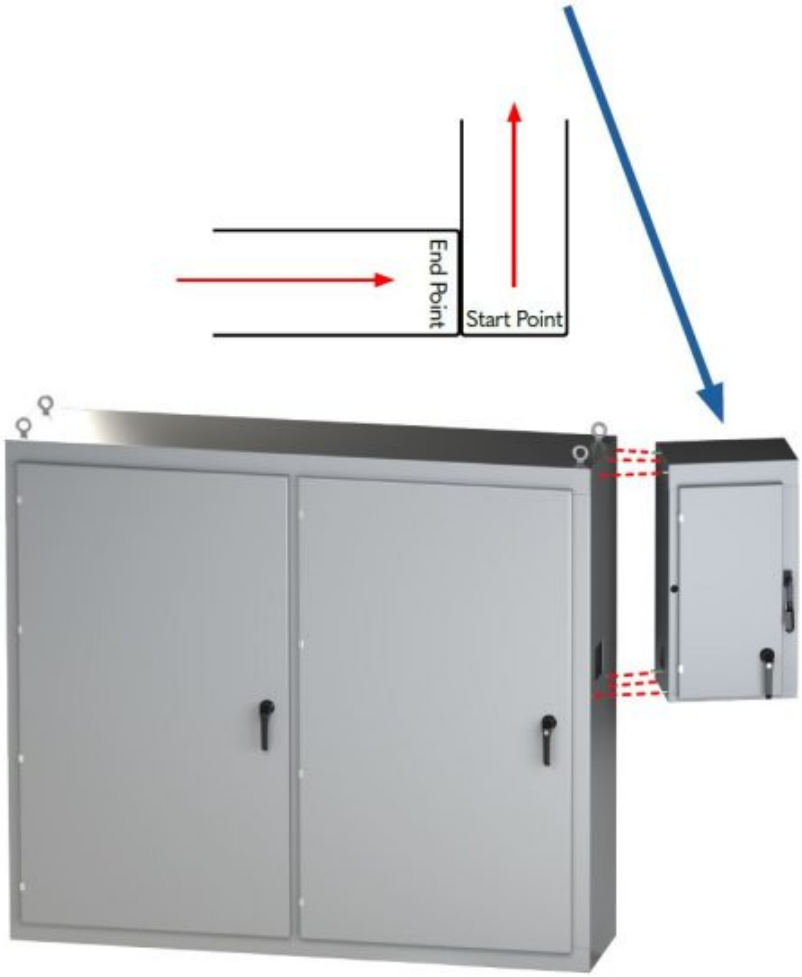

132942 BOM		
Item	Qty	Part Description
1	4	10-32 Flange Nut
2	2	0.38-16 X 0.75 Mtg Hardware
3	1	Sub-Panel and Grounding Hardware
4	1	Hole Plug - Kit
5	1	EXD and EXR Cover plate
6	1	Strip Gasket

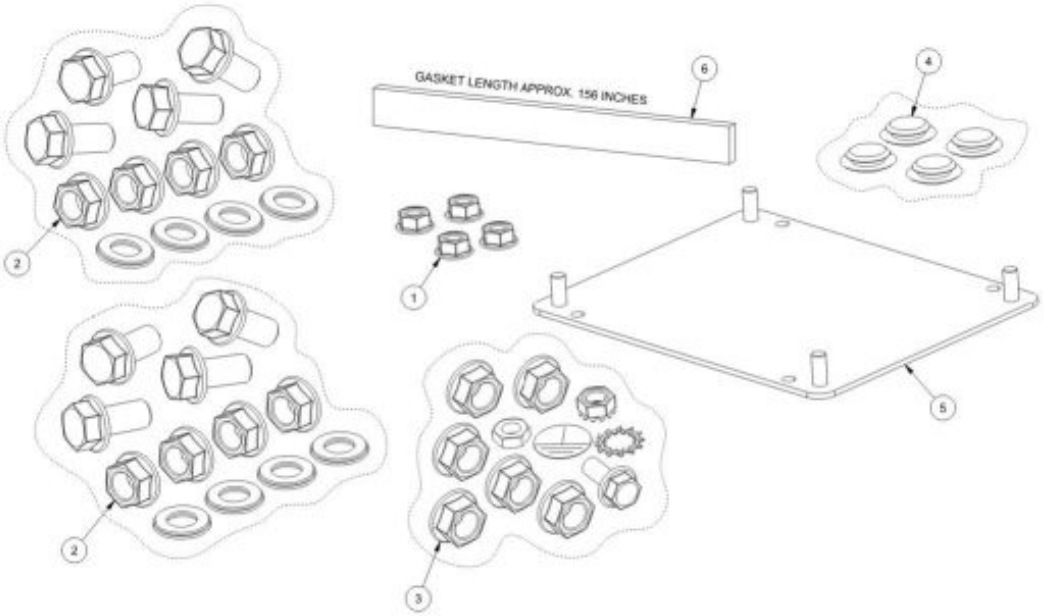

Gasket Installation:
Starting at the bottom of the external disconnect, install the gasket (item 6) around the side of the enclosure between the edge and the holes. Edge the end of the gasket up to the start point to ensure no water can travel through.

Using the provided bolt pack (item 2) use the mounting hardware to mount the external disconnect.

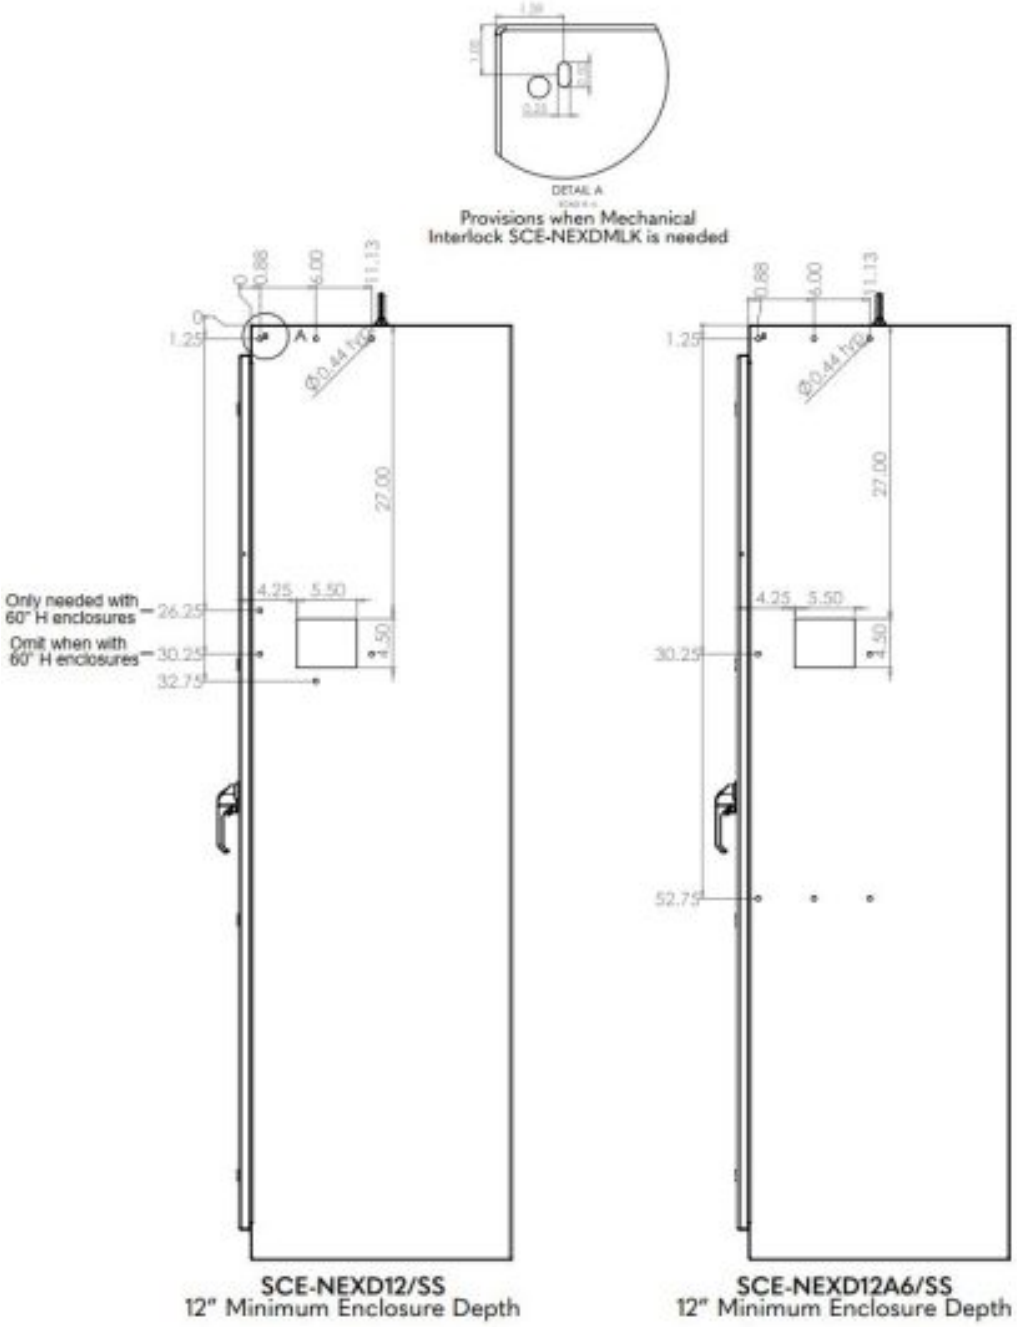

SCE-NEXD12/SS
12" Minimum Enclosure Depth

SCE-NEXD12A6/SS
12" Minimum Enclosure Depth

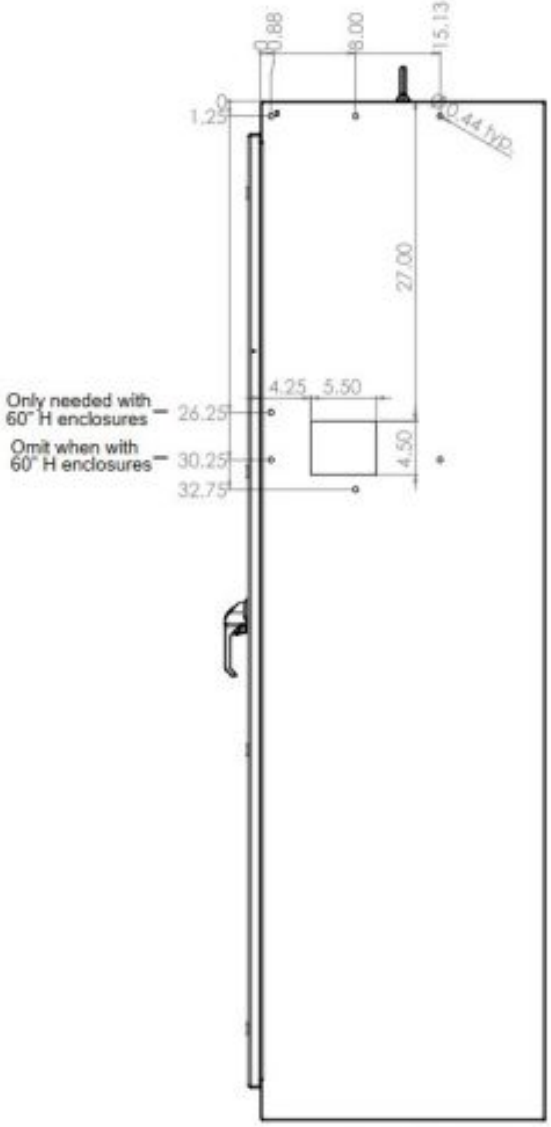

SCE-NEXD16/SS
16" Minimum Enclosure Depth

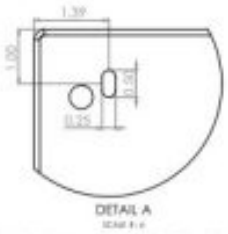

Provisions when Mechanical
Interlock SCE-NEXDMLK is needed

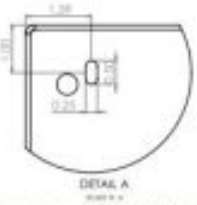

Provisions when Mechanical
Interlock SCE-NEXDMLK is needed

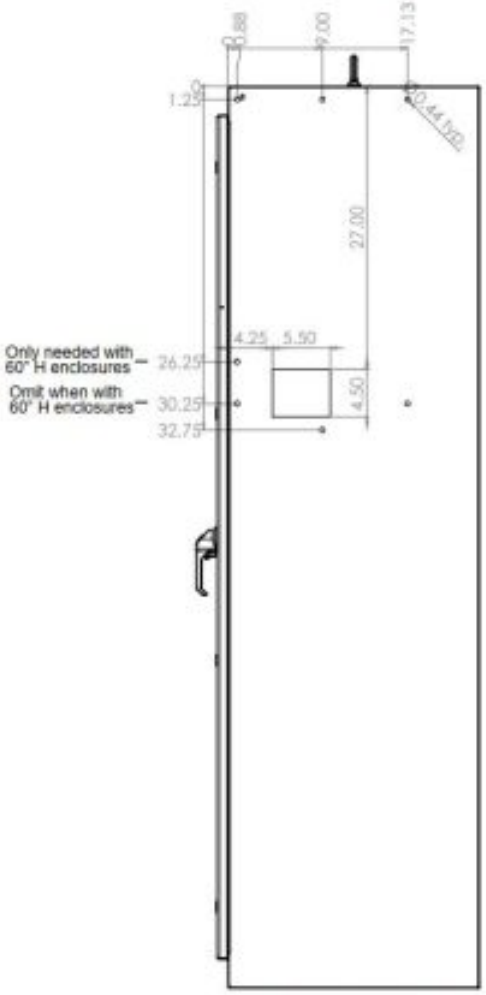

SCE-NEXD18/SS
18" Minimum Enclosure Depth

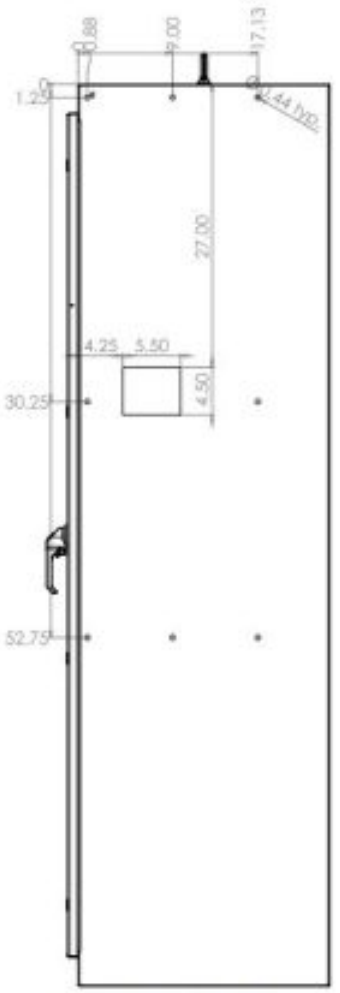

SCE-NEXD18A6/SS
18" Minimum Enclosure Depth

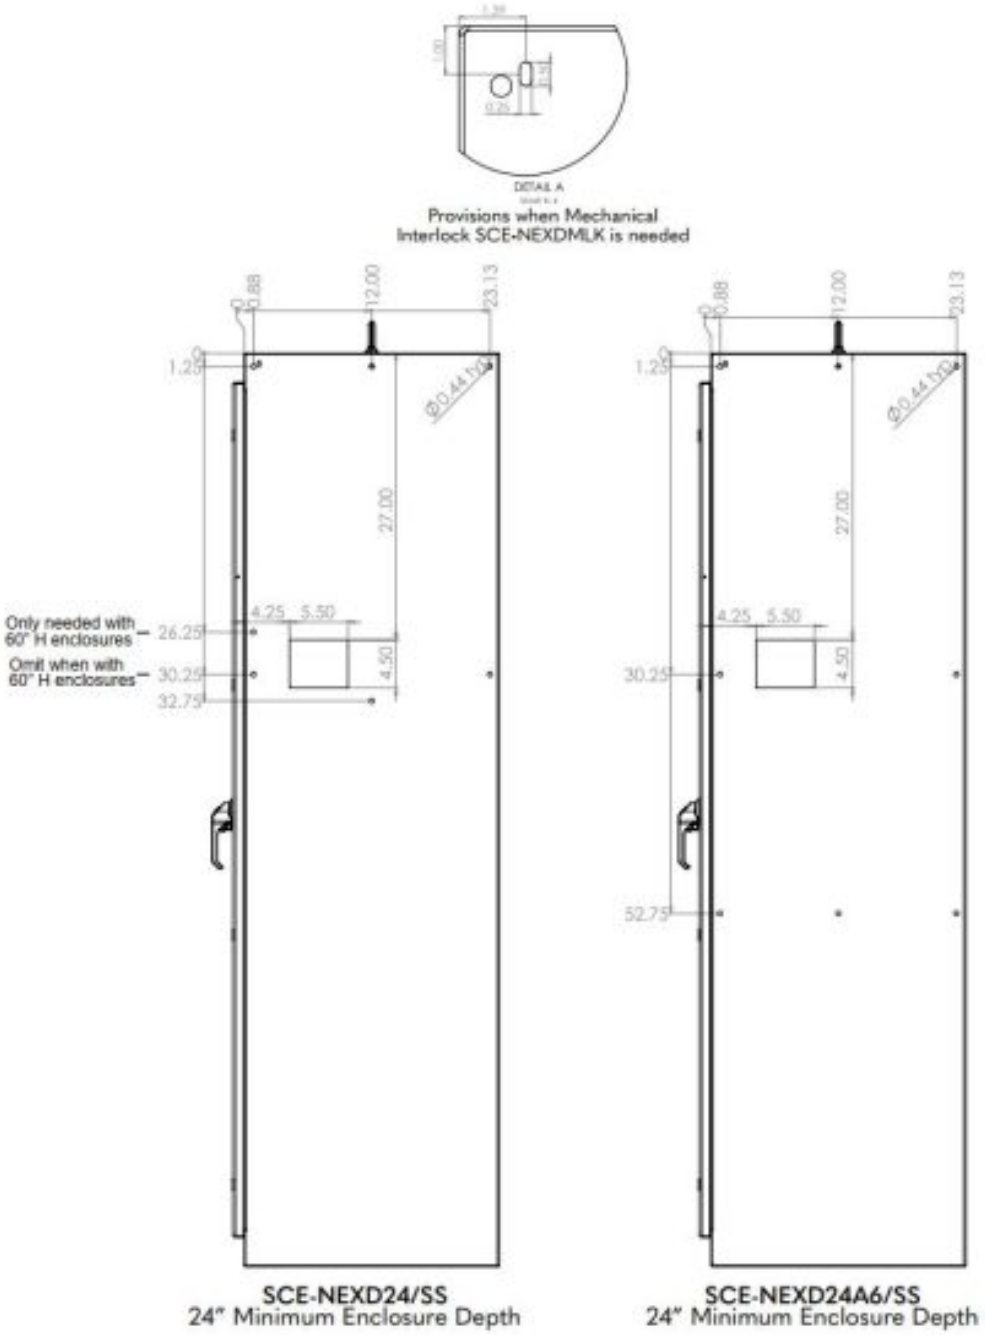

Read More About This Manual & Download PDF:

Documents / Resources

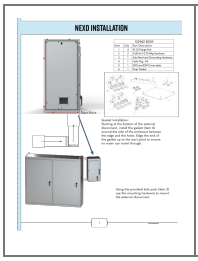	Saginaw Control SCE-NEXD12-SS Series External Disconnect [pdf] Installation Guide SCE-NEXD12-SS, SCE-NEXD12A6-SS, SCE-NEXD16-SS, SCE-NEXD18-SS, SCE-NEXD18A6-SS, SCE-NEXD24-SS, SCE-NEXD24A6-SS, SCE-NEXD12-SS Series External Disconnect, SCE-NEXD12-SS Series, External Disconnect, Disconnect

References

- User Manual

Manuals+, **Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.