Manuals+ — User Manuals Simplified.

SHEIN B066T Wireless Keyboard

SHEIN B066T Wireless Keyboard User Manual

Contents

SHEIN

SHEIN B066T Wireless Keyboard

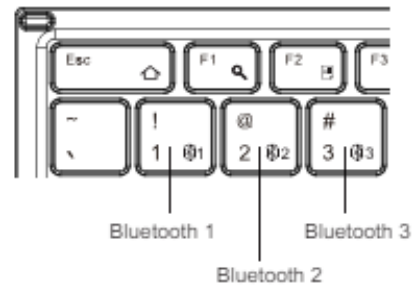**Note:** Please read the user manual carefully before you start using this product

Front

Multi-Function Keys

Touchpad switch(fn+spacebar)

Press the left button

Press the right button

Back

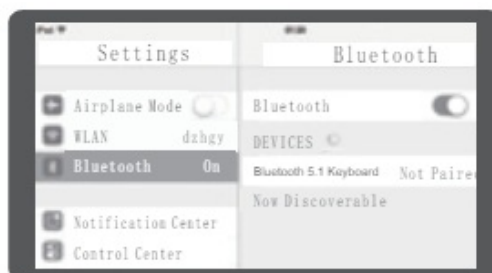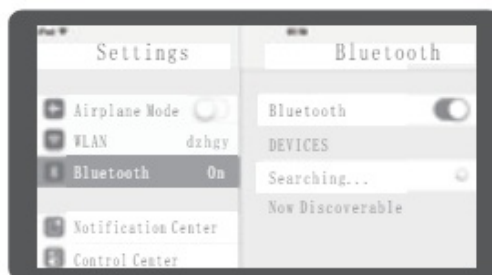Power Switch

Charging Interface
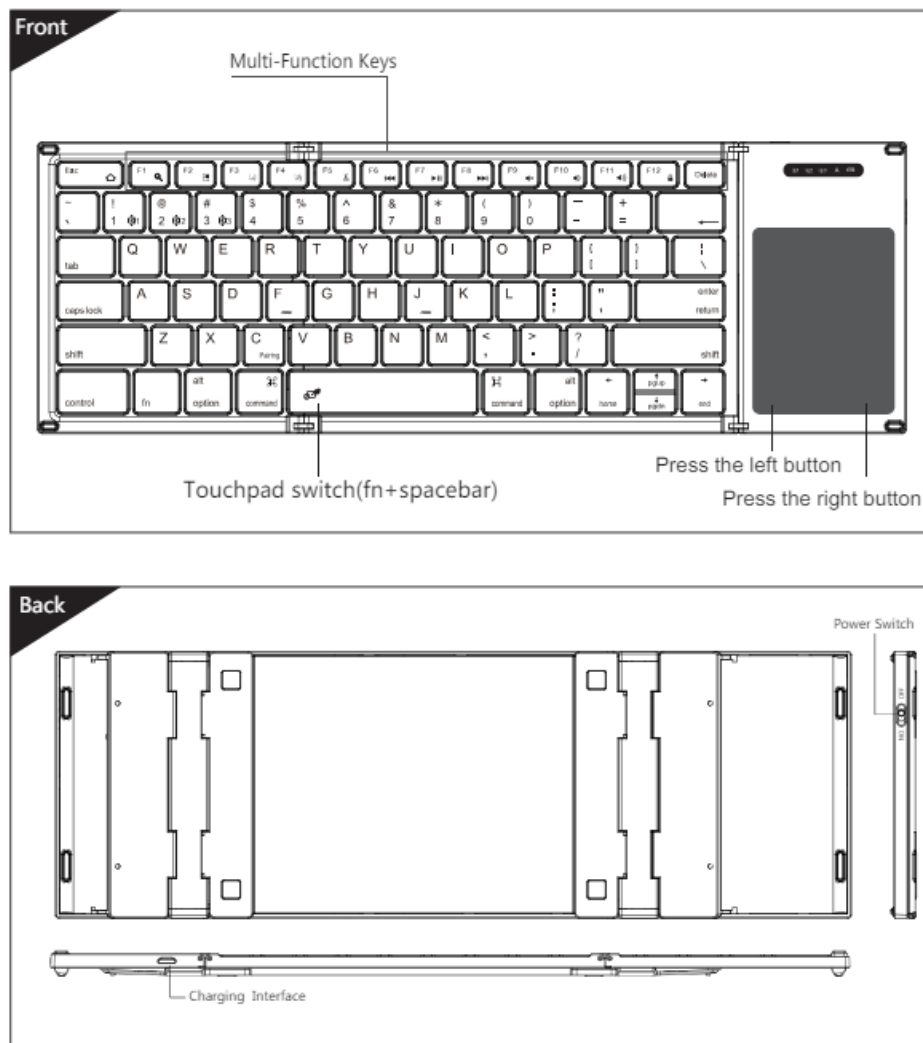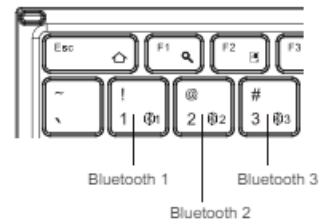
Compatible System

Win /iOS /Android

iOS Connection Instructions
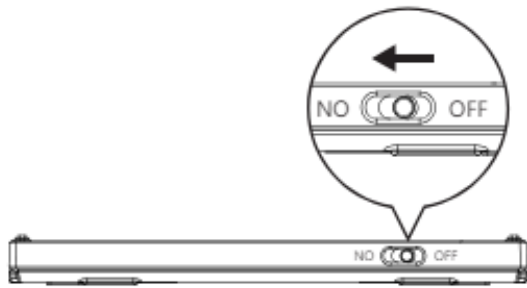
1. Please turn on the keyboard power switch. When the blue light is on, press the Fn+ 📶1 / 📶2 / 📶3 select channel and press Fn+C code, The blue light flashes to enter the code-matching state.
2. Turn on Bluetooth to enter the search mode.

3. you find the "Bluetooth 5.1 Keyboard" and then click the pair name to connect.
4. There is a tip for connecting successfully, you can use your keyboard comfortably.

Win 10 Connection Instructions
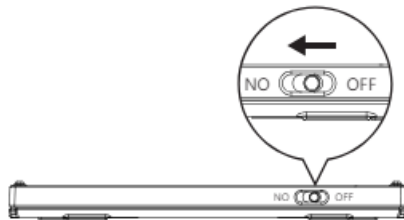
1. Please turn on the keyboard power switch. When the blue light is on, press the Fn+ $\boxtimes 1 / \boxtimes 2 / \boxtimes 3$ select channel and press Fn+C code, The blue light flashes to enter the code-matching state.

2. Turn on Settings, turn on Bluetooth, and click Add Bluetooth or other devices.
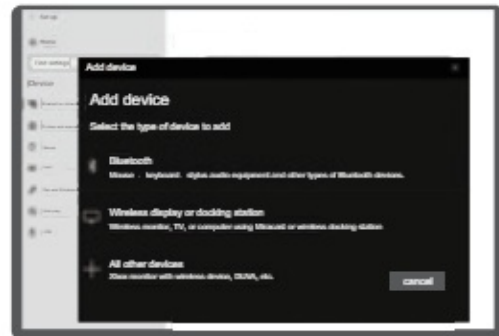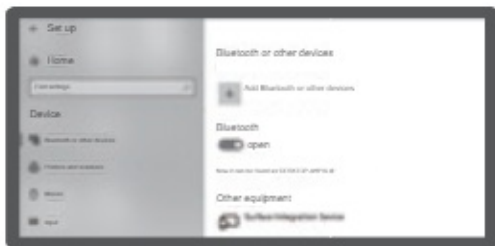3. Select "Bluetooth" from "Add Device" and search for it.

4. you find the "Bluetooth 5.1 Keyboard" and then click the pair name to connect.
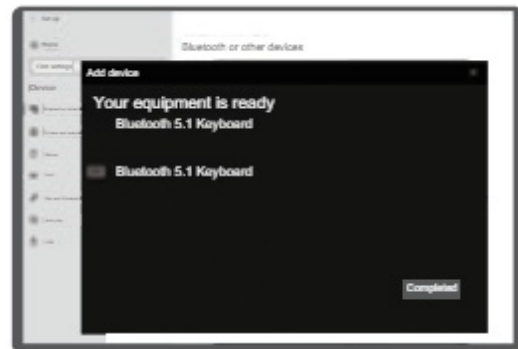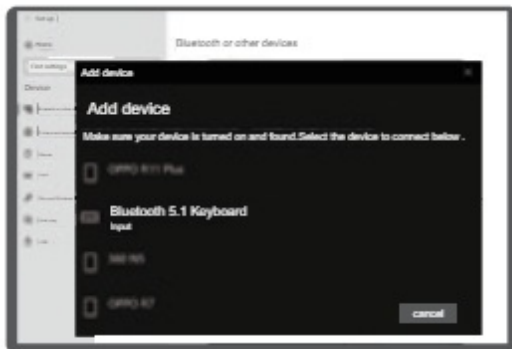5. There is a tip for connecting successfully, you can use your keyboard comfortably .

Android Connection Instructions
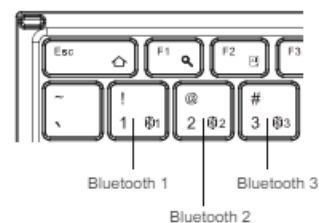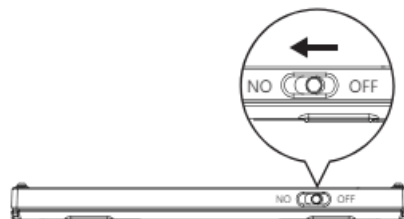
1. Please turn on the keyboard power switch. When the blue light is on, press the Fn+ $\boxtimes 1 / \boxtimes 2 / \boxtimes 3$ select channel and press Fn+C code, The blue light flashes to enter the code-matching state.

2. Open "Settings" and then click "Connect"

3. Turn on Bluetooth to search for the pair name.

4. Click the pair name "Bluetooth 5.1 Keyboard". pair request is displayed, click OK.

5. There is a tip for connecting successfully ,you can use your keyboard comfortably.

Product Features

IOS/Android		Windows		Windows	
Press directly	Corresponding function	Fn+	Corresponding function	Press directly	Corresponding function
Esc ⇧	Return to Desk	Esc ⇧	Home Page	Esc ⇧	Esc
F1 🔍	Search	F1 🔍	Search	F1 🔍	F1
F2 [All]	Select all	F2 [All]	Select all	F2 [All]	F2
F3	Copy	F3	Copy	F3	F3
F4	Paste	F4	Paste	F4	F4
F5 ✂	Cut	F5 ✂	Cut	F5 ✂	F5
F6 ◄◄	Previous track	F6 ◄◄	Previous track	F6 ◄◄	F6
F7 ►II	Play/Pause	F7 ►II	Play/Pause	F7 ►II	F7
F8 ►►I	Next track	F8 ►►I	Next track	F8 ►►I	F8
F9 🔇	Mute	F9 🔇	Mute	F9 🔇	F9
F10 🔊	Volume-	F10 🔊	Volume-	F10 🔊	F10
F11 🔊	Volume+	F11 🔊	Volume+	F11 🔊	F11
F12 🔒	Lock	F12 🔒	Lock	F12 🔒	F12

Three system-switching languages

- **iOS**: control+Space key switch language
- **Windows**: Alt+Shift switch language
- **Android**: Shift+Space key switch language

Three system input method switch

- **iOS:** control+ Space key
- **Windows**: control+ Shift
- **Android**: control+ Shift

Technical Specifications

- **Keyboard size:** 342.35 x 114.7 x 10.9mm (open) 182.25 x 114.7 x 19.5mm (folding)
- **Working distance** 10 m (No obstacles)
- **Lithium battery capacity** 140 mAh
- **Working voltage** 3.7 V

- **Use touchpad the working current** 12 mA

- **Sleep time** 10 minutes

- **Charger specifications**: 5V $---$ 1A or 2A

- **Touchpad size**: 54.8 x 73.8 mm

- **Weight:** 222 g

- **Key working current**: 1.2-5.0 mA

- **Standby current**: <1mA

- **Sleep current**: 39uA

- **Awaken way** : Press key

Touchpad function description (Windows10), must be switched to the Windows system

Tap —
The left of mouse button

Two-finger sepration /
collapse
— Zoom in / out

Two-finger slides vertically /
horizontally
— Mouse wheel

Three-finger slide to the
left continuously
— Switch the active window

Three-finger tap
— Search

Three-finger slide to the
right continuously
— Active window switch

Three-finger slides up
— Open the browser window

Four-finger tap
— Open the (Action +
Center)

Three-finger slides down
— Go Home

Touch pad function description (iOS 13.4.1 and above), must be switched to iOS system

	Tap—Tap (user-defined)		Drag — Mouse cursor		Single finger double tap and then drap — Drag
	Two-finger sepration / collapse — Zoom in / out		Two-finger slides vertically — Mouse wheel		Two-finger slides horizontally — Slide the desktop left and right
	Three-finger slides down — Open all the active windows (Click the Homepage button twice)		Three-finger tap — Desktop (user-defined)		Three-finger slides up — Open/hide the bottom of the application bar (Cmd+Alt+D)
	Three-finger slides left — Active windows (Cmd+shitf+Tab)		Three-finger slides right — Active windows (Cmd+Tab)		Four-finger tap — Regional screenshots (Cmd+shift+4)

User-defined:

Settings – Auxiliary Functions – Touch – Auxiliary Touches – Device – Click the keyboard's pairing name, and then customize the function of 'single finger, Three-finger'.

Touchpad function description (Android), must be switched to Android system

	Tap — The left of mouse button		Drag — Mouse cursor
	Two-finger slides vertically / horizontally — Mouse wheel		
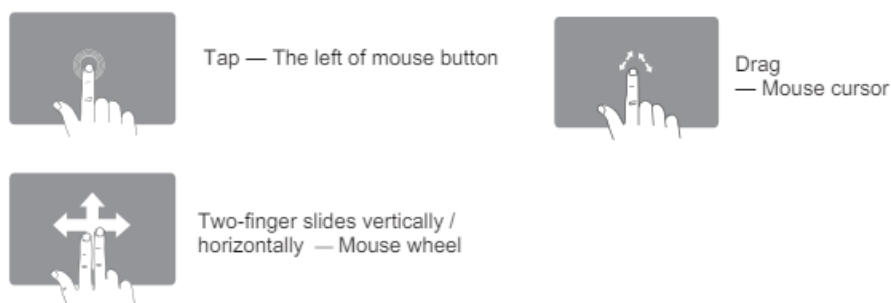
Status Display LED

- **Connect**: Open the power switch, and blue lights up, press the connect button, blue light twinkles.
- **Charging**: The indicator light will be on red, after fully charging, the light crush out.
- **Low Voltage Indication**: When the voltage is below 3.3 V, a red light twinkles.

Multi-channel connection

- When connecting the first device, first press the Fn+ (1 select channel and then press Fn+ 🔵1 to start the connection.

- Before connecting the second device, press the Fn+ 1$2 select channel and then press Fn+ 🔵2 to start the connection.

- Before connecting the third device, press the Fn+ 1813 select channel and then press Fn+ 🔵3 to start the connection.

- To use multiple devices at the same time, press Fn + 🔵1 / 🔵2 / 🔵3 to switch to the connected devices freely.

Troubleshooting

Please contact the after-sales service.

Copyright
It is forbidden to reproduce any part of this manual without the permission of the seller.

Safety instructions

Do not open or repair this device, Do not use the device in a damp environment. Clean the device with a dry cloth.

Warranty

The device is provided with one-year limited hardware warranty from the purchase day.

Keyboard Maintenance

1. Please keep the keyboard away from liquid or humid environments, saunas, swimming pools, and steam room and don't let the keyboard get wet in the rain.
2. Please don't expose the keyboard at too high or too low a temperature condition.
3. Please don't put the keyboard under the sun for a long time.
4. Please don't put the keyboard close to the flame, such as cooking stoves, candles or fireplaces.
5. Avoid sharp objects scratching products, and timely to recharge products to ensure normal use.

FAQ

The tablet PC can't connect to the BT keyboard

1. At first check the BT keyboard is in a match code state, then open the table PC Bluetooth searching.
2. Checking the BT keyboard Battery is enough, the battery low is also leads to can't to connect, and you need to charge.

The keyboard indication light always flashing when use?
The keyboard indication always flashes when used, is means the keyboard will have no power, please charge the power as soon as possible.

The tablet PC display BT keyboard is disconnected?
The Bluetooth keyboard is not used for some time, the device will automatically enter the sleep state in order to save power. Press any key on the keyboard to wake up, and the Bluetooth connection will be automatically restored.

EU: This device in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. All essential radio test suites have been carried out. This restriction will be applied to all Member States of the European Union. The device can be used in portable exposure conditions without restriction. Declaration of Conformity Hereby, Shenzhen DZH Industrial Co., Ltd declares that the product type B087 complies with Directives 2014/53/EU & 2011/65/EU. The full text of the EU Declaration of conformity is available at the following internet address: **https://www.dzhgy.com**

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Warranty Card

User information

Company or personage full name

_____

Contact address_____

TEL_____   Zip_____

The purchased product name and model NO.

_____

Purchased date_____

This reason due to the product is broken and damage is not included in the warranty.

1. accidents, misuse, improper operation, or any unauthorized maintenance, alteration, or disassembly;
2. Improper operation or maintenance, violation of product instructions, or improper connection of power during use;
3. Or use consumables (such as spare batteries) that are not provided by the company but applicable laws Except where such restrictions are prohibited.

Specifications

- **Dimensions:** 342.35×114.7×10.9 mm
- **Weight:** 222 g
- **Operating System:** Windows 10
- **Power Consumption:** 12 mA
- **Screen Size**: 54.8 x 73.8 mm
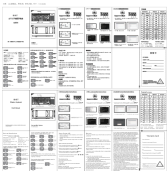
Frequently Asked Questions (FAQ)

Q: How do I reset the device?
A: To reset the device, locate the reset button (usually found near the charging port) and press it using a small pin or paper clip.

Q: Can I upgrade the operating system?
A: It is recommended to check with the manufacturer for any available updates or upgrades for the operating system.

Documents / Resources

SHEIN B066T Wireless Keyboard [pdf] User Manual
B066T Wireless Keyboard, B066T, Wireless Keyboard, Keyboard

References

- 🌐 _____
- **User Manual**