Manuals+ — User Manuals Simplified.

SHENZHEN WF3285T Android Tablet User Manual

Contents

SHENZHEN WF3285T Android Tablet

USER MANUAL

Model: WF3285T

15.6" 21.5" 23.8" 32" DIGITAL SIGNAGE

Important Notices

Copyright Information

This device complies with CE and FCC regulations.

- Do not push objects into holes and ventilation slots.
- Do not expose this product to moisture or place any objects fil ed with liquids on or near the product.
- Do not place a naked flame sou ce, such as lighted candles, on or near this product. Do not store or operate the device in environments where the temperature is above 50 degrees celsius or below -10 degrees celsius.
- Do not intentionally hit the device or place heavy or sharp objects on the device. Only use accessories specified by the manu acturer.
- Keep the device away from benzene, diluents, and other chemicals.
- Do not attempt to repair this product yourself. Always use a qualified se vice agent to perform adjustments or repairs.

Package Contents

Please make sure all of the following are present when you unpack your Digital Signage
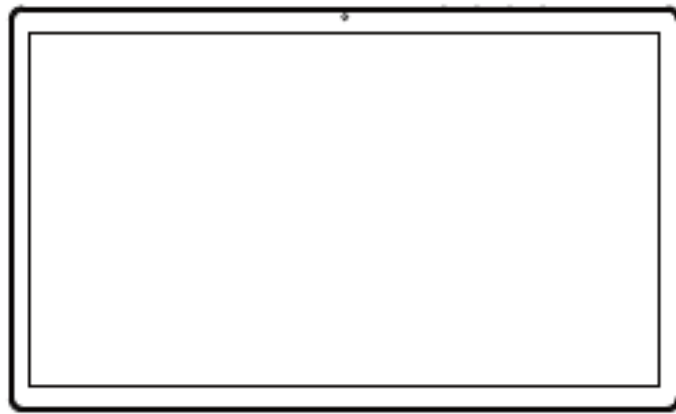
Digital Signage
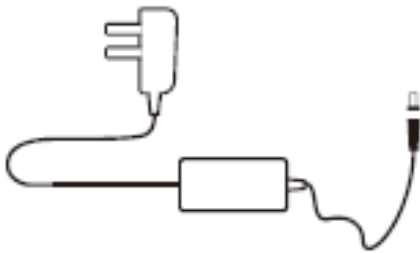
Power adapter   User manual

Product Specifications

Specifications vary by model configuration

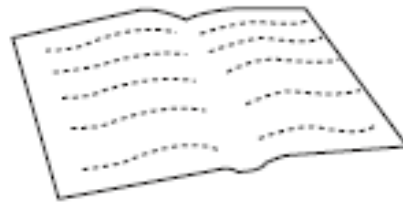|		
System	CPU	RK3588S2 Quad core cortex A55+Quad core cortex A76
	RAM	4GB
	Internal memory	32GB
	Operation system	Android
Display	Panel Size	15.6″ 21.5" 23.8″ 32"LCD
	Resolution	1920*1080 / 3840*2160(4K)
	Model Type	Capacitive touch screen
	Number of points	10-Point
	Interface for touch	HID-USB
	Aspect Ratio	16：9
	Wi-Fi	IEEE 802.11b/g/n/a/ac/ax (wifi 6) BT 5.3
Interface	Type-c	Full Function (Except for charging function)
	USB	USB Host*2
	HDMI IN	Support 800*600,1024*768,1280*720,1280*800, 1280*1024,1366*768,1600*900,1920*1080,3840*2160,etc
Other	VESA	75x75mm（15.6″ 21.5"）/ 100x100mm（23.8″ 32"）
	Button	Power/Vol+/Vol-
	G-sensor	Support
	Speaker	4Ω*5W*2
	Microphone	Built in dual Microphone , Support noise reduction and echo cancellation
	Storage Temperature	-20℃---60℃
	Working Temperature	0℃---40℃ 20~80%RH

15.6″ Exterior Components
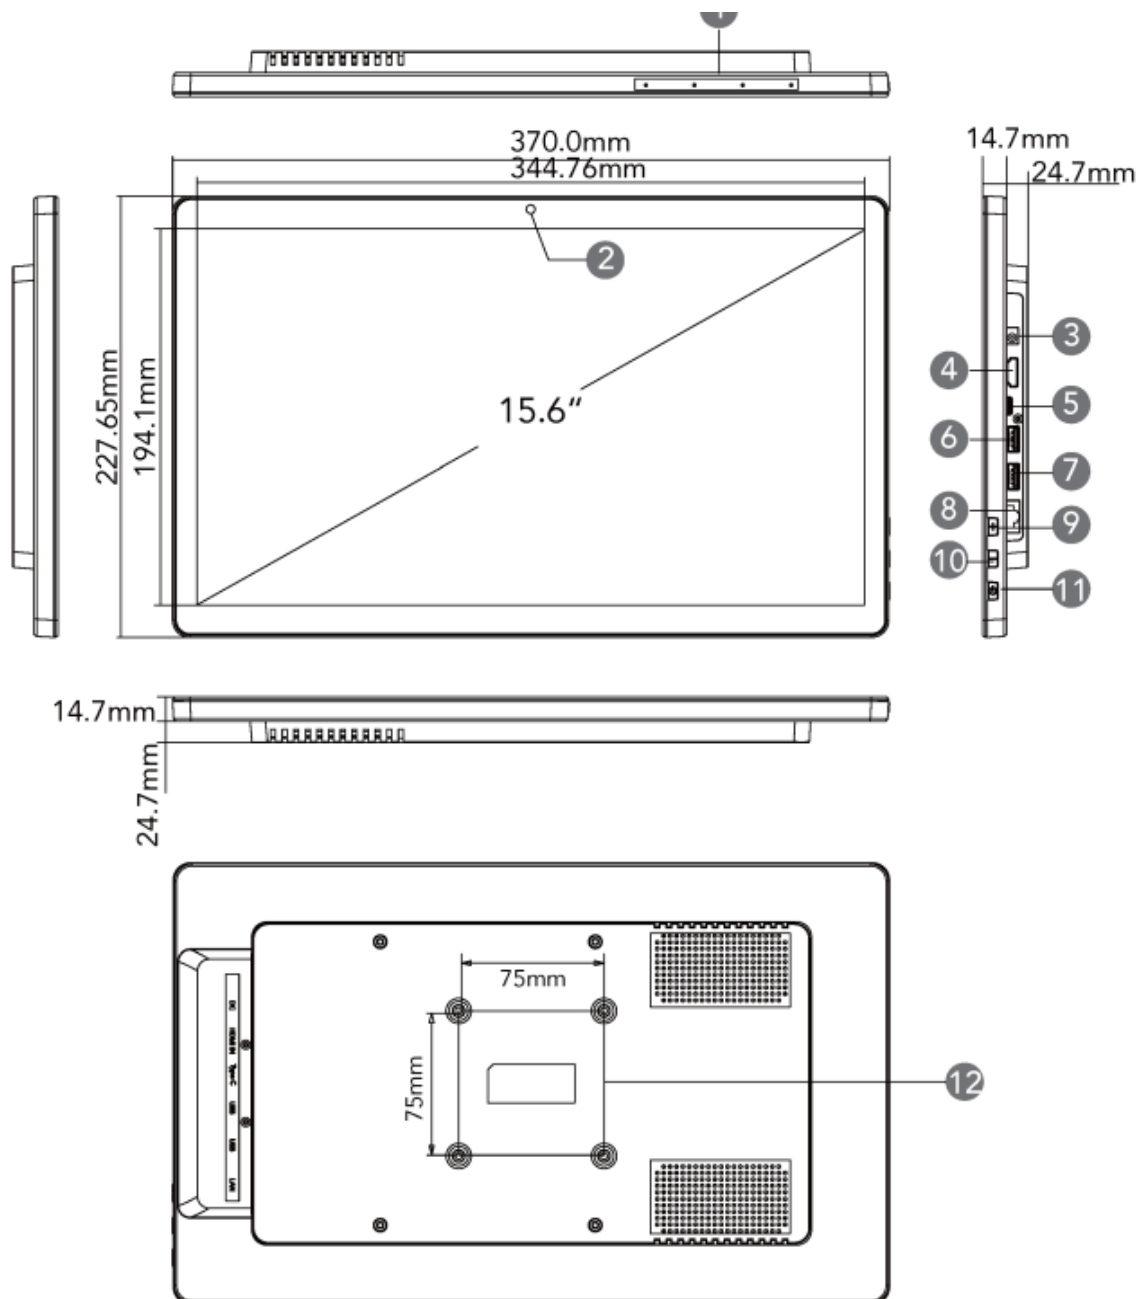
No	Function	No	Function
1	Microprobe hole	7	USB host
2	Camera	8	Ethernet Port
3	DC in power supply port	9	Volume +
4	HDMI IN	10	Volume -
5	Type-c	11	Power key
6	USB host	12	VESA 75x75mm

21.5″ Exterior Components
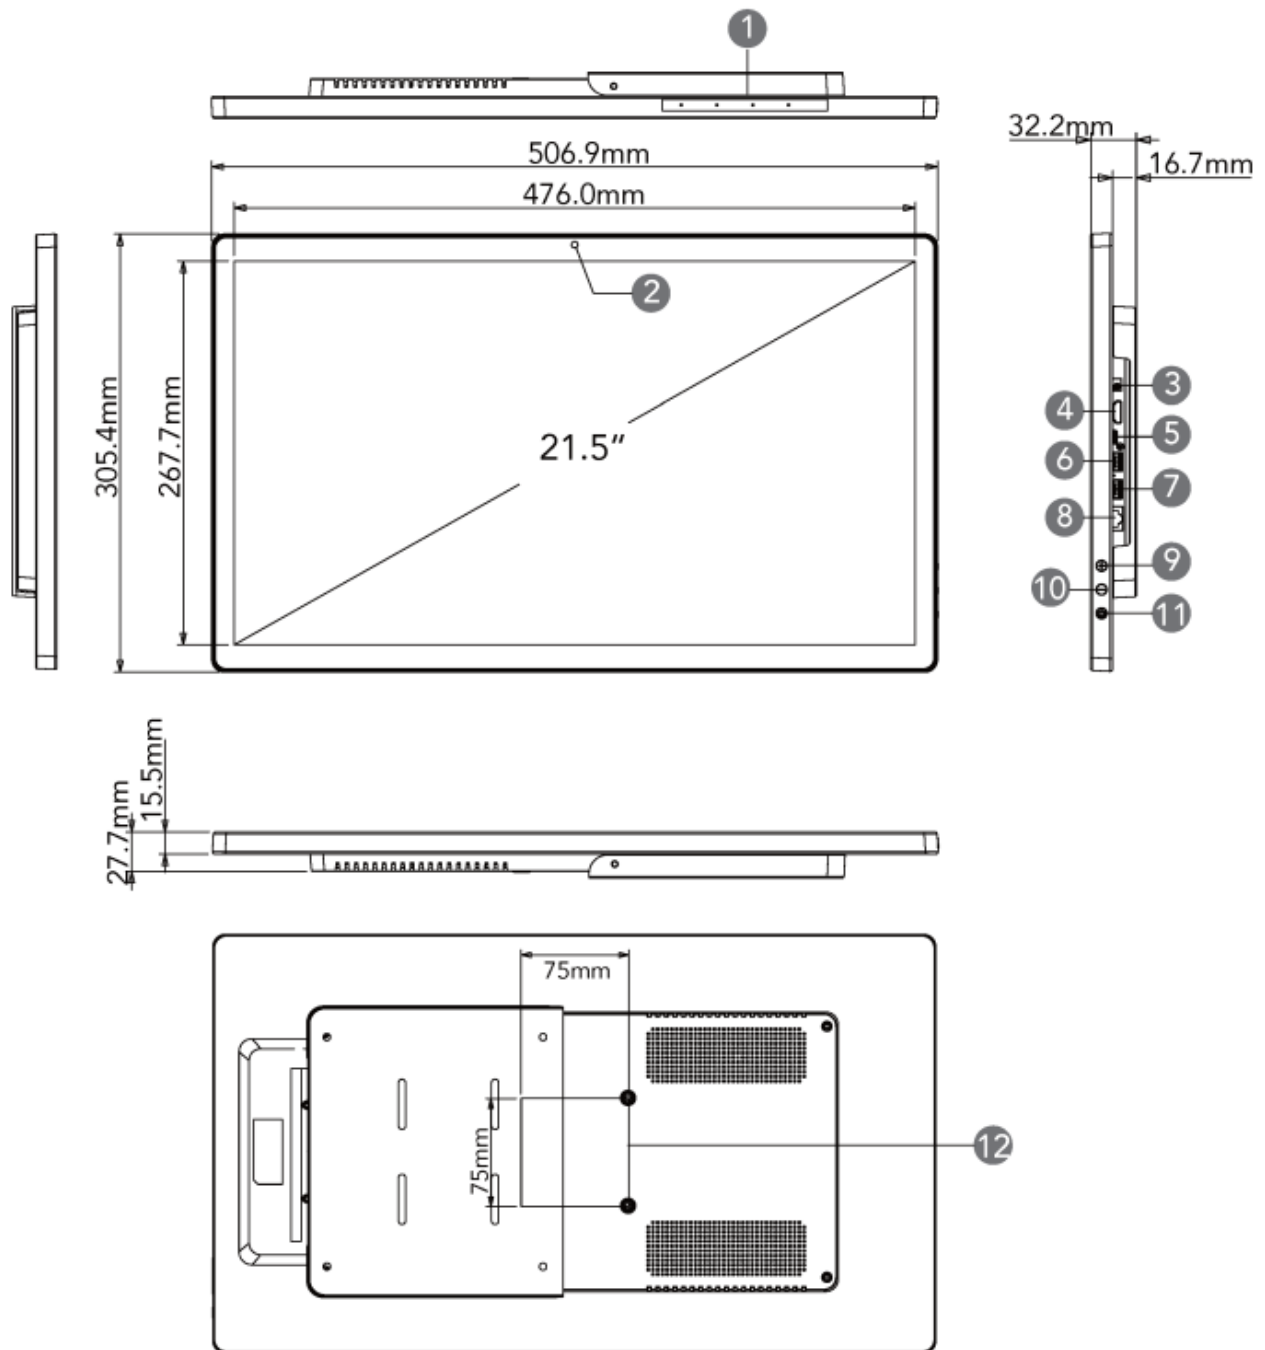
No	Function	No	Function
1	Microprobe hole	7	USB host
2	Camera	8	Ethernet Port
3	DC in power supply port	9	Volume +
4	HDMI IN	10	Volume -
5	Type-c	11	Power key
6	USB host	12	VESA 75x75mm

23.8″ Exterior Components
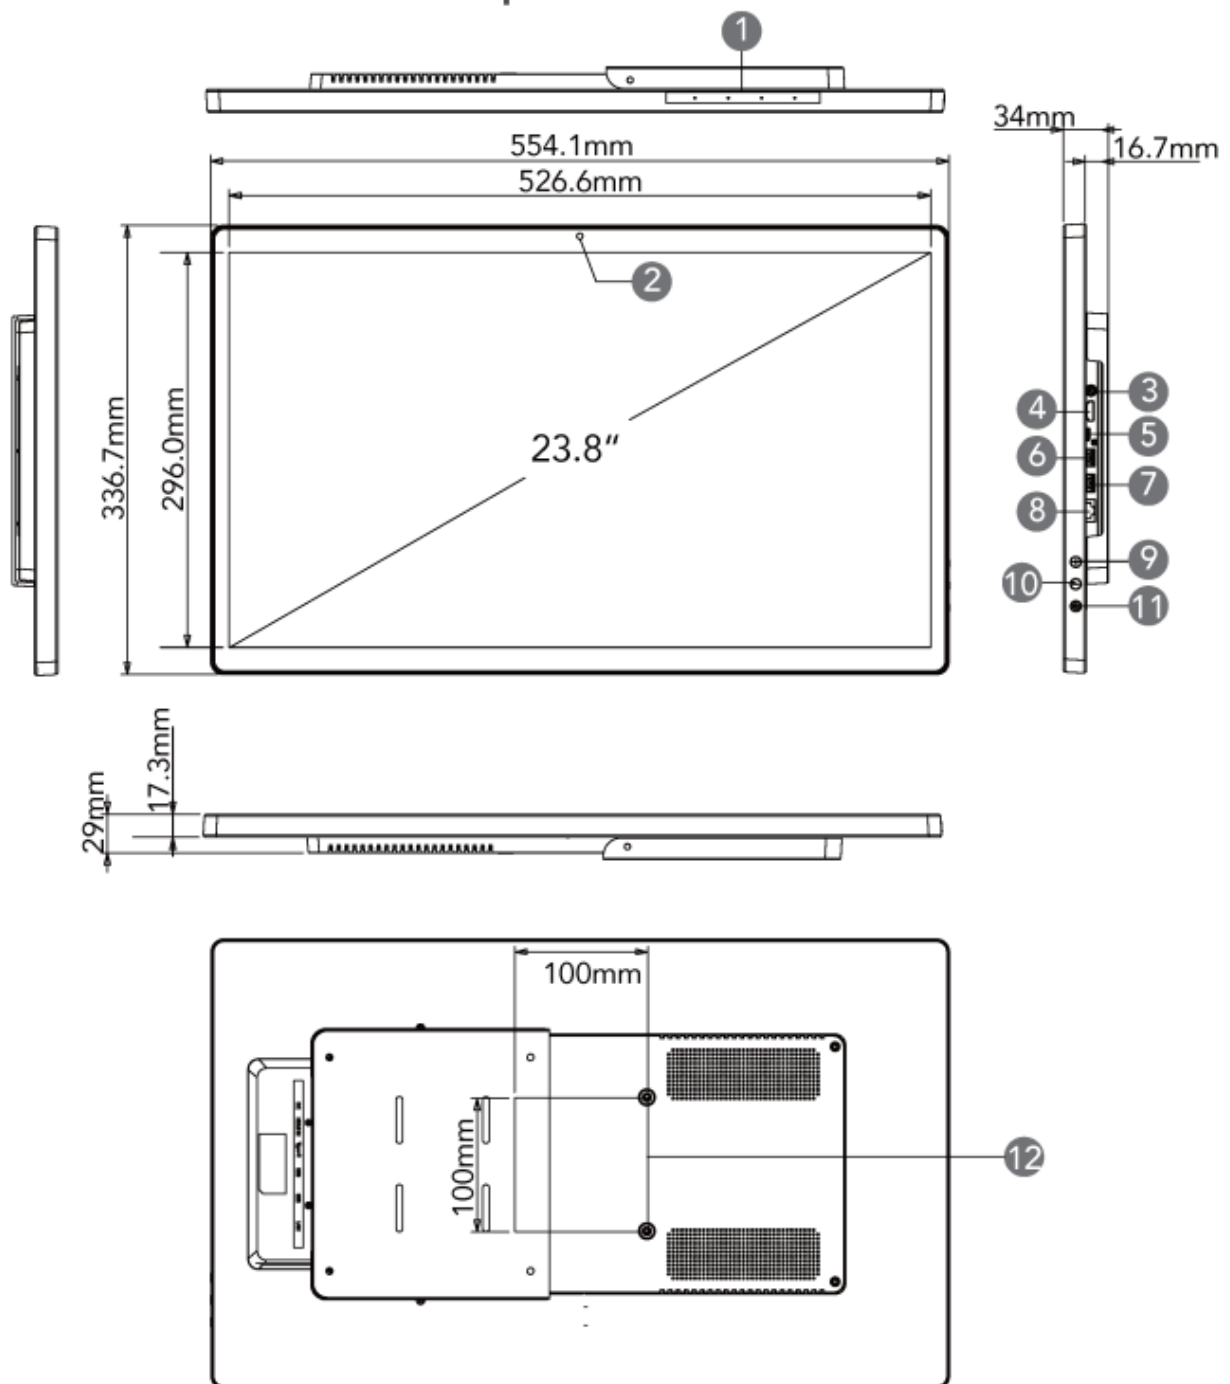
No	Function	No	Function
1	Microprobe hole	7	USB host
2	Camera	8	Ethernet Port
3	DC in power supply port	9	Volume +
4	HDMI IN	10	Volume -
5	Type-c	11	Power key
6	USB host	12	VESA 100x100mm

32″ Exterior Components
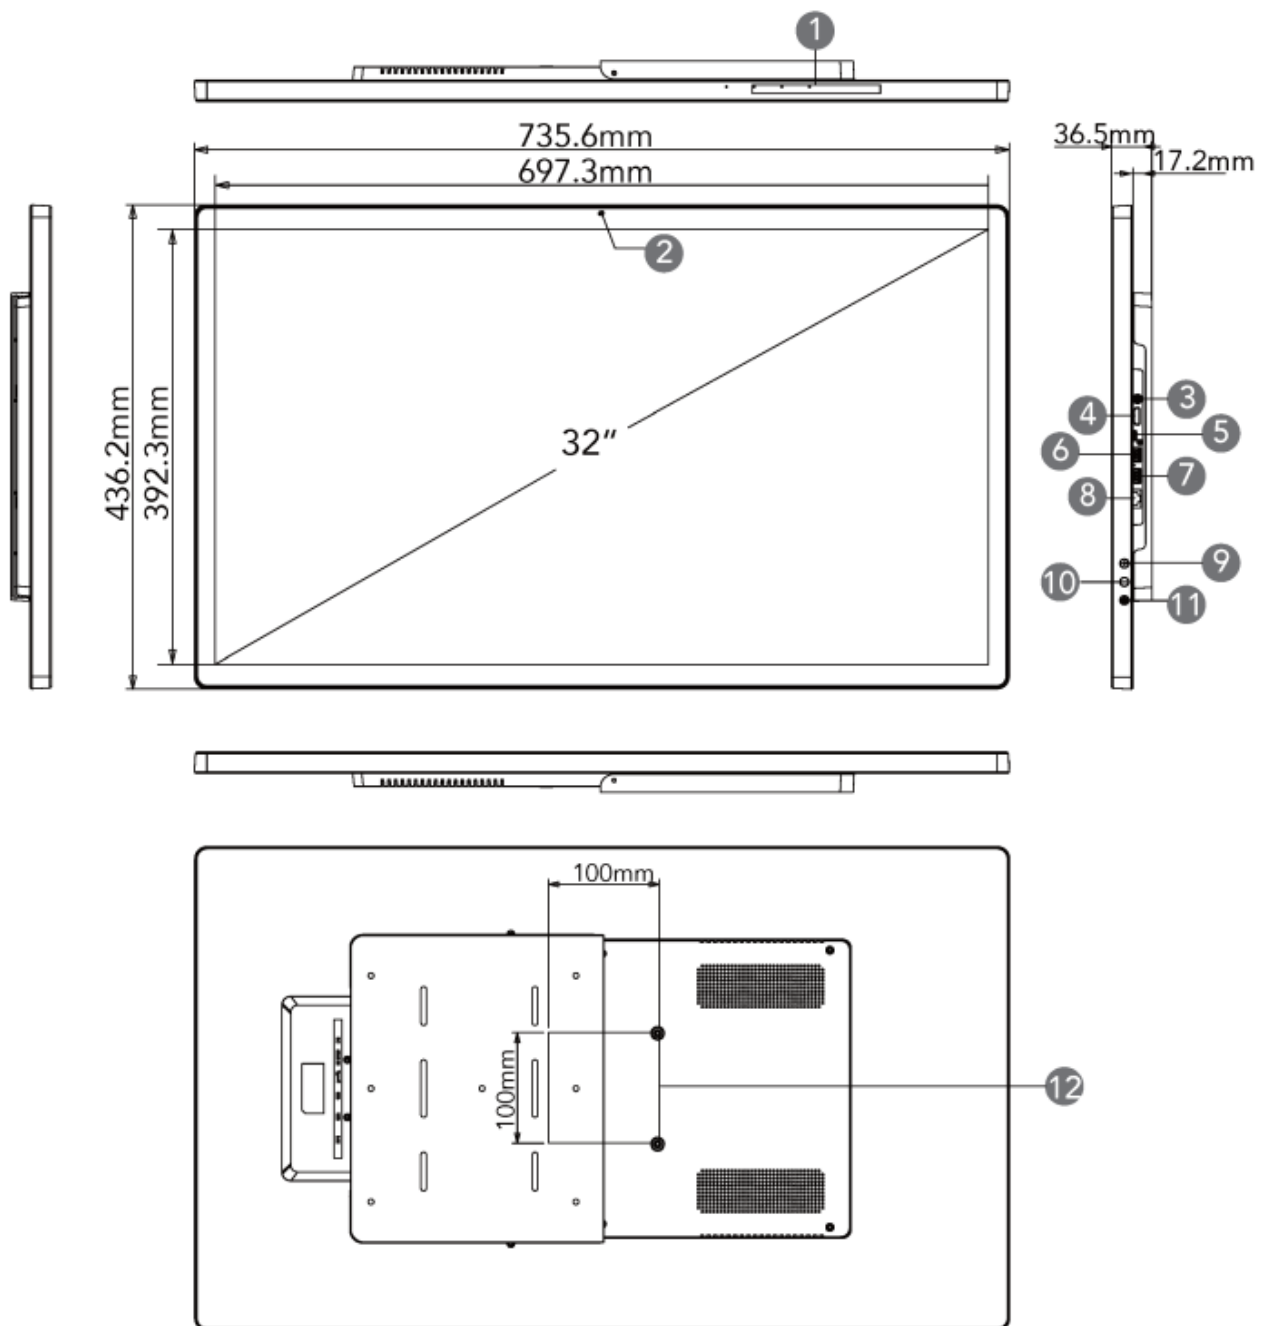
No	Function	No	Function
1	Microprobe hole	7	USB host
2	Camera	8	Ethernet Port
3	DC in power supply port	9	Volume +
4	HDMI IN	10	Volume -
5	Type-c	11	Power key
6	USB host	12	VESA 100x100mm

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions
1. This device may not cause harmful interference

2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the

FCC Rules. These limits are de signed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontroll ed environment. This equipment should be installed and operated with minimum dista nce 20cm between the radiator & your body.

This device complies with parts of the FCC rules. Operation is subject to the following two conditions:
This device will not cause harmful interference;
This device must accept any interference received, including interference that may cause undesired operation

This product complies with the essential requirements of European safety regulations and has passed the product safety conformity assessment procedure. It also has a manufacturer's declaration of conformity to ensure that every product delivered to the customer is safe.

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed of at the end of its life separately from your household waste. There are separate collection systems for recycling in your country.
For more information, please contact the local authority or your retailer where you purchased the product.
This product is fixed when installed and can be mounted on the wall.

Frequently Asked Questions (FAQ)

Q: How do I reset the Digital Signage to factory settings?

A: To reset the Digital Signage to factory settings, go to the settings menu, select "Reset," and confirm your choice. Note that this action will erase all data and settings on the device.

Q: Can I mount the Digital Signage on a wall?

A: Yes, the Digital Signage features VESA mounting options. Use appropriate VESA mounts compatible with the size of your Digital Signage to securely mount it on a wall.

Q: How do I adjust the volume on the Digital Signage?

A: Use the Volume + and Volume – buttons located on the exterior components of the Digital Signage to adjust the audio volume.

Documents / Resources

	SHENZHEN WF3285T Android Tablet [pdf] User Manual E0073, 2ABC5-E0073, WF3285T Android Tablet, WF3285T, Android Tablet, Tablet

References

- **User Manual**