Manuals+ — User Manuals Simplified.

3-SPARK ControlX Wireless Footswitch Amp User Guide
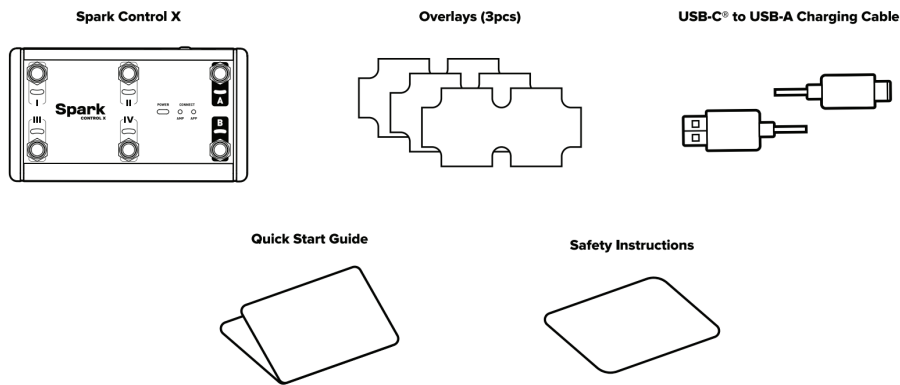
Positive Grid®
QUICK START GUIDE

Welcome to Spark Control X.
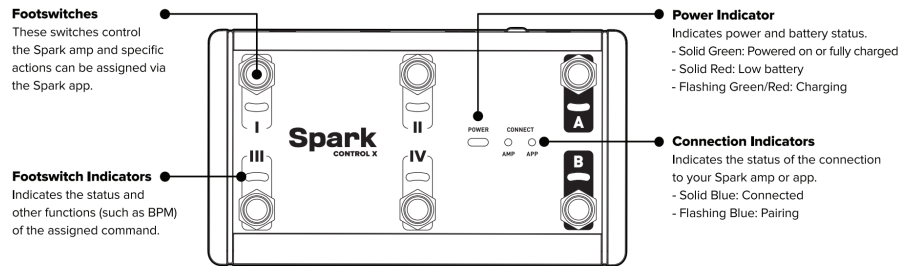Check out this guide to get maximum wireless control of your Spark series amp.

Contents

What's In The Box

Spark Control X   **Overlays (3pcs)**   **USB-C® to USB-A Charging Cable**

Quick Start Guide   **Safety Instructions**

Main Panel

Footswitches
These switches control the Spark amp and specific actions can be assigned via the Spark app.

Footswitch Indicators
Indicates the status and other functions (such as BPM) of the assigned command.

Power Indicator
Indicates power and battery status.
- Solid Green: Powered on or fully charged
- Solid Red: Low battery
- Flashing Green/Red: Charging

Connection Indicators
Indicates the status of the connection to your Spark amp or app.
- Solid Blue: Connected
- Flashing Blue: Pairing

Rear Panel

Bluetooth® Pair Button
Press to enter Bluetooth® pairing mode when connecting to your Spark amp.

Power Button
Hold to turn on or off Spark Control X.

Expression Pedal imputs
Connect expression pedals here to control Wah pedals, volume or any other effects in the Spark app.
*Compatible with TRS type expression pedals. Configuration can be done in the Spark app.

USB-C® Charging Port
Connect the supplied USB-C® to USB-A cable to charge Spark Control X.
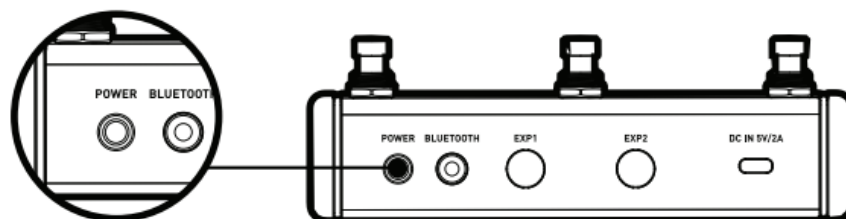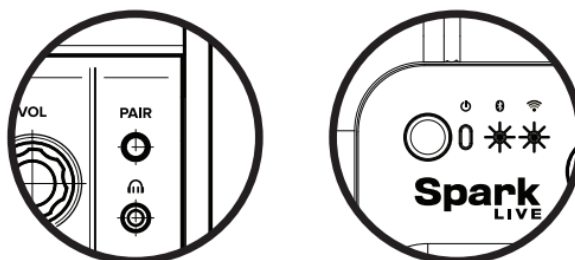
Connect Directly To Spark LIVE

Connect Spark Control X directly to your Spark LIVE for quick and easy wireless control.
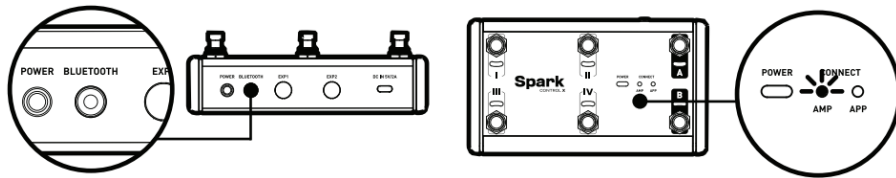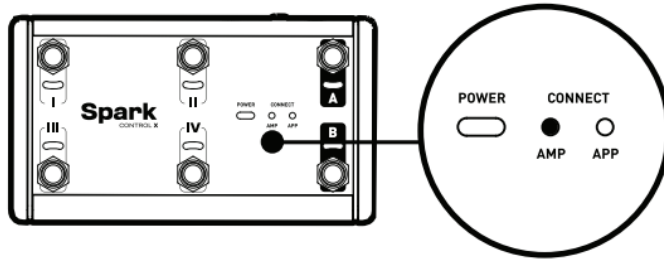
1. Turn on your Spark LIVE and Spark Control X.

2. Long press the Pair Button on the Rear Panel of Spark LIVE, until both Wireless Indicator LEDs on the Front Panel light up blue.

3. Press the Bluetooth Pair Button on the Rear Panel of Spark Control X and it will search for the nearest Spark amp as indicated by the flashing blue LED Connection Indicator on the Main Panel.
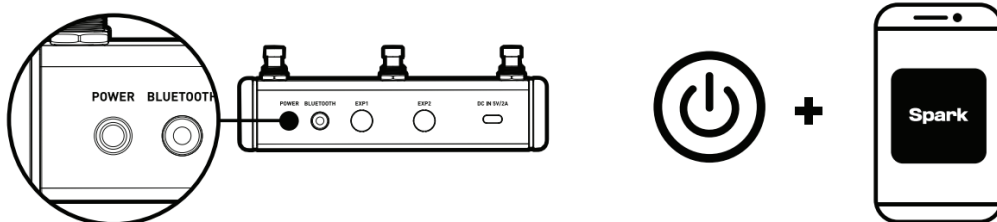
4. Upon successful connection, the Connection Indicator LED will become solid blue.

Connect To Your Spark Amp Through The Spark App

To take full advantage of all the customization options of Spark Control X, we recommend connecting through the Spark app.

1. Turn on your Spark amp, Spark Control X, and launch the Spark app on your mobile device.


2. Tap "Add Device" in the Settings menu of the Spark app and it will walk you through connecting your Spark Control X.

3. You can now customize the switches on your Spark Control X through the Spark app.

*If you are connecting to a Spark 40, Spark MINI, or Spark GO, you must connect Spark Control X through the Spark app.

The Overlays

Spark Control X comes with 3 transparent Overlays that can be used to label functions assigned to the footswitches and can be swapped easily. You may also use a marker to make any other notes or diagrams on the Overlays.
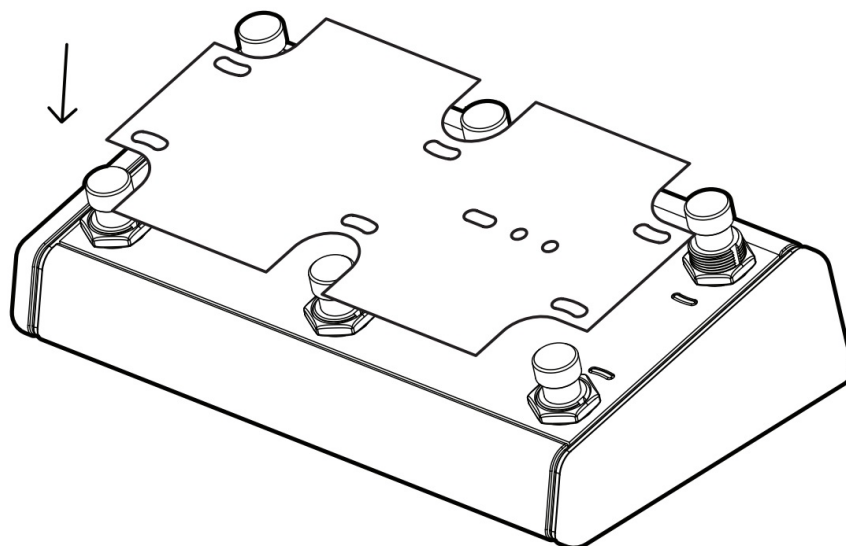
If using a dry erase marker, you can clean an Overlay by simply using a tissue or wiping cloth. If using a permanent marker, first remove the Overlay and wipe it down with an alcohol soaked tissue or wiping cloth.

To Use The Profiles

Spark Control X comes with a few pre-programmed profiles that are designed for players to use right out of the box. You can also edit the current profiles or add more files from the Spark app.

Profile 1

Spark amps \ Foot Switches	Switch 1	Switch 2	Switch 3	Switch 4	Switch A	Switch B	Exp. Pedal 1	Exp. Pedal 2
Spark LIVE	Switch To Preset 1	Switch To Preset 2	Switch To Preset 3	Switch To Preset 4	Switch Preset Page (Red/Green)	Switch To Next Preset	Input1 Guitar Volume	Music Volume
Spark 40	Switch To Preset 1	Switch To Preset 2	Switch To Preset 3	Switch To Preset 4	Switch To Previous Preset	Switch To Next Preset	Guitar Volume	Music Volume
Spark MINI and Spark GO	Switch To Preset 1 (Rhythm)	Switch To Preset 2 (Lead)	Switch To Preset 3 (Solo)	Switch To Preset 4 (CusTom)	Switch To Previous Preset	Switch To Next Preset	Guitar Volume	Guitar Volume

Profile 2

Spark amps \ Foot Switches	Switch 1	Switch 2	Switch 3	Switch 4	Switch A	Switch B	Exp. Pedal 1	Exp. Pedal 2
Spark LIVE	Toggle Gate On/Off	Toggle Comp/Wah On/Off	Toggle Drive On/Off	Toggle Mod/EQ On/Off	Toggle Delay On/Off	Toggle Reverb On/Off	Input1 Guitar Volume	Music Volume
Spark 40, Spark MINI, and Spark GO	Toggle Gate On/Off	Toggle Comp/Wah On/Off	Toggle Drive On/Off	Toggle Mod/EQ On/Off	Toggle Delay On/Off	Toggle Reverb On/Off	Guitar Volume	Guitar Volume

Profile 3

Spark amps \ Foot Switches	Switch 1	Switch 2	Switch 3	Switch 4	Switch A	Switch B	Exp. Pedal 1	Exp. Pedal 2
Spark LIVE					Long Press To Switch To Previous Profile	Long Press To Switch To Next Profile		

Positive Grid®

Visit our online Help Center for user manuals, FAQs, or to contact our support team: help.positivegrid.com

@positivegrid
positivegrid.com

Documents / Resources

Spark 3-SPARK ControlX Wireless Footswitch Amp [pdf] User Guide
3-SPARK ControlX wireless Footswitch Amp, 3-SPARK, ControlX wireless Footswitch Amp, wireless Footswitch Amp, Footswitch Amp

References

- **User Manual**