Manuals+ — User Manuals Simplified.

thecoopidea CP-KB01 TAPPY Wireless Keyboard Set – Hello Kitty User Manual

thecoopidea

Model: CP-KBO1

**USER MANUAL TAPPY
WIRELESS KEYBOARD & MOUSE SET**

Contents

Inside the Box

1. TAPPY Wireless Keyboard x1 (Battery Not Included)
2. TAPPY Wireless Mouse x 1 (Battery Not Included)
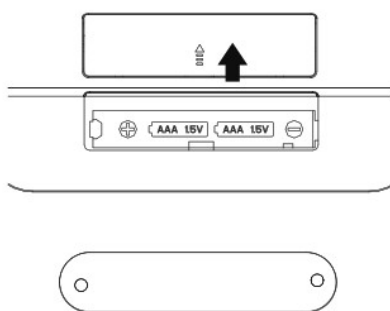3. Mouse Pad x 1

4. User Manual
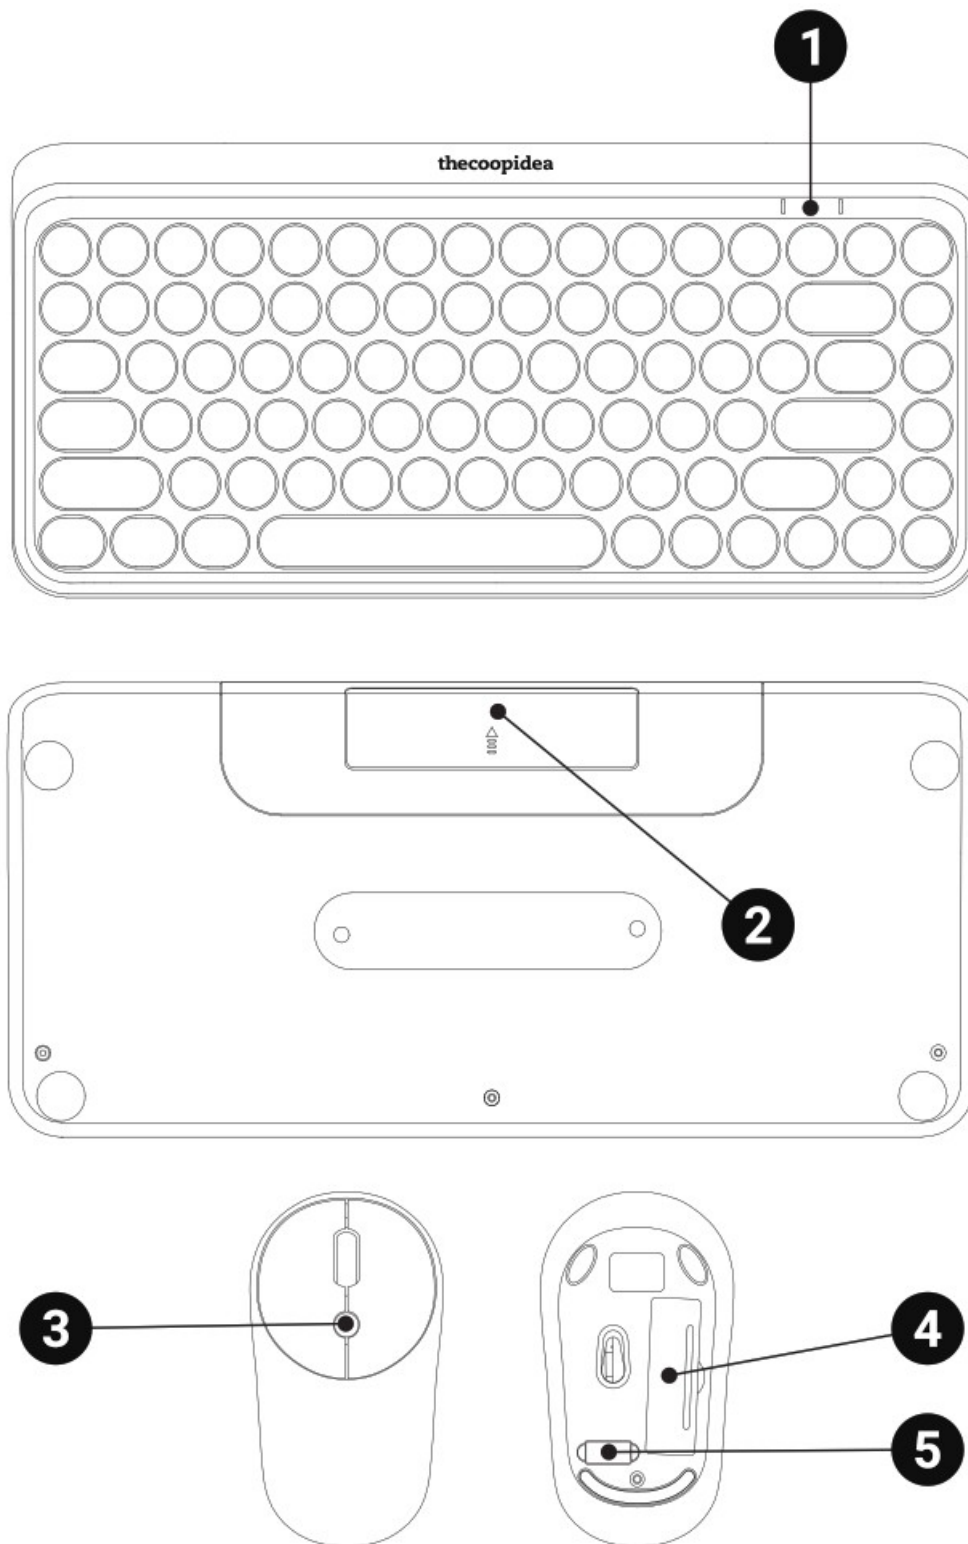
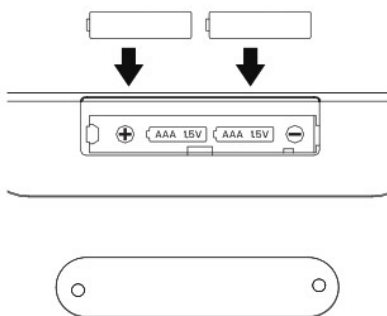|	
1. LED Indicator 2. Battery Compartment (AAA Battery) 3. DP! switcher	4. Battery Compartment (AA Battery) 5. Mini Connector

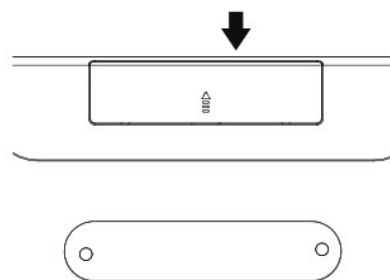## Keyboard Batteries Installation

Please prepare 2 AAA alkaline batteries.

1. Open the cover of battery compartment.

2. Insert 2 AAA alkaline batteries into the battery compartment.

3. Close the battery compartment cover.

Mouse Battery Installation

Please prepare one AA alkaline battery.
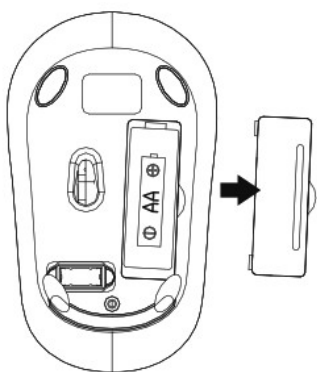
1. Open the cover of battery compartment.

2. Insert one AA alkaline battery into the battery compartment.

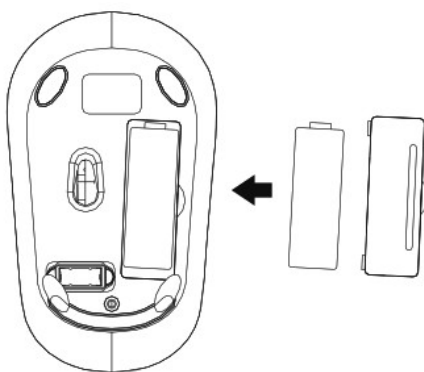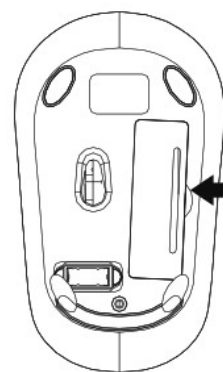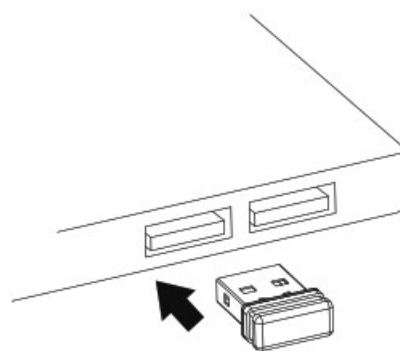3. Close the battery compartment cover.

Connecting To Device

1. Take the Mini Connector out from the Wireless Mouse.

2. Plug in the Mini Connector to the USB port of the device.

** TAPPY Wireless Mouse and Keyboard should be connected automatically.

Energy Saving Mode

TAPPY Wireless Mouse automatically goes into energy saving mode when: Mini Connector is not plugged into any device, or the mouse is no longer in use after 30 minutes. Whith the energy saving mode turned on, the mouse switches to sleep mode after 8 mintues. To get the mouse out of energy saving or sleep mode, please use the scroll wheel or click any buttons to resume using the mouse.

Keyboard Hotkeys

FN + ESC = Media Player
FN+F1 = Play/Pause
FN+F2 = Previous Track
FN+F3 = Next Track
FN+F4 = Volume Up
FN+F5 = Volume Down
FN+F6 = Mute
FN+F7 = Web Home
FN+F8 = Search
FN+F9 = My Favorite
FN +F10 = Mail
FN+F11 = Key Lock
FN +F12 = My Computer

Safety Note

- Protect the product from dirt, moisture and overheating and use in dry rooms only.
- Do not drop the product and do not expose it to any major shocks.
- Do not operate the product outside the power limites given in the specifications.
- Do not modify the product in any way. Doing so voids the warranty.
- Do not continue to operate the product if it becomes visibly damaged.
- Use the product for its intended purpose only.
- Keep this product, as all electrical products, out of the reach of children.
- Do not use the product in the immediate vicinity of heaters or other heats sources or in direct sunlight.
- Dispose of packaging material immediately according to locally applicable regulations.
- Please do not use any alcohol to cleanup the printing area of the product.

Specifications

```
Battery Type : Keyboard      : 2 x AAA Alkaline Batteries
               Mouse         : 1 x AA Alkaline Battery
Dimensions  : Keyboard      : 32 x 15 x 3 cm (L x W x H)
               Mouse         : 11 x 6 x 3.5 cm (L x W x H)
               Mouse Pad  : Pikachu : 58.3 x 26.5 cm (L x W)
                            Eevee    : 62.9 x 28.4 cm (L x W)
                            Snorlax  : 56 x 20.8 cm (L x W)
Net Weight  : Keyboard      : 490g
               Mouse         : 59g
               Mouse Pad  : Pikachu : 156g
                            Eevee    : 160g
                            Snorlax  : 146g
DPI                          : 1200
Wireless Frequency Bands : 2.4 GHz
```

Warranty Terms & Conditions

The product comes with a factory warranty of twelve (12) months from the date of purchase. Your product is in perfect condition. In the event where a replacement umit is needed, the owner must provide the original receipt of purchase in order to grant replacement, providing the defect falls under warranty terms. If your unit has been disassembled or repaired without the manufacturer's authorization, the warranty will be immediately voided. The owner is responsible for any fee and charges of delivering the unit back to the agent or manufacturer.

Explanation Of Warning Symbols & Notes

$C\epsilon$ This product is compliant with the CE directive.

RoHS This product is compliant with RoHS (Restriction of Hazardous Substances Directive 2002/95/EC).

▬ ▬ ▬ This symbol indicates direct current.

Do not dispose of your peoduct with other household waste. Please act according to local rules on the separate collection of electrical and electrionic products and batteries. The correct disposal of those products helps prevent potentially negative consequences on the environment and human health.

Documents / Resources
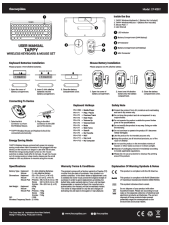
thecoopidea CP-KB01 TAPPY Wireless Keyboard Set - Hello Kitty [pdf] User Manual
CP-KB01 TAPPY Wireless Keyboard Set - Hello Kitty, CP-KB01, TAPPY Wireless Keyboard Set
- Hello Kitty, Wireless Keyboard Set - Hello Kitty, Keyboard Set - Hello Kitty, Hello Kitty