typecase KB206-12.9 Edge Magnetic Keyboard Case User Manual

typecase®
EDGE
compatible with
iPad Pro 12.9

For warranty registration and product support:

typecase.co/resources	+1(832) 303-5080	support@typecase.co

Contents

TECHNICAL SUPPORT

If you encounter any difficulties or have inquiries, please do not hesitate to reach out to us at your earliest convenience
For the quickest and most efficient support experience, please contact us directly through one of the following channels, rather than through Amazon

1. Email: **support@typecase.co**
2. Phone: 832- 303 – 5080
3. Chat: **https://typecase.co/support**

COMPATIBILITY

Compatible with iPad0s 13 (and newer). We recommend updating your iPa0d0St0 16 For best performance
To check your iad system version:

1. Goto Settings >General > About > Software version
2. Upgrade your version to 1ad0s 16 or above to use the touchpad function correctly
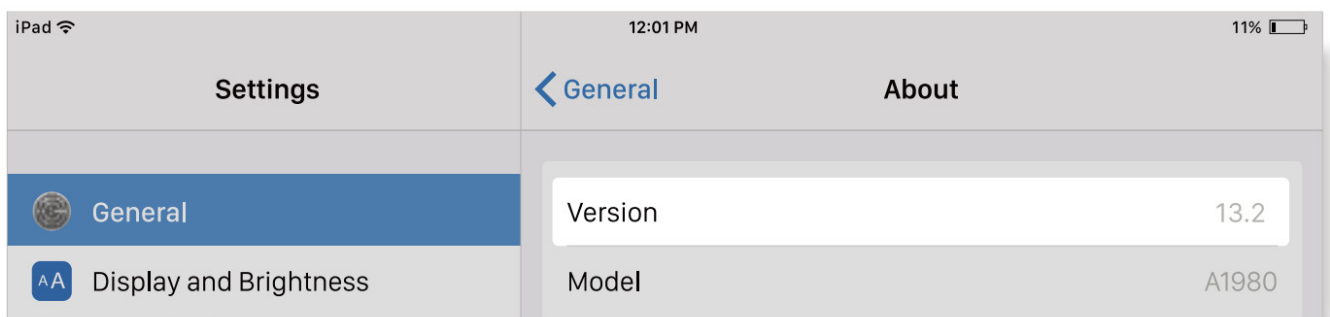
To upgrade your iPad0S to the latest version:

1. 0pen your device's Settings ⚙ General> Software Update
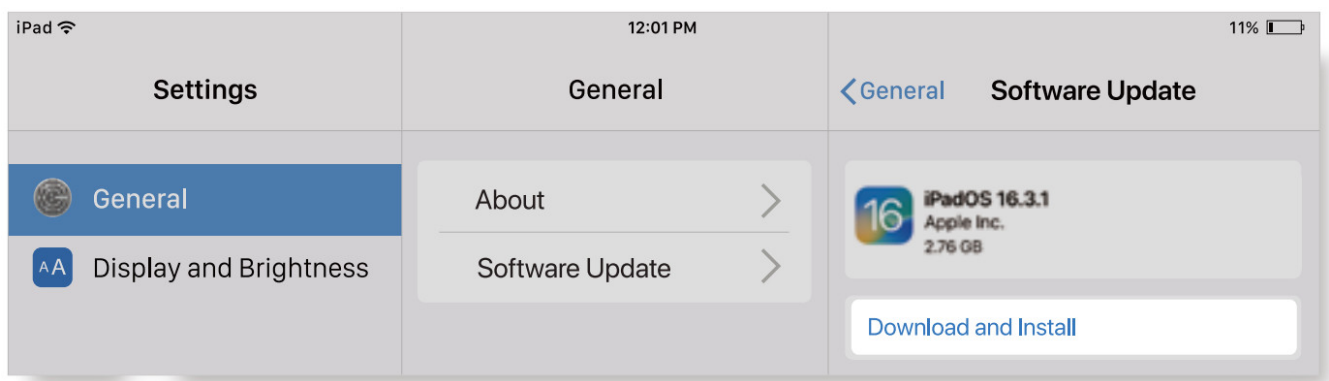
2. Tap Download and Install
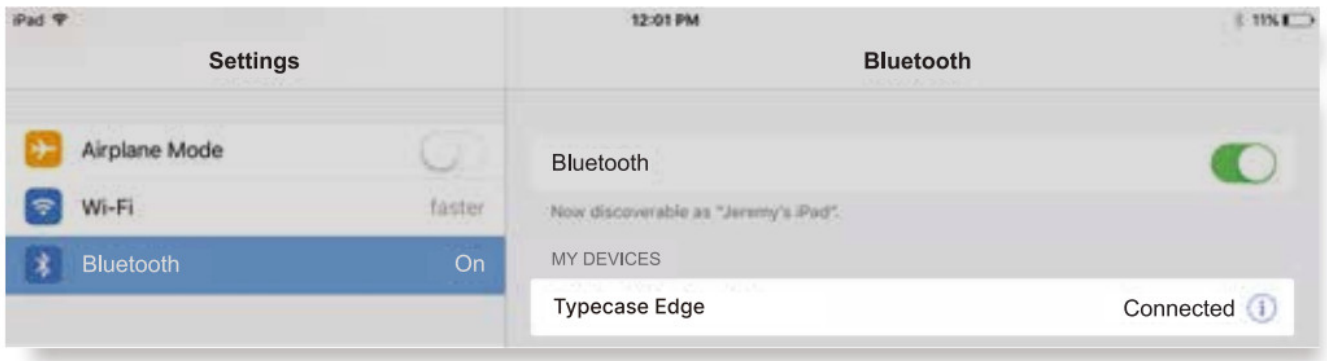
   If you see Resume Download, tap that instead

SETUP

To pair with your iPad

1. Long Press ⏻ tor2 seconds, the Power indicator will be on for 3 seconds
2. The Bluetooth indicator light will start to blink.

   If it doesn't, hold down the Cl button for 2 seconds.

3. Go to the Settings 🔗 and turn on Bluetooth, (The device is connected when the Bluetooth indicator stops flashing.)
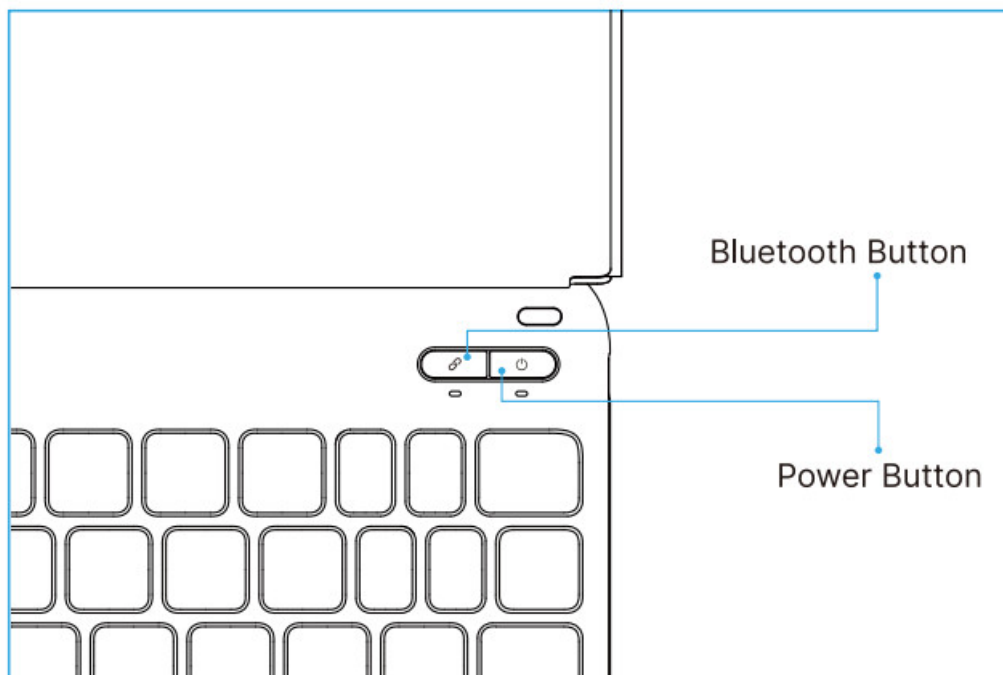
4. In the Bluetooth section of the Settings app, select Typecase EDGE under MY DEVI ES:

5. Tap Pair' in the pop -up window as shown
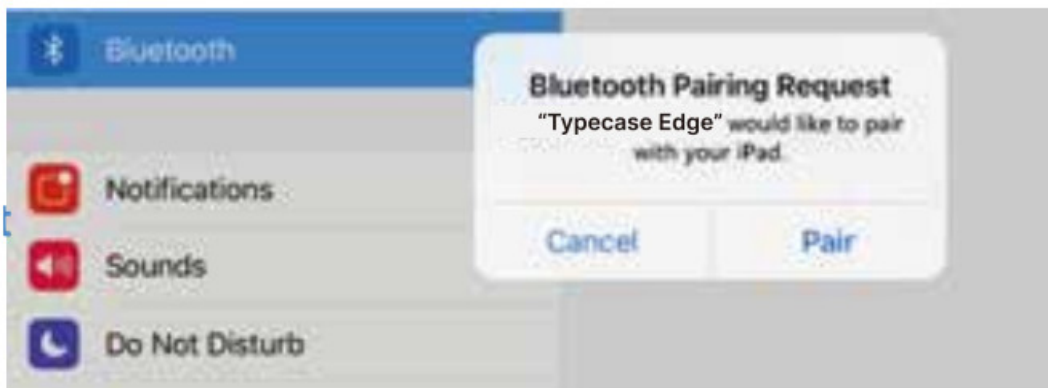
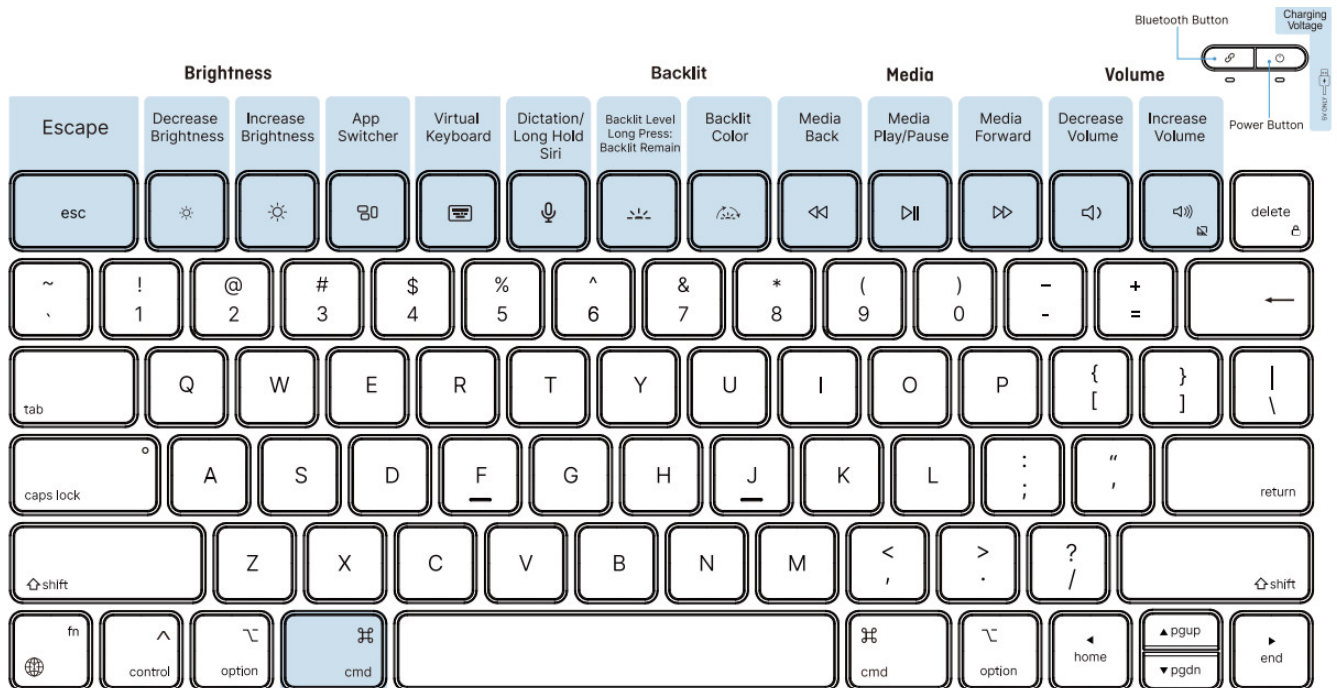The pairing process is complete when you see the Connected' indicator

If your system is 13.3.1, please follow the steps to enable touchpad function:

1. GotoSemngs⊚ Access1b1l1fy > Touch.

2. Make sure Assistive Touch option is turned 0n
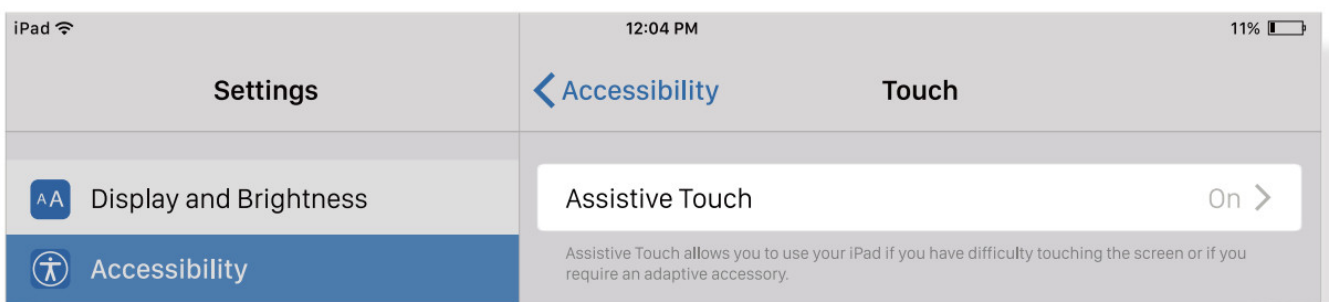
SHORTCUT MAP

Notice: Long Press ⌘Brightness in any app to view available shortcuts.

Bluetooth Button

Charging Voltage

Brightness **Backlit** **Media** **Volume**

| Escape | Decrease Brightness | Increase Brightness | App Switcher | Virtual Keyboard | Dictation/ Long Hold Siri | Backlit Level Long Press: Backlit Remain | Backlit Color | Media Back | Media Play/Pause | Media Forward | Decrease Volume | Increase Volume | Power Button |

esc · ☼ · ☼ · ⌘ · ⌨ · 🎤 · ⌖ · 🔅 · ◄◄ · �❚ · ►► · ◁) · ◁)) · delete

Power Button

~ ` | ! 1 | @ 2 | # 3 | $ 4 | % 5 | ^ 6 | & 7 | * 8 | (9 |) 0 | – - | + = | ←

tab | Q | W | E | R | T | Y | U | I | O | P | { [| }] | | \

caps lock | A | S | D | F | G | H | J | K | L | : ; | " ' | return

shift | Z | X | C | V | B | N | M | < , | > . | ? / | shift

fn 🌐 | ^ control | ⌥ option | ⌘ cmd | (space) | ⌘ cmd | ⌥ option | ◄ home | ▲ pgup ▼ pgdn | ► end

Keyboard

🌐 + delete = Lock Screen

fn + 📱 = Disable the trackpad

C + R + L = Reset the keyboard

Long Press - App specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)

⌖ = Backlight Brightness(low, medium, high, off)

🔅 = Change backlight color

System

🌐 + H = Go to Home Screen

⌘ + H = Go to Home Screen

🌐 + Q = Quick Note

🌐 + A = Show Dock

🌐 + C = Control Center

🌐 + N = Notification Center

🌐 + M = Show Keyboard Shortcuts

🌐 + S = Siri

🌐 + shift + A = Show App Library

⌘ + shift + # 3 = Screenshots

⌘ + shift + $ 4 = Screenshots and Markup

⌘ + ⌥ option + D = Show Dock

⌘ + (space) = Search

⌘ + tab = Switch App

Multitasking

🌐 + ▲ pgup = App Switcher

🌐 + ▼ pgdn = Show All Windows

🌐 + home = Previous App

🌐 + end = Next App

Split View

🌐 + control + home = Tile Window Left

🌐 + ^ control + end = Tile Window Right

🌐 + ~ = Next Window

🌐 + F = Enter Fullscreen

Slide Over

🌐 + ⌥ option + home = Move to Left Slide Over

🌐 + ⌥ option + end = Move to Right Slide Over

🌐 + | = Show Slide Over

⌘ + 🌐 + | = Next Slide Over Window

Edit

⌥ option + home = Jump to last word

⌥ option + end = Jump to next word

^ control + ▲ pgup = Jump to top of the page

^ control + ▼ pgdn = Jump to bottom of the page

^ control + home = Jump to begin of the line

^ control + end = Jump to end of the line

^ control + (space) = Switch language and typewritingspace

⌘ + A = Select All

⌘ + X = Cut

⌘ + C = Copy

⌘ + V = Paste

⌘ + Z = Undo Typing

⌘ + F = Find

🌐 + D = Dictation

🌐 + E = Emoji

Format

⌘ + B = Bold

⌘ + I = Italic

⌘ + U = Underline

Symbol

⌥ option + R = ®
⌥ option + > = ≥
⌥ option + J = Δ
⌥ option + Z = Ω
⌥ option + S = ß

⌥ option + G = ©
⌥ option + < = ≤
⌥ option + P = π
⌥ option + X = ≈
⌥ option + W = Σ

⌥ option + = = ≠
⌥ option + ? = ÷
⌥ option + V = √
⌥ option + M = µ
⌥ option + % 5 = ∞

TOUCHPAD FUNCTION

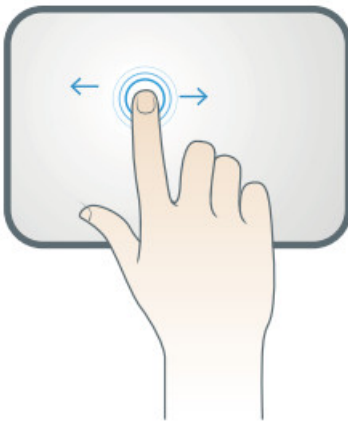**Notice:** Make sure bluetooth connected and touch pad function turned on!

Tap

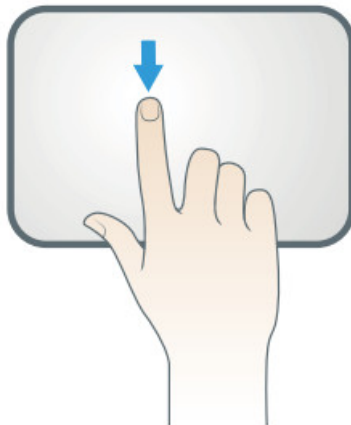Tap with a single finger until it feels a little touch feeling.
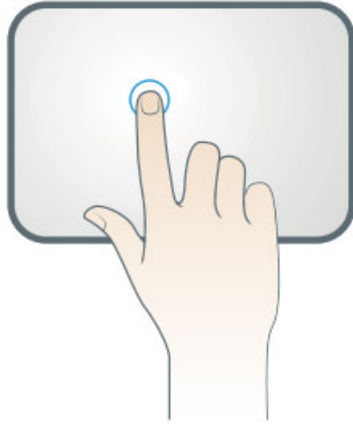
Drag
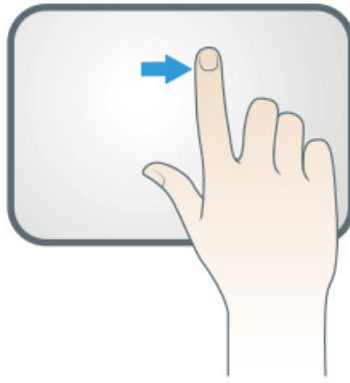Tap and hold an item, then swipe your finger across the trackpad to move it.

Open Program Expansion Dock
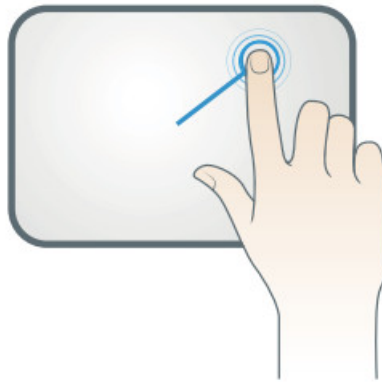Swipe the pointer across the bottom of the screen with one finger.

View Slide Over
Use one finger to swipe the pointer past the right edge of the screen. To hide Slide Over, swipe right again.
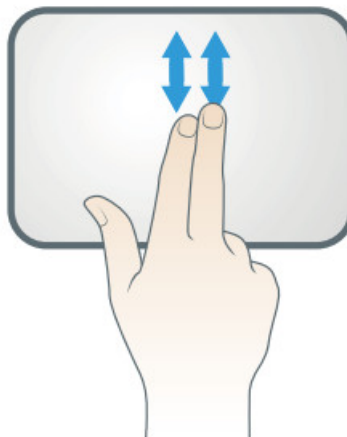
Open Control Center
Use one finger to move the pointer to select the status icons at the top right, then click.
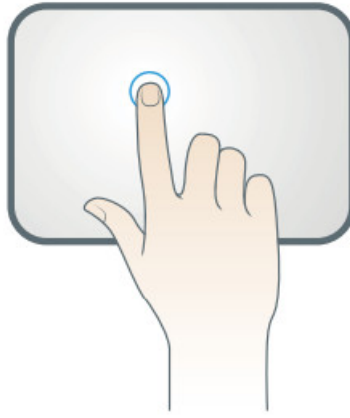Or, select the status icons at the top right, then swipe up with one finger.

Move Up Or Down
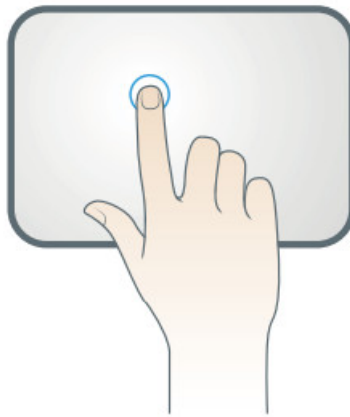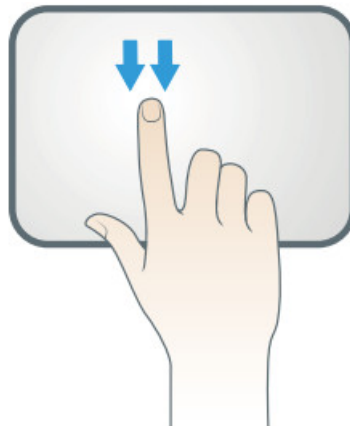Swipe up or down with two fingers.

**Tap and Hold**
Tap and hold with a single finger.

Awake
Click the touchpad or press any key on the keyboard.

Go To Home Screen
Swipe the pointer across the bottom of the screen with one finger, and when the Dock appears, swipe the pointer across the bottom of the screen again.
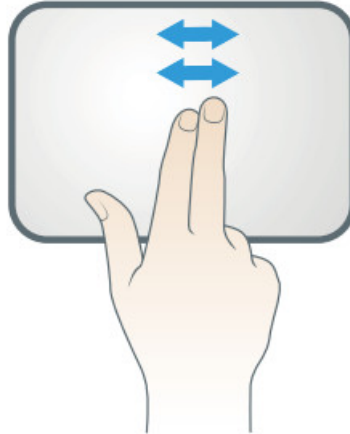
Open Notification Center
Use one finger to move the pointer to select the status icons at the top left, then click.
Or, use one finger to move the pointer past the top of the screen near the middle.
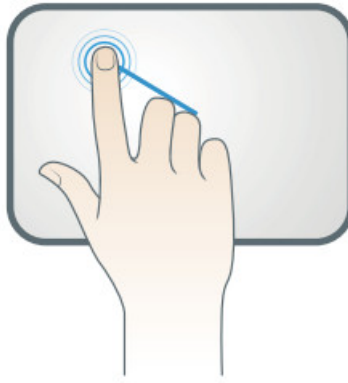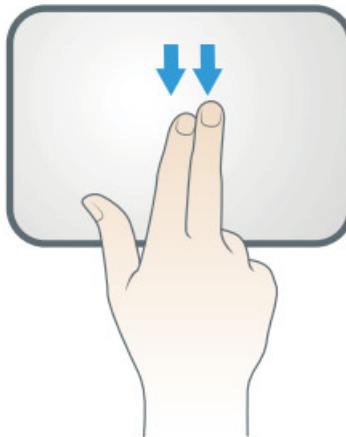
Move Left Or Right
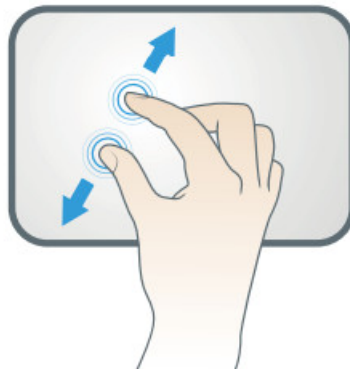Swipe left or right with two fingers.

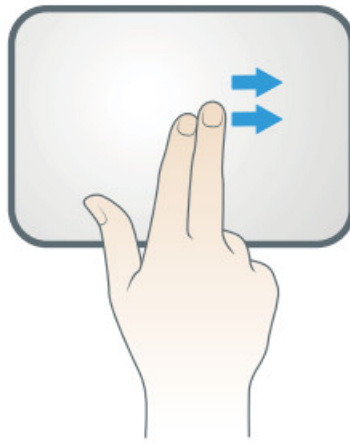**Open Searching From Home Screen**
Swipe down with two fingers.

Zoom
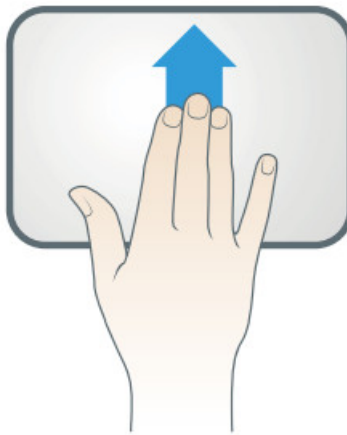Place two fingers close together, open to enlarge, or pinch to zoom out.

Open"Today" View
When the Home or Lock screen is visible, swipe right with two fingers.
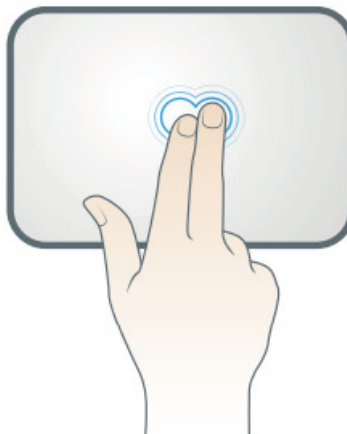
Open APP Switcher
Swipe up with three fingers, pause and lift your finger.

Secondary click
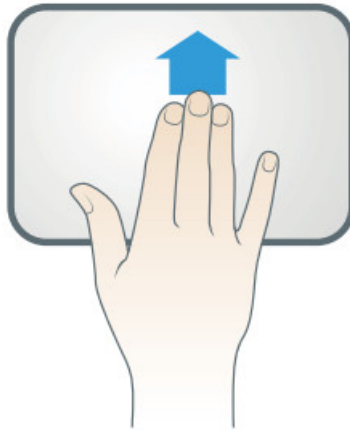Click with two fingers to show the quick actions menu for items like icons on the Home Screen, messages ina mailbox, and the Camera button in Control Center.
Or, you can press the Control key while you click the trackpad.
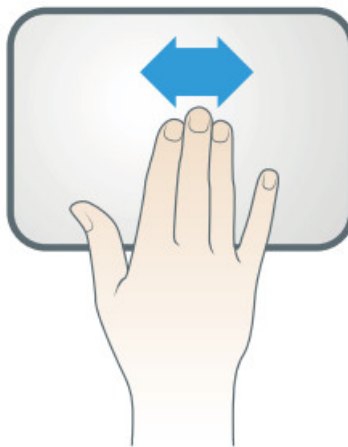
Go To Home Screen
Swipe up with three fingers.

Shift Between
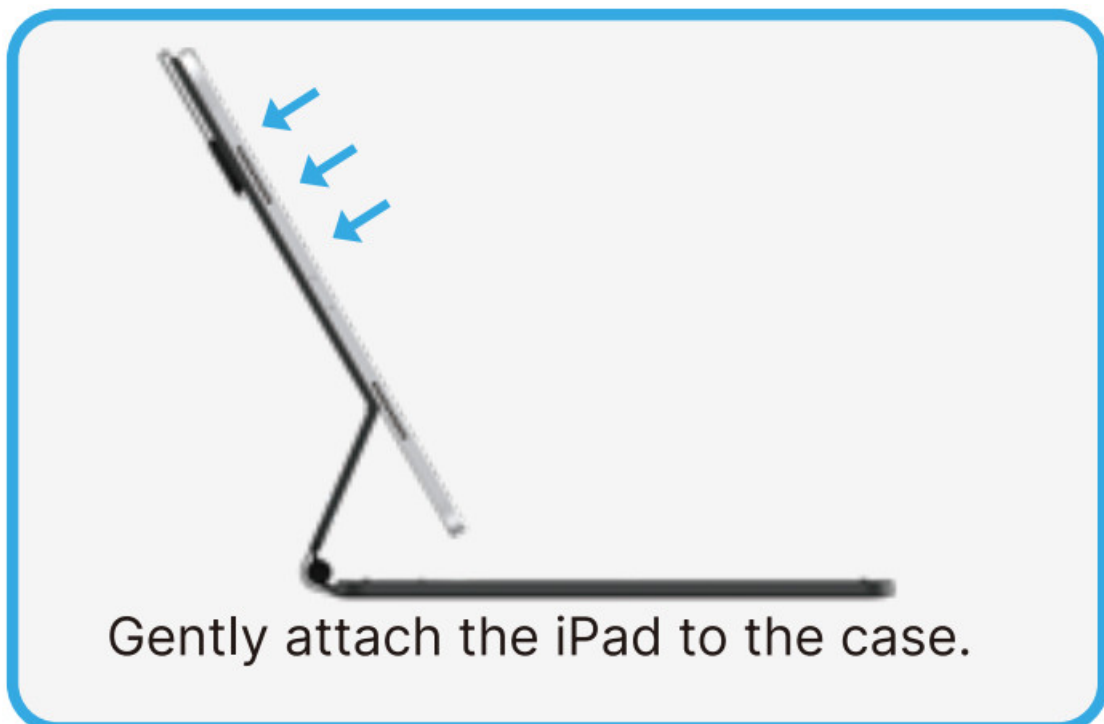The Open APP
Swipe left or right with three fingers.

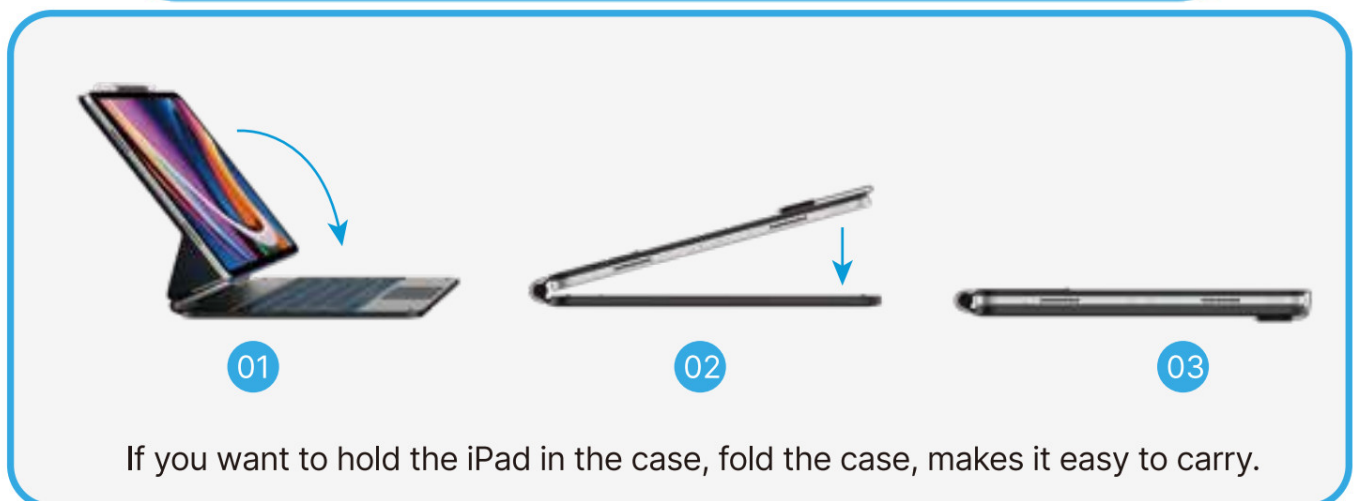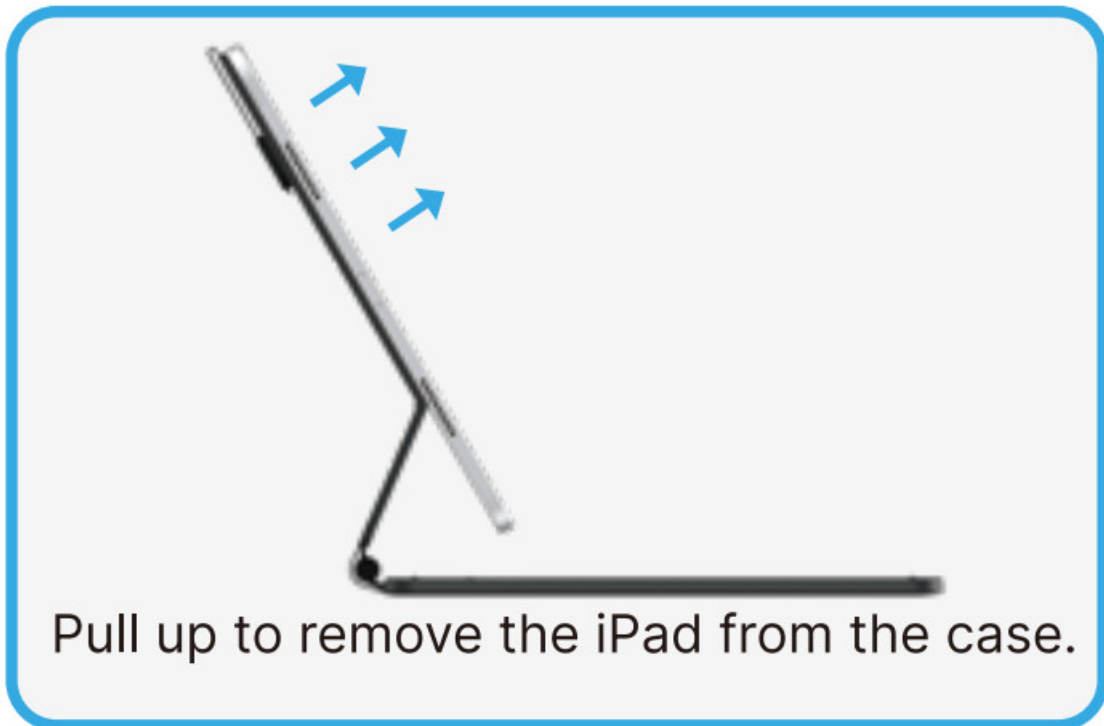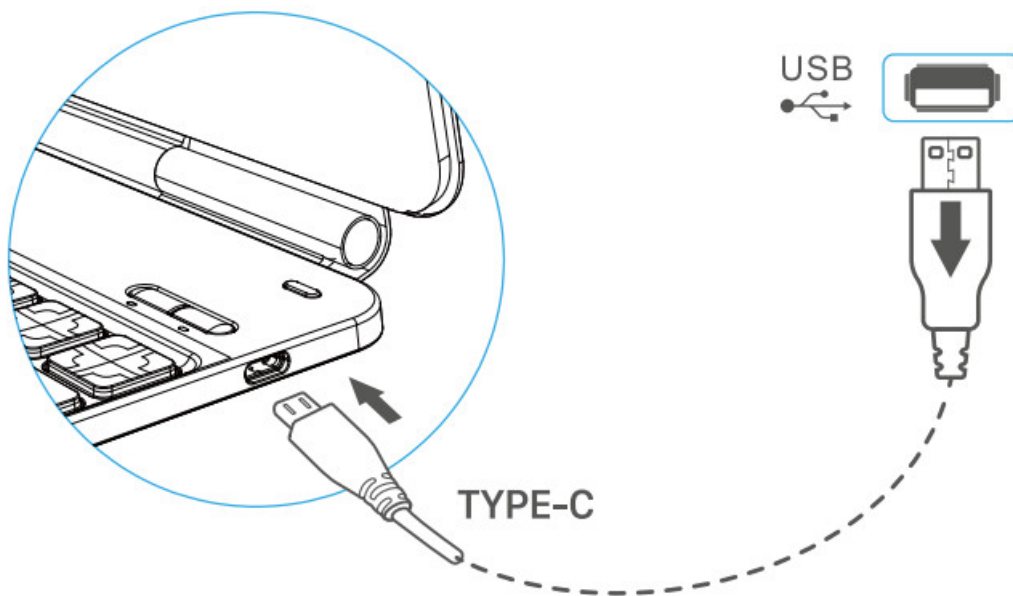# INSTALLATION AND REMOVAL

Installation

Gently attach the iPad to the case.

Removal

Pull up to remove the iPad from the case.

01

02

03

If you want to hold the iPad in the case, fold the case, makes it easy to carry.

CHARGING

USB

TYPE-C

iPad adapters

1. Switch on the keyboard (if battery light is flashing, please charge the keyboard)
2. Plug the charging cable (included) into the keyboard and power adapter (not included, ad or ihone power adapter recommended),
   a) Battery indicator turns red when keyboard is charging
   b) Battery indicator turns blue when charging is complete

TROUBLESHOOTING

If the keyboard is not working correctly, please check the following

1. The Bluetooth function on the ad (or other Bluetooth devices) is enabled,
2. The Bluetooth keyboard is within 33 feet,
3. The Bluetooth keyboard is charged,
4. Make sure the keyboard is turned on (the battery indicator is illuminated),
5. Press the key ⌨🔗 and check the Bluetooth status;
6. Make sure a keyboard has already paired via Bluetooth

If you are encountering unwanted cursor move when typing, or some keys like 7,8,9,U,0,J,K,L cannot be entered,

please Turn OFF AssistiveTouch> Mouse Keys as follows:

1. On your iPad, go to Settings » Accessibility and select Touch.
2. Select Assistive Touch, then select Mouse Keys.
3. Turn Off Mouse Keys

If ou have unwanted auto-correction or punctuation, please follow these steps:

1. Open Settings app General> Keyboard Hardware Keyboard
2. Toggle OFF Auto-Capitalization, Auto-Correction, and." shortcut (please refer to the picture below)
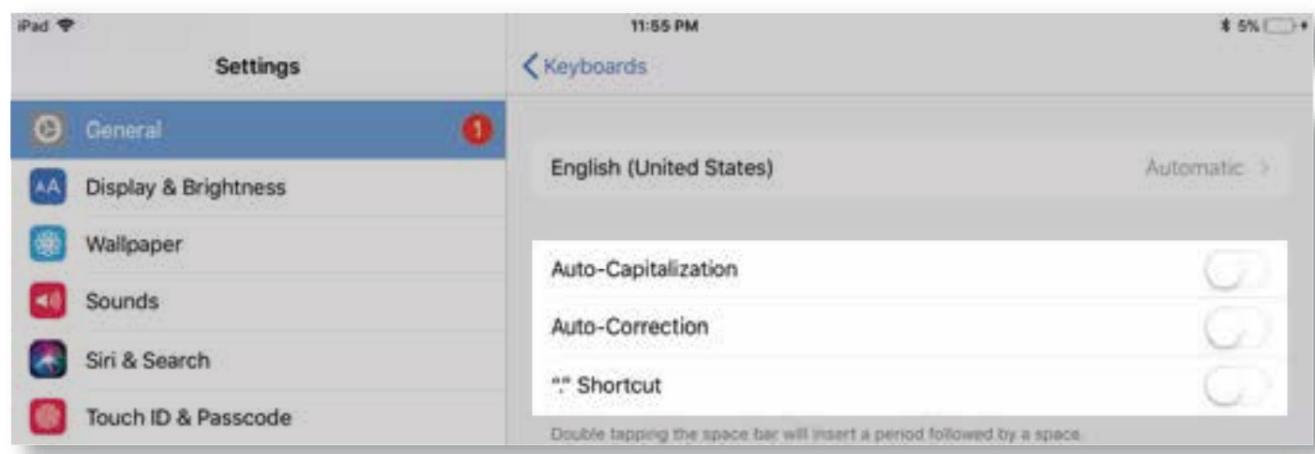
If Bluetooth pairing fails, please try the following steps:

1. Remove al Bluetooth devices on your iPad,
2. Switch off the Bluetooth function on your iad;
3. Reboot the iad
4. Turn on the Bluetooth on your iPad,
5. Switch the keyboard off and on;
6. Repeat the steps described on page 2 and 3 to pair the keyboard

PRODUCT SPECS

Operating distance: 10 meters (33 feet)
Modulation System GFSK
Working voltage: 3.0-4.2V
working current: 0.88-3.85m4
Sleeping current:> 125A
Charging current: 500-80mA
Continuous working time without backlight: 60 h0urs
Charging time: <5hours
Charging voltage: 5V

Key's life span: 5 million strokes
Operating temperature: -10 ±55C
Maintenance: Please preserve the keyboard under normal temperature and recharge under normal voltage

IC CAUTION

This device complies with Industry Canada licence-exempt RSS standard(s).
Operation is subject to the following two conditions: (1) This device may not cause interfer ence,and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
*RF warning for Mobile device:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Documents / Resources

typecase KB206-12.9 Edge Magnetic Keyboard Case [pdf] User Manual
KB206-12.9 Edge Magnetic Keyboard Case, KB206-12.9, Edge Magnetic Keyboard Case, Magnetic Keyboard Case, Keyboard Case, Case

References

- **User Manual**