Manuals+ — User Manuals Simplified.

WZATCO Pixel Projector User Manual

Contents

WZATCO Pixel Projector

Product Information

The PIXEL HD-PORTABLE PROJECTOR is a compact and lightweight projector designed for high-definition video and movie projection. It features a camera lens, a speaker, audio output, a remote receiver, power input, and various AV connections. The projector is compatible with mobile hard disks, USB drives, computers, play stations, TV boxes, HD DVDs, headsets, loudspeaker boxes, and DVDs. It weighs 0.48 kg and has a recommended projection distance of 1.1m to 5.0m.
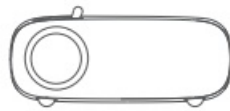
Product Usage Instructions

To use the PIXEL HD-PORTABLE PROJECTOR, follow these steps

1. Connect the projector to a power source using the power input.
2. If using a remote, make sure it is pointed directly at the IR receiver on the projector and that there are no obstructions covering the receiver. Replace the battery if needed.
3. Connect the desired device (mobile hard disk, USB drive, computer, etc.) to the projector using the appropriate A connection.
4. Adjust the focus by rotating the focus ring until the projected image is clear.
5. If the projection image appears upside down, enter the menu on the projector or use the remote to flip the image.

Troubleshooting Guide

1. **Blurry Image:** Adjust the focus ring until the projected image is clear. Ensure that the projector and screen/wall are within the effective distance.
2. **Remote Unresponsive:** Make sure the remote is pointing directly at the IR receiver on the projector. Do not cover the IR receiver. Replace the battery if necessary.
3. **Mobile Connection:** For iOS devices, use a genuine lightning to HD cable. For Android devices, use a Micro USB to HD adapter or a Type C to HD cable.
4. **Upside Down Images:** Enter the menu on the projector or use the remote to flip the projection image.

PACKING LIST

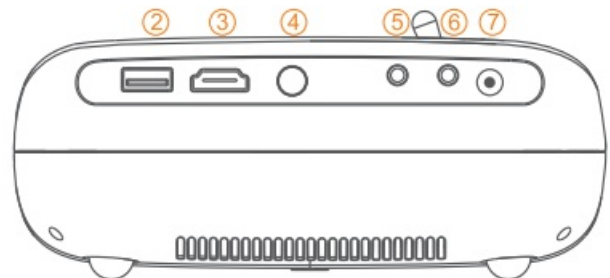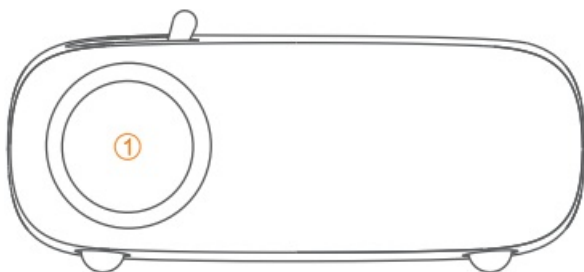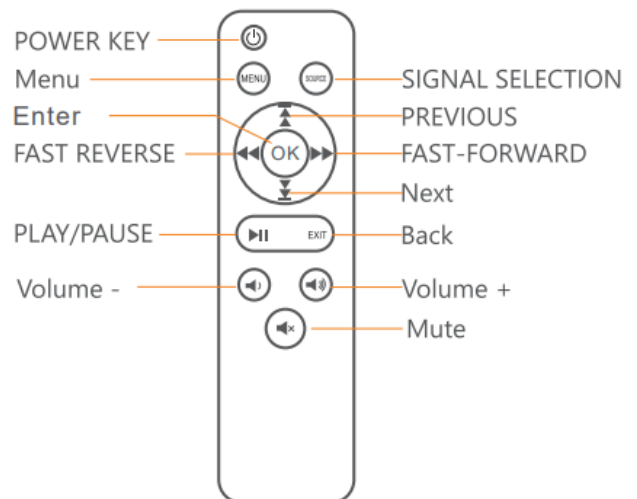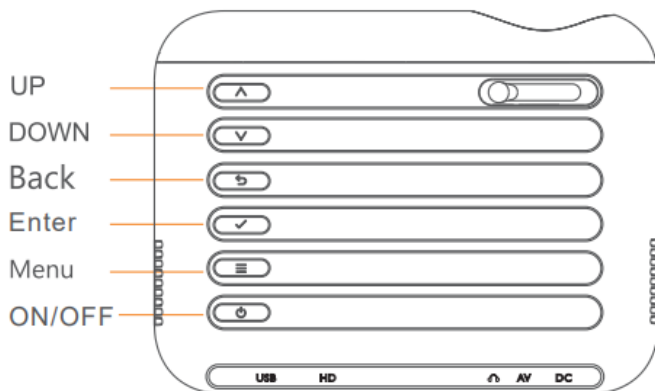① Projector ② Remote

③ User Manual ④ AV Cable

⑤ HD Cable ⑥ Power

FUNCTION OVERVIEW

UP
DOWN
Back
Enter
Menu
ON/OFF

USB HD 🎧 AV DC

POWER KEY
Menu — MENU SOURCE — SIGNAL SELECTION
Enter — PREVIOUS
FAST REVERSE — ◀◀ OK ▶▶ — FAST-FORWARD
Next
PLAY/PAUSE — ▶II EXIT — Back
Volume - — 🔊 🔊 — Volume +
🔇 — Mute

① (Camera Lens)

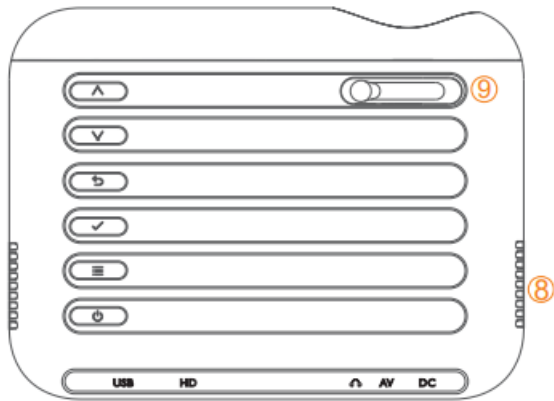② ③ ④ ⑤ ⑥ ⑦

1. Camera Lens
2. USB
3. HD IN
4. Audio Out
5. Remote receiver
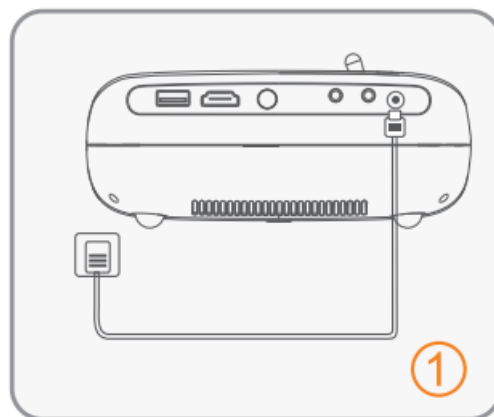6. AV IN
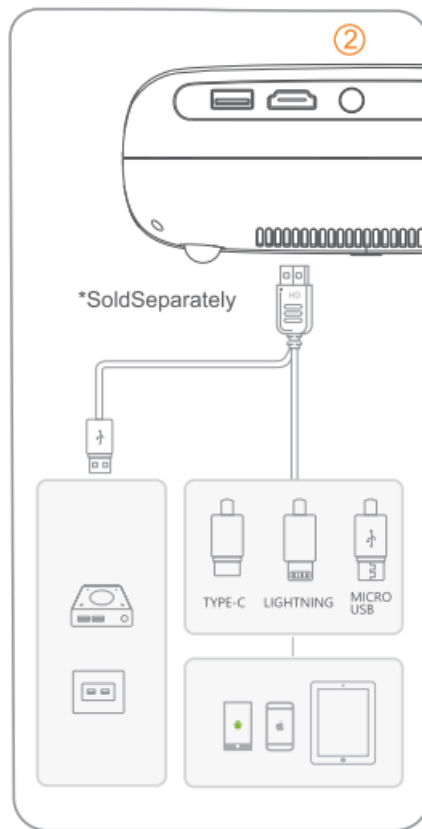
7. Power in Put

USB   HD   ∩ AV   DC
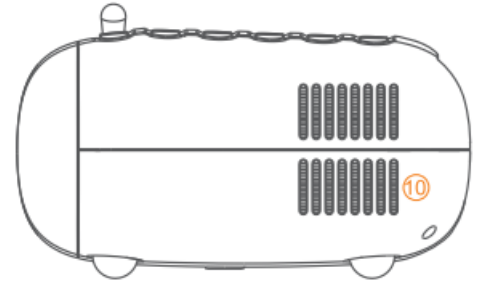
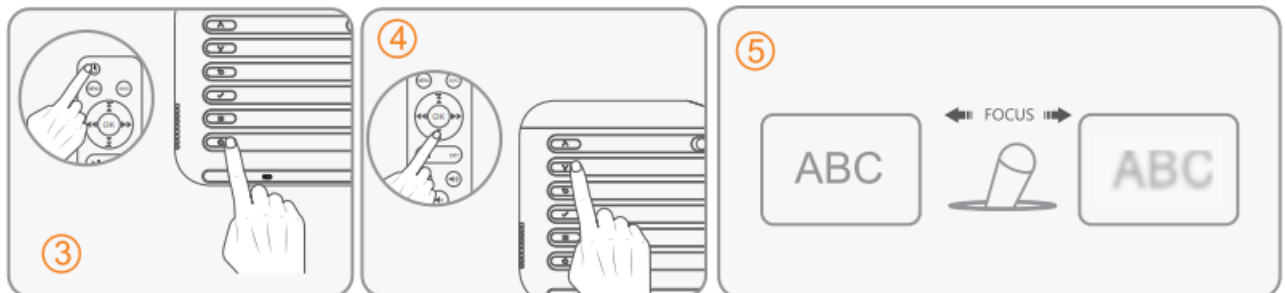8. Speaker

9. Focus

10. Air outlet

QUICK START

1. Plug the power cord into anoutlet.

2. Connect your device to the projector correctly.

*SoldSeparately

TYPE-C   LIGHTNING   MICRO USB

3. Press the power button to turn on the projector

4. Choose the right type of program to play.

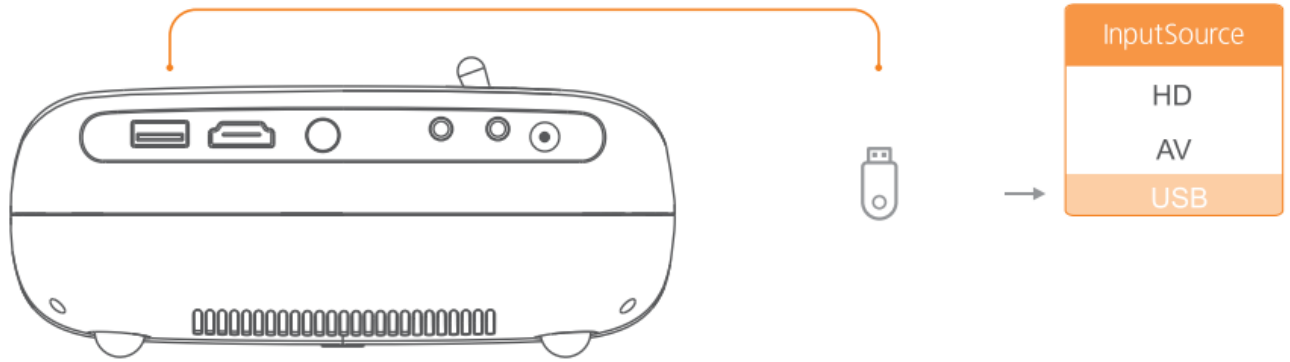5. Adjust the focus ring to get the best image performance.

FOCUS

ABC   ABC

6. Adjust the kickstand accordingly.

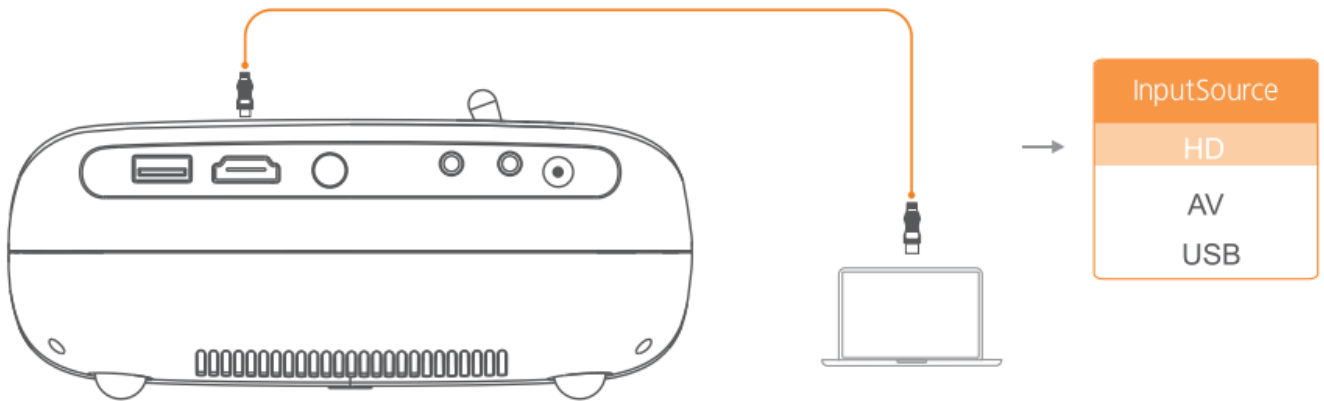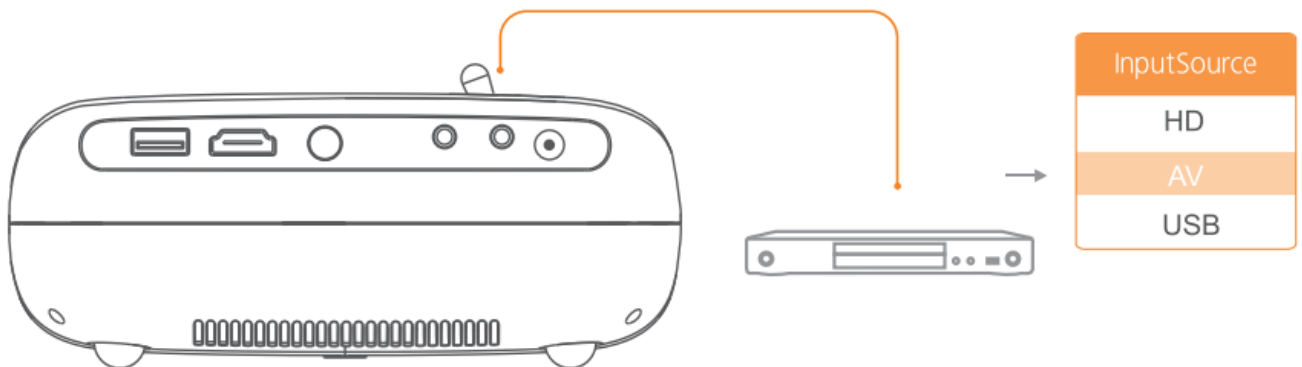7. Press the power button twice to turn off the projector.

INPUT SOURCE

- Multimedia Connection

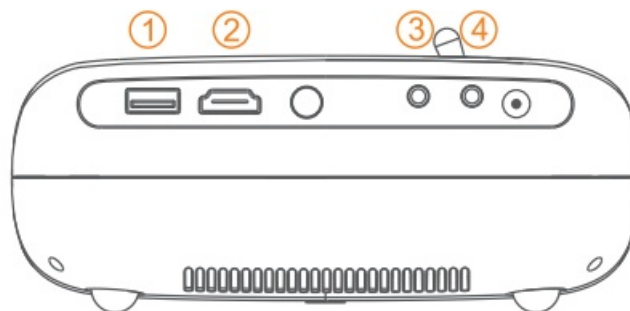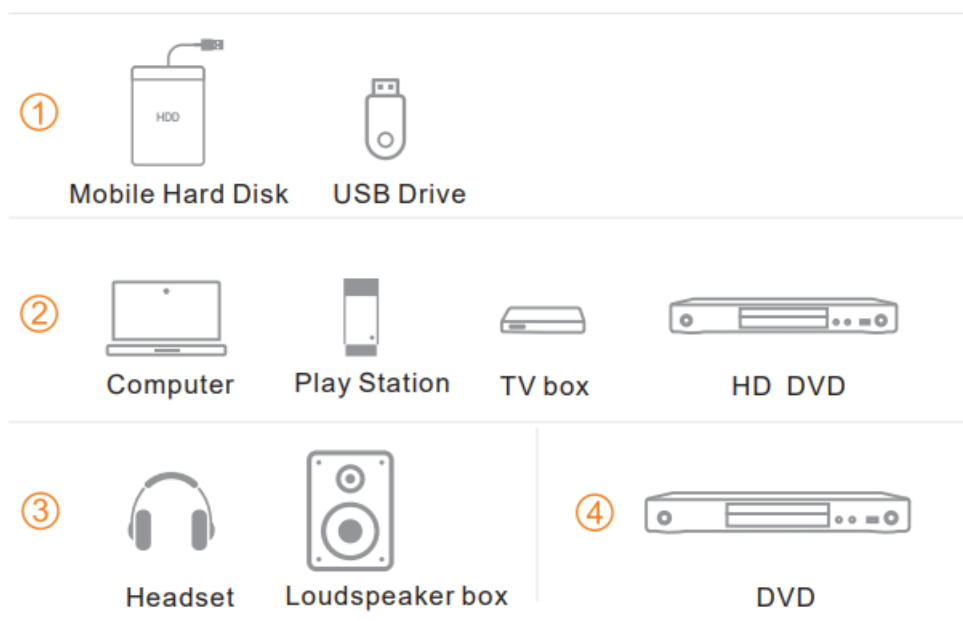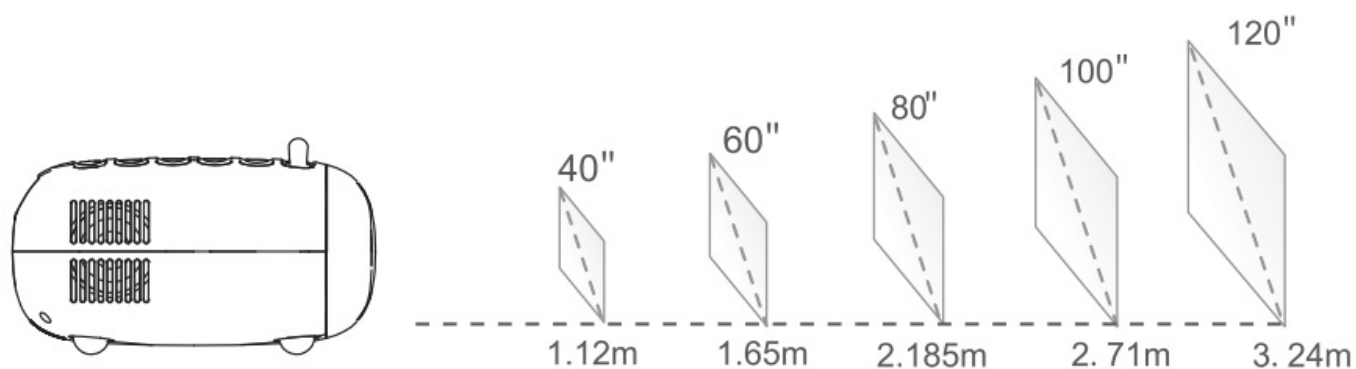- HD Connection

- AV Connection

PROJECTOR CONNECTION

① Mobile Hard Disk USB Drive

② Computer Play Station TV box HD DVD

③ Headset Loudspeaker box

④ DVD

PROJECTION DISTANCE&SIZE

40"	60"	80"	100"	120"
1.12m	1.65m	2.185m	2.71m	3.24m

SPECIFICATION

Display Technology	Light Source	Native Resolution	Resolution Supported
LCD	LED	12ao•720	576i 576P 720i 720P 1080i 1080P
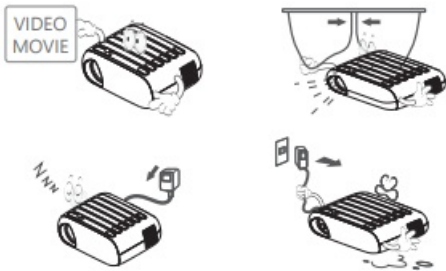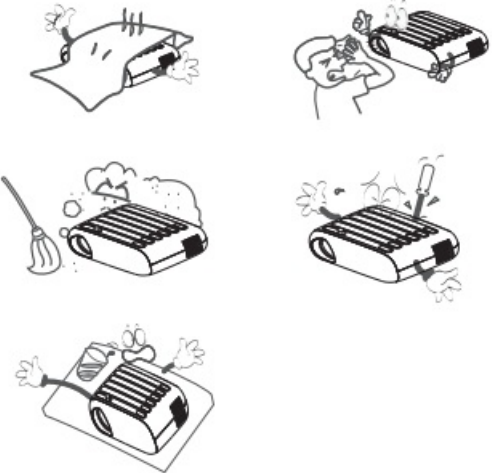
Projection Distance	Projection Size	Focus	Aspect Ratio
1.1m-5.0m	32 176	Manual	4:3/16:9/auto

Speaker	Total power	Unit Dimension	Installation Type
3W"4ohm	:.i;:;	1se-120'62mm	FronURear/Ceiling

Power Supply	Unit Net Weight	Video Format Supported	Photo Format Supported
DC 19V-3A	0.48Kg	AVIIMP4/MKV/FLV/MOV/ RMVB/3GPIMPEG1/ MPE G2/H.264/XVID	BMP/JPG/JPEG/PGN/GIF

Audio Format Supported	Ports		
MP2/MP3/PCM/FLAC/ W MAJAAC	HD IN'1 uss·1, AV IW1 Audio0ut"1		

NOTICE

VIDEO MOVIE	Recommended
	NOT Recommended

TROUBLESHOOTING GUIDE

1. BlurryImage
   - Adjust focus ring
   - Projector and screen/wall must be in effective distance.
2. .Remote Unresponsive
   - Make sure remote points at IR receiver directly.
   - Do not cover IR receiver.
   - Replace the battery.
3. Mobile Connection
   - **iOS**: Genuine lightning to HD cable.
   - **Android:** Micro USB to HD adapter/Type C to HD cable.
4. Upside DownImages

   Enter "Menu" on projector or remote to flip the projection image.

Documents / Resources

WZATCO Pixel Projector [pdf] User Manual
Pixel Projector, Pixel, Projector